
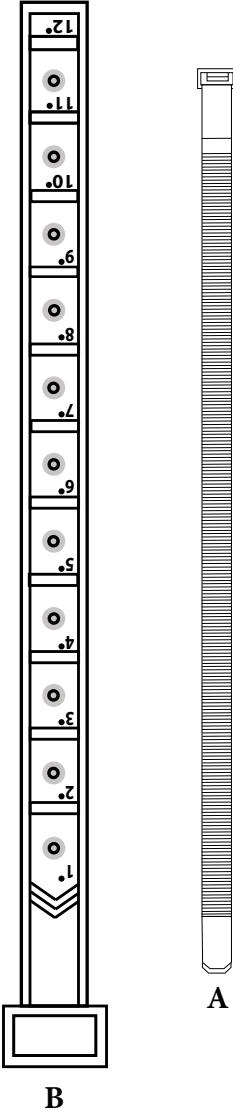


Quick Zip Pipe Hanger For 4 Inch Plumbing

1. Locate supply or drain-waste-vent (DWV) pipe that is to be installed.
2. Determine the center line of the plumbing. Then adjust for the proper fall as called out for the local building codes.
3. Install item "B" on a floor joist, a roof rafter, or other solid structure that is sufficient to support the load. There are multiple holes in item "B" that can be used to install the included nail.
4. After completing step 3, item "A" will need to be installed through the lower section of item "B".
5. Install the DWV/supply plumbing in part "A" prior to closing part "A".
6. Install the strap end of part "A" into the buckle end of part "A". Tighten the strap portion as hand tight as possible.

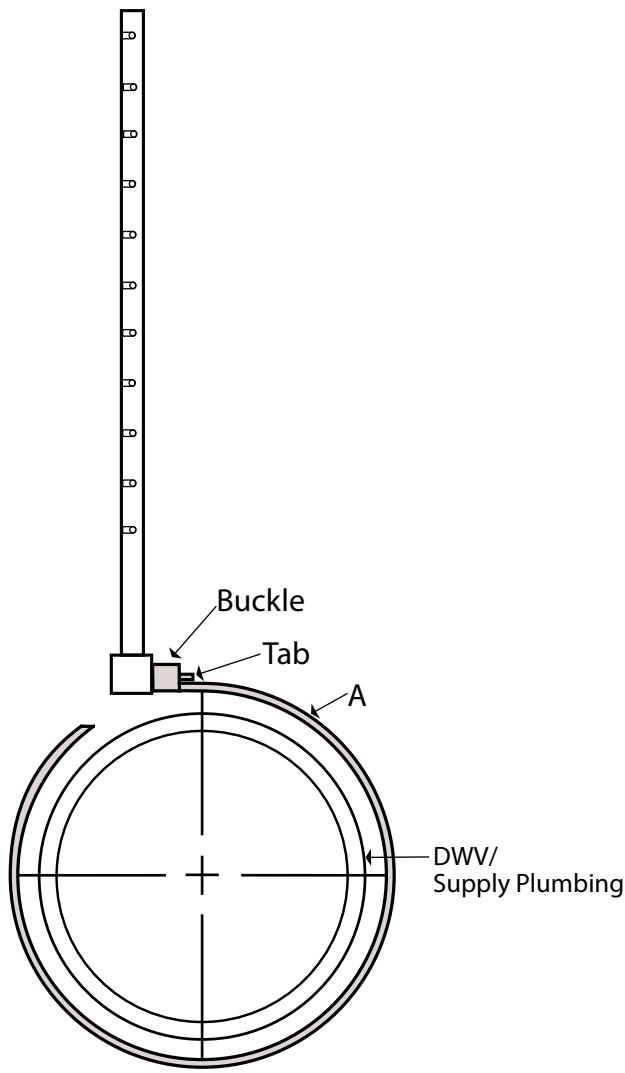

- Straps can support 1" CTS to 6" IPS pipes
- Working temperature: 0°~140°F (-17.8°C~60°C)

Safe Working Loads

Fahrenheit	Celcius	Load Capacity
32°F	0°C	50 lbs
72°F	22.2°C	50 lbs
140°F	60°C	25 lbs