

# Towel Bar / Tissue Holder Installation Instructions


## Model No. 15-01, 15-02, 15-03, 15-28

Recommended Installation by a Professional Contractor

1. Using the table below, measure the appropriate distance between post centers. See Fig. 1.

Note: Hole locations should be level.


- 18" Single Towel Bar - 18 1/8"
- 24" Single Towel Bar - 24 1/8"
- 30" Single Towel Bar - 30 1/8"
- Tissue Holder (2 Post) - 6 1/4"

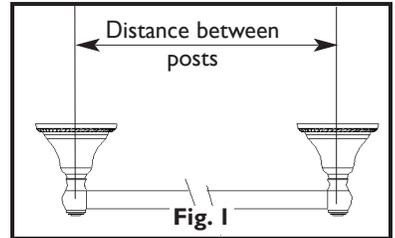

2. Drill hole(s) in wall at points marked using the appropriate drill size:


- Wood Screw (#6 x 2") - use: 3/32" Drill
- Toggle Screw (6-32 x 3") - use: 3/8" Drill

3. Dis-assemble END POST (6) from POST (3). See Fig. 4. Remove ESCUTCHEON (5) from POST (3). See Fig. 3. Loosen SETSCREW (4) in FLANGE (1) and remove POST (3). Fasten FLANGE (1) to wall using either WOOD/TOGGLE SCREW (2). See Fig. 2.

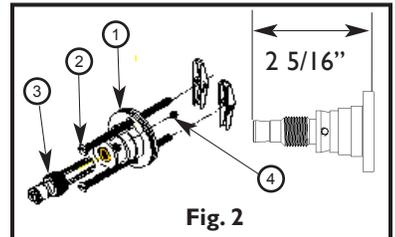



4. Engage POST (3) into FLANGE (1). Position POST (3) height to 2 5/16" from mounting surface. Secure POST (3) into place by tightening SETSCREW (4). See Fig. 2.

5. Thread ESCUTCHEON (5) onto POST (3). See Fig. 3.

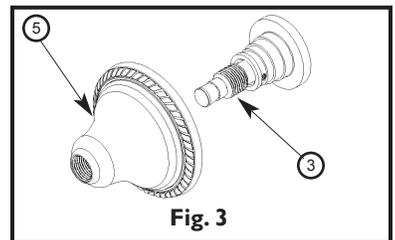

6a. **Towel Bars (Single):** Assemble TOWEL BAR (7) between END POSTS (6). Place END POST (6) onto POST (3) and secure into place with SETSCREW (4). See Fig. 4.

6b. **Tissue Holder (2):** Place END POSTS (6) onto POSTS (3) and secure into place with SETSCREW (4). Place HOLDER (7) between END POSTS (6). See Fig. 5.

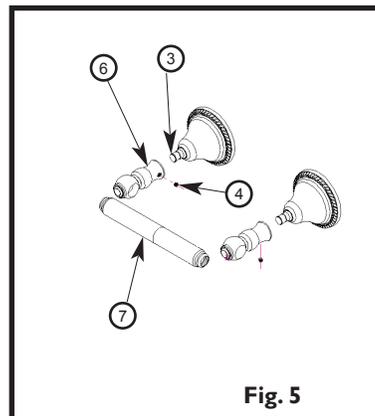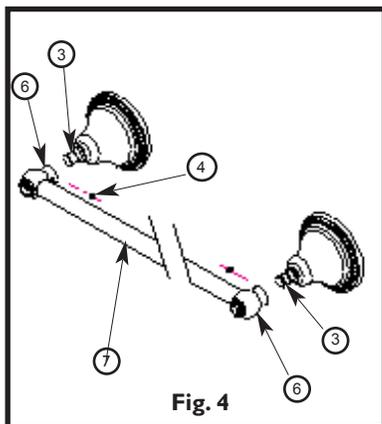

**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705  
(949) 417-5207