






"USC" THRU - THE - WALL AIR CONDITIONER SLEEVE INSTALLATION INSTRUCTIONS

• TTW Sleeve with Expanded Grille: USC


SLEEVE HARDWARE

ITEM	DESCRIPTION	Q'TY
①	SLEEVE ASSEMBLY	1
②	WEATHER PANEL (BACK, FRONT)	2
③	EXPANDED ALUMINIUM REAR GRILLE	1
④	SUPPORTER	8
⑤	WASHER SCREW	14

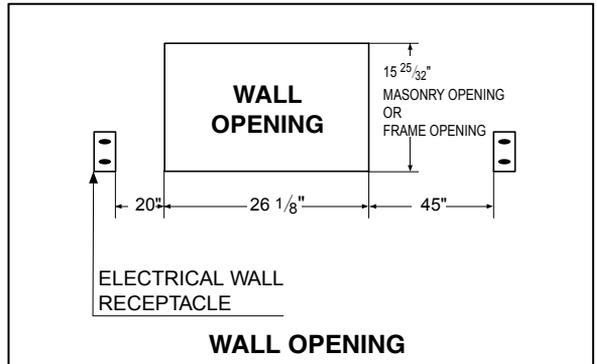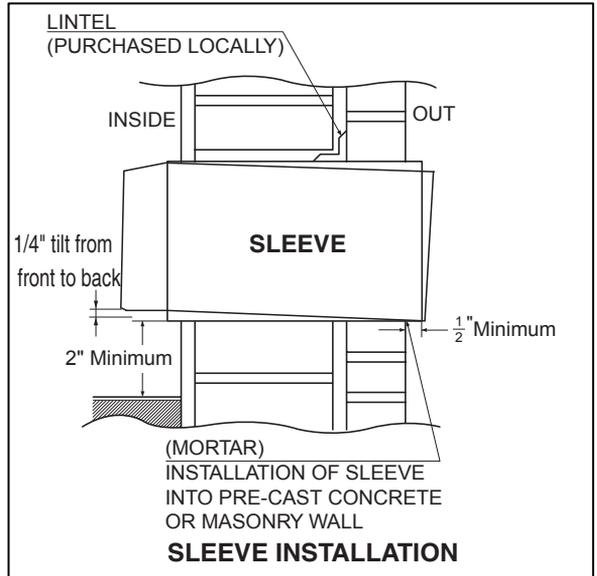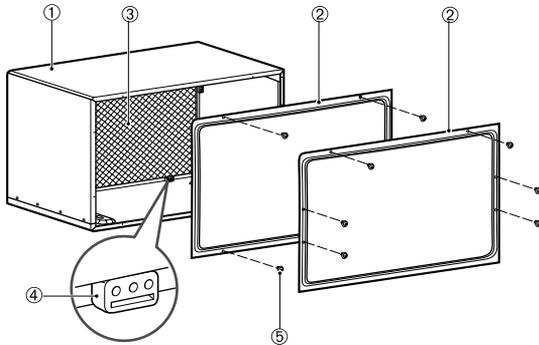

NOTE

- Wall sleeve should be installed with a 1/4" tilt from the front to back for proper drainage.
- Receptacle should be installed within 20" of left side or 45" of right side of wall opening.
- After sleeve has been installed, caulk entire perimeter around exterior wall opening and sleeve. Use a good grade of caulking compound to seal all cracks against air and water infiltration.
- Do not remove front or back cover until all masonry is set and window frame is in place. This will prevent buckling of the upper and lower surfaces of the sleeve during subsequent construction operations.
- Install the wall sleeve so that it is positioned with a slight tilt towards the outside to facilitate condensate drainage. It should be level side-to-side. **DO NOT allow any pitch toward the inside.**

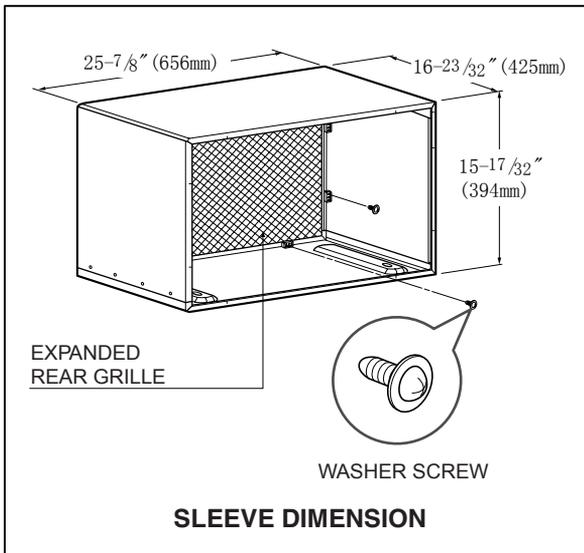

- If any portion of the sleeve's exterior is exposed to the interior room side it is recommended to field insulate all exposed areas prior to installing chassis to avoid condensation from forming on exposed areas.