

INSTALLATION


G U I D E

STILLNESS™
NON-DIVERTER
SPOUT

K-956

THE BOLD LOOK
OF **KOHLER®**

RECOMMENDED TOOLS AND MATERIALS

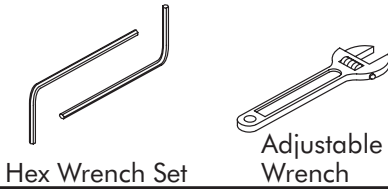

Hex Wrench Set

Adjustable Wrench

BEFORE YOU BEGIN

- Shut off the main water supply.
- Install valves and supply stem per instructions supplied.
- Finish deck once valves have been installed.
- Observe all local plumbing codes.
- Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

1. SPOUT INSTALLATION

Remove plaster guard from supply stem.

Remove pipe plug from supply stem. Wrap a towel around the pipe plug to prevent spray.




WARNING: Risk of personal injury. Lines may be pressurized. Do not lean over pipe plug when turning or removing the plug.

Back setscrews off at base of spout far enough so they will not interfere with the supply tube.

Install spout over supply tube, set orientation, and tighten setscrews.

Slide escutcheon down over base until flush with finished deck.

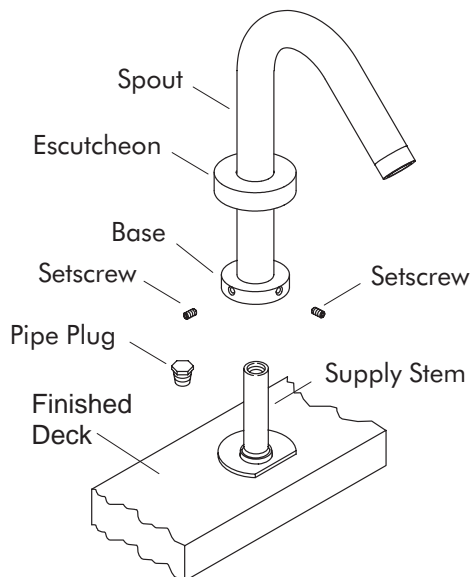

2. FINISH INSTALLATION


Make sure faucet handles are turned off.

Turn on main water supply and check for leaks.

Remove aerator from the spout. Turn on both hot and cold valves and run water through the spout for one minute to remove any debris. Check for leaks.

Turn off hot and cold valves.

Reinstall the aerator.

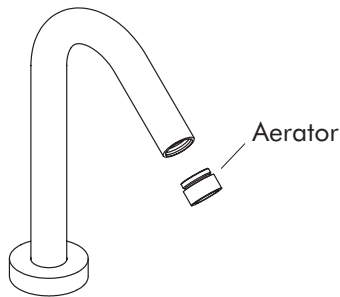

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

In the U.S.A., call 1-800-4-KOHLER
In Mexico, call 001-877-680-1310
In Canada, call 1-800-964-5590

THE BOLD LOOK
OF **KOHLER®**
www.kohlerco.com