

INSTALLATION INSTRUCTIONS



CADET® BIDET

Models: 5023.100 (3 Hole)
5023.111 (Single Hole)

Thank you for selecting American Standard – the benchmark of fine quality for over 100 years. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

CAUTION: PRODUCT IS FRAGILE. TWO PEOPLE ARE RECOMMENDED FOR HANDLING TO AVOID BREAKAGE AND POSSIBLE INJURY!

NOTE: Pictures may not exactly define contour of china and components.

NOTE: For proper operation these products require a minimum of 30 psi line pressure.


RECOMMENDED TOOLS AND MATERIALS

| | | | | |
|-------------|----------------------|-------------------|------------------|---------|
| Putty Knife | Regular Screwdriver | Adjustable Wrench | Tape Measure | Sealant |
| Hacksaw | Flexible Supply Tube | Closet Bolts | Carpenters Level | |

ROUGHING-IN

If a side by side toilet and bidet installation is desired, a comfortable separation of 24" (610mm) is required between the units.

CADET® BIDET Model 5023.100

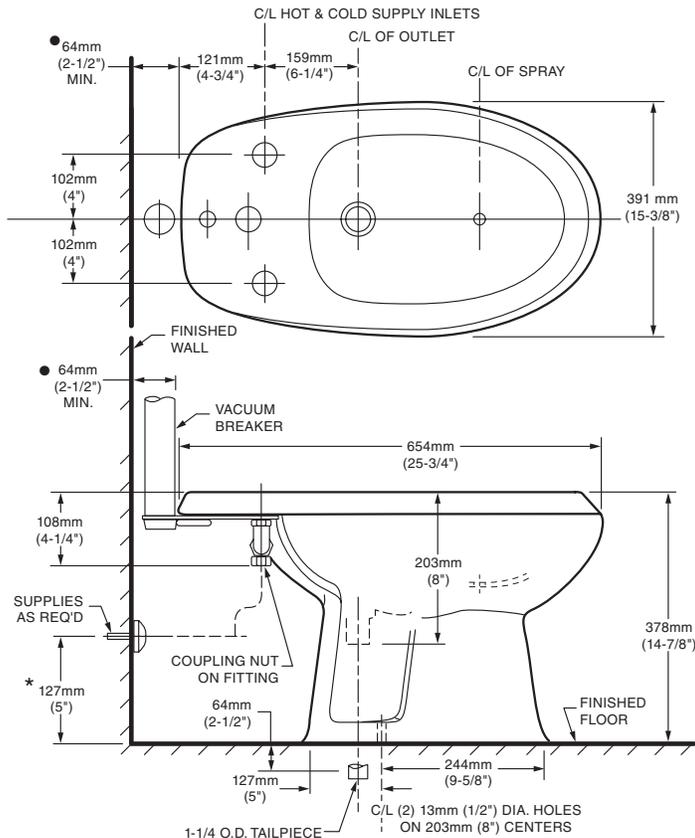

1 The bidet is not furnished with a trap. Provisions must be made for the installation of a trap in the floor.

Water supplies must be a minimum of 6" (152mm) to the left and right of bidet center line. Be sure to slip chrome trim plate on piping before attaching supply stop valves.

2 Carefully set the bidet, making sure that the drain tube is inserted into the waste pipe. This connection should be sealed either by compression or sweat connection after the bidet has been centered and is level.

3 Place wood screws through plastic snap-on bases then through screw holes at base of bidet. Alternately tighten 1/2 turn with screwdriver. When bidet does not rock it is tight. **DO NOT OVER-TIGHTEN** wood screws as you might crack the foot of the bidet. Snap on bolt caps.

4 Connect hot/cold supplies to hot/cold valve bodies on the bidet. Turn on the bidet. Turn on water and check for leaks. Tighten compression nuts if necessary.

5 Waterproof caulking is recommended around the base to seal the bidet to the floor.

SAVE FOR FUTURE USE

In the United States:
American Standard Brands
P.O. Box 6820
Piscataway, New Jersey 08855
Attention: Director of Customer Care
For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902
www.americanstandard.com

In Canada:
AS Canada, ULC
5900 Avebury Rd.
Mississauga, Ontario
Canada L5R 3M3
Toll Free: (800) 387-0369
www.americanstandard.ca

In Mexico:
American Standard B&K Mexico
S. de R.L. de C.V.
Via Morelos #330
Col. Santa Clara
Ecatepec 55540 Edo. Mexico
Toll Free: 01-800-839-1200
www.americanstandard.com.mx



Product names listed herein are trademarks of AS America, Inc.
© AS America, Inc. 2014

7302126-100

7302126-100