




INSTALLATION STEPS

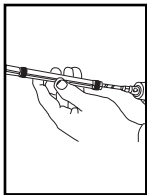

1. With sleeve off and drill bit exposed, drill pilot hole 1/4" deeper than recommended anchor embedment. Snap proper anchor socket onto end of sleeve. Slide drive sleeve over drill bit.

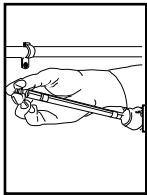

2. Insert head of Tapcon anchor into hex or phillips socket.

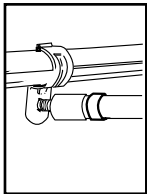

3. Put point of anchor into pre-drilled hole and drive until anchor is fully seated.