



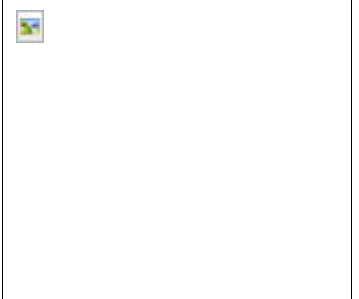


HubSettTM Installation Options and Instructions for Plastic Pipe

	<p style="text-align: center;"><u>Typical Installation #1</u></p> <p>3 in. Sewer line at building 3 in. Side sewer Note: No Fernco^(R) connector required.</p>
	<p style="text-align: center;"><u>Typical Installation # 2</u></p> <p>When municipality requires 2 cleanouts - 4 in. to 4 in. Note: 1) No Fernco^(R) connector required. 2) Test on the building and side sewer can be completed separately.</p>
	<p style="text-align: center;"><u>Typical Installation # 3</u></p> <p>When municipality requires 2 cleanouts - 3 in. to SDR 35 Note: 1) No Fernco^(R) connector required. 2) Test on the building and side sewer can be completed separately.</p>
	<p style="text-align: center;"><u>Typical Installation # 4</u></p> <p>This method is utilized when the side sewer contractor desires to hook-up after the building is under test. 1 1/2 in. riser pipe is utilized to fill side sewer for test.</p>
	<p style="text-align: center;"><u>Typical Installation # 5</u></p> <p>This method allows for testing of the side sewer and the building at the same time.</p>

[Back](#)