




# Access Panel – QKPANEL Installation Instructions

Dimensional Data: Inches and [mm] are subject to manufacturing tolerances and change without notice.

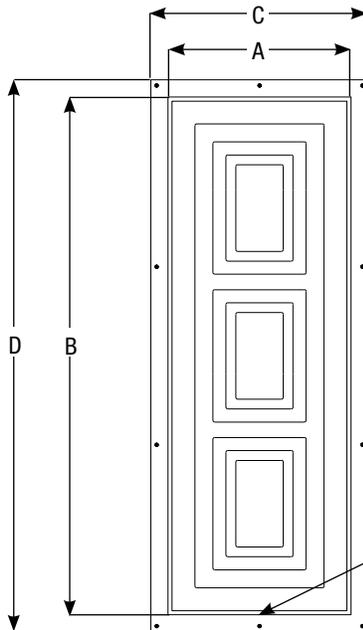

**NOTES:**

1. Before installing, remove panel and locate small slot in frame.
2. Install frame with small slot down only.
3. Panel can be attached to wall with adhesives (by others) or screws provided.

## Section A – Screw Fastening

- Step 1: Use Model Number and Chart above to determine proper cut out dimensions.
- Step 2: At desired location, mark “cut out dimensions” from table on drywall.
- Step 3: Cut and remove drywall.
- Step 4: Place the QKPANEL frame, with the small slot at the bottom, in the cut out opening.
- Step 5: Lift the frame up 1/4” and mark the holes to be drilled or see Section B if an adhesive is used.
- Step 6: Remove the frame and drill the marked holes with a 3/16” drill bit.
- Step 7: Push plastic anchors into drilled holes.
- Step 8: Place frame and panel back into opening with small slot down.
- Step 9: Attach frame to the wall with the screws provided.  
***Do not overtighten screws.***

## Section B – Adhesive Fastening Only

- Step 1: Follow Step 1 through 4 at left.
- Step 2: Lift frame up 1/4” and make a reference mark.
- Step 3: Remove frame and panel from the opening.
- Step 4: Apply adhesive (by others) to frame.
- Step 5: Place frame and panel back into opening with small slot down.
- Step 6: Lift frame up to reference mark and push frame into place.

Part No.	Door Dimensions		Frame Outside Dimensions		Cut Out Dimensions	
	A	B	C	D	E	F
QKPANEL29	14” [356]	29” [737]	16-3/4” [426]	33-1/2” [851]	14-1/2” [369]	31-1/2” [801]
QKPANEL38	14” [356]	38” [966]	16-3/4” [426]	42-1/2” [1080]	14-1/2” [369]	40-1/2” [1029]
QKPANEL54	14” [356]	50” [1270]	16-3/4” [426]	53-1/2” [1359]	14-1/2” [369]	51-1/2” [1309]

Form No. ZPFN113	Date: 10/15/13
C.N. No. 87594	Rev. B