



## 272804A

### RANGE STOP AND COVER LOCKING ASSEMBLY FOR RESIDEO ELECTRIC HEATING THERMOSTATS

#### INSTALLATION INSTRUCTIONS

#### FOR MODELS

T498 (manufactured after November 1993),  
T410, T4398, T4098

#### SECURITY FEATURES

##### Locking Cover, Fig. 1

1. Remove cover by swinging up from the bottom.
2. Insert Tinnerman Speed Nut<sup>®</sup> supplied into slot at upper and lower rear of thermostat base.
3. Drive Allen screws into Speed Nuts until head is flush with lower edge of Thermostat base.
4. Re-install cover and lock by backing out Allen screws until screw body protrudes through cover hole.
5. To unlock cover, drive Allen screws into thermostat base until screws body clears cover.

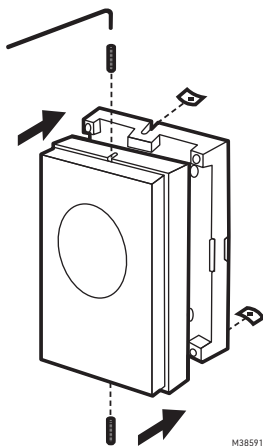


Fig. 1.

##### Range Stops, Fig. 2

1. Set thermostat to desired set point. Remove cover.
2. Install plastic dowels supplied into minimum and/or maximum range stop holes on inside back of cover.
3. Re-install cover. Check operation of range stops.

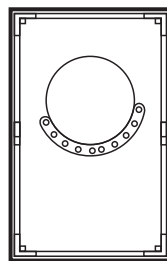


Fig. 2.



www.resideo.com

Resideo Technologies, Inc.  
1985 Douglas Drive North, Golden Valley, MN 55422  
1-800-468-1502  
95C-10708-02 M.S. Rev. 03-21 | Printed in United States



95C-10708-02