




Right Drain Galvanized Washing Machine Outlet Boxes

For Top Supply Models Set
Tubing 50 1/4" Above Finished Floor.

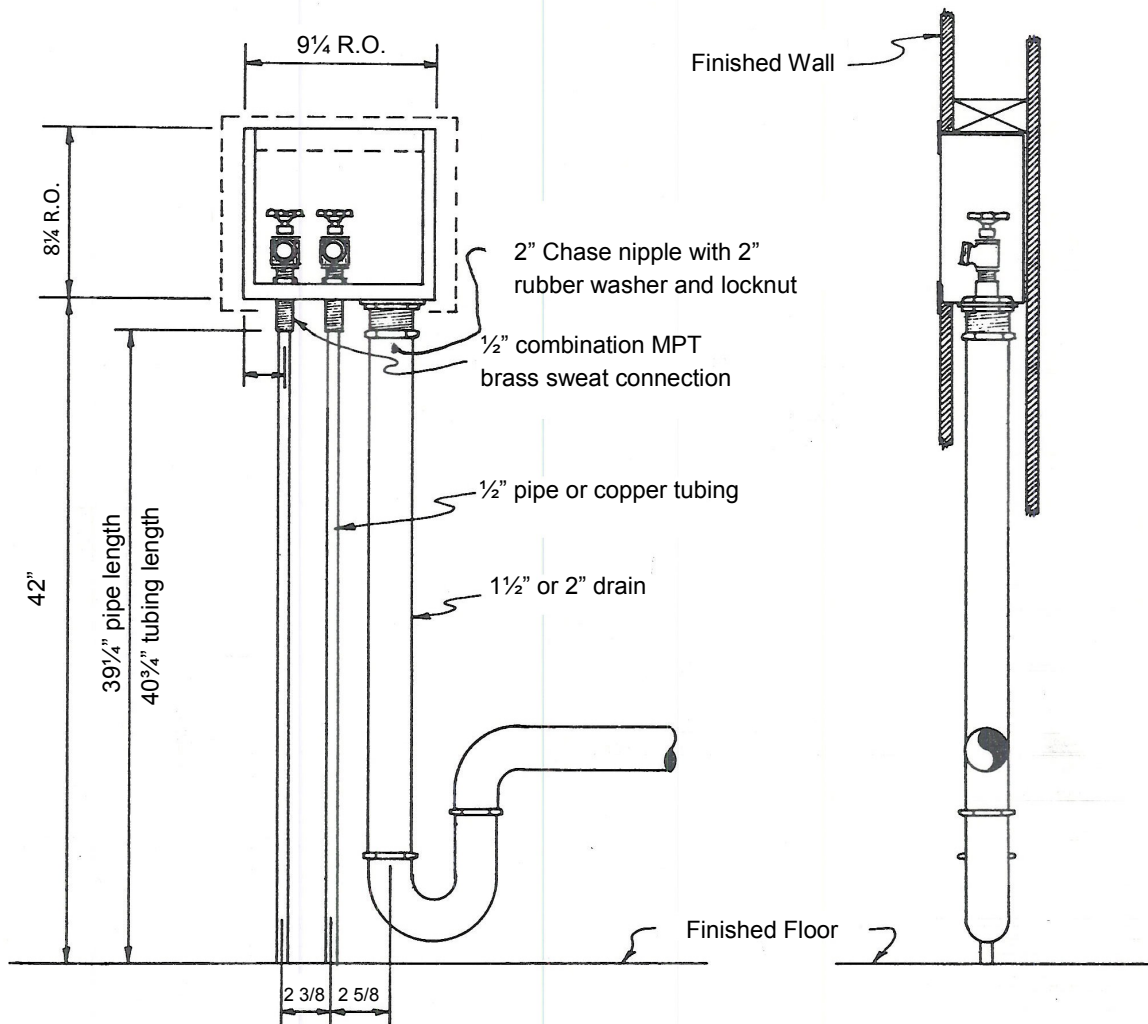

PLUMBING ROUGHING-IN MEASUREMENTS FOR SPACE SAVER WASHING MACHINE SUPPLY AND DRAIN MODEL FB 150 & FB 200

Model FB-150 & FB-200 Installation Instructions

1. Remove front plate from fixture.
2. Fasten fixture to stud or header with screws in holes provided.
3. Install half inch male end of connectors through half inch holes in bottom of fixture and secure with rubber washers, metal washer and half inch locknuts.
4. Install half inch male faucets in female end of connector inside of fixture using pipe joint compound.
5. For copper installation sweat copper tube to bottom of connector.
6. For galvanized pipe installation use half inch coupling or unions.
7. To connect drain line use flanged locknut with rubber washer to attach nipple to box. Connect drain pipe to threaded nipple with appropriate adapter.
8. After wall is finished, replace front plate with screws provided with fixture.

IPS
CORPORATION

www.ipscorp.com watertite@ipscorp.com

500 Distribution Parkway, Collierville, TN 38017, USA ■ TEL: 901-853-5001 ■ WATS: 800-888-8312 ■ FAX: 901-853-5008

© 2011 IPS Corporation