


**STEP 1:**

Insert the appropriate nut driver into a  $\frac{3}{8}$ " or  $\frac{1}{2}$ " portable drill.

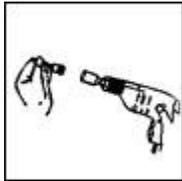


**STEP 2:**

Insert the **SAMMYS** into the #14 (black) nut driver. Drill should be in a vertical position.



**STEP 3:**

Push the face of the nut driver tight to the member. When the nut driver spins freely on the **SAMMYS**, stop drill and remove.

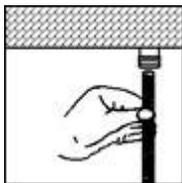

**STEP 4:**

The **SAMMYS** is now ready to receive  $\frac{1}{4}$ ",  $\frac{3}{8}$ ",  $\frac{1}{2}$ " or metric all thread rod, bolt stock. (The  $\frac{1}{2}$ " requires the #14SW red nut driver)

**Important Note:** Warranty requires the use of the appropriate Sammy Nut Driver for installations.