

*Complement  
your purchase  
with these  
fine accessories  
also from  
GINGER®:*

*Towel Bars  
Towel Rings  
Toilet Tissue Holders  
Hooks  
Soap Dishes  
Tumbler Holders  
Toiletry Shelves  
Grab Bars  
Mirrors  
Lights  
Bud Vases  
Hotel Shelves  
Shower Curtain Rods  
Soap & Bottle Baskets  
Cabinet Hardware*

460-N Greenway Industrial Drive  
Fort Mill, SC 29708

[www.gingerco.com](http://www.gingerco.com)

# Circe

INSTALLATION  
INSTRUCTIONS


for  
Tilting & Stationary  
Mirror

#2741

GINGER®

Model #2741

CIRCE TILTING MIRROR

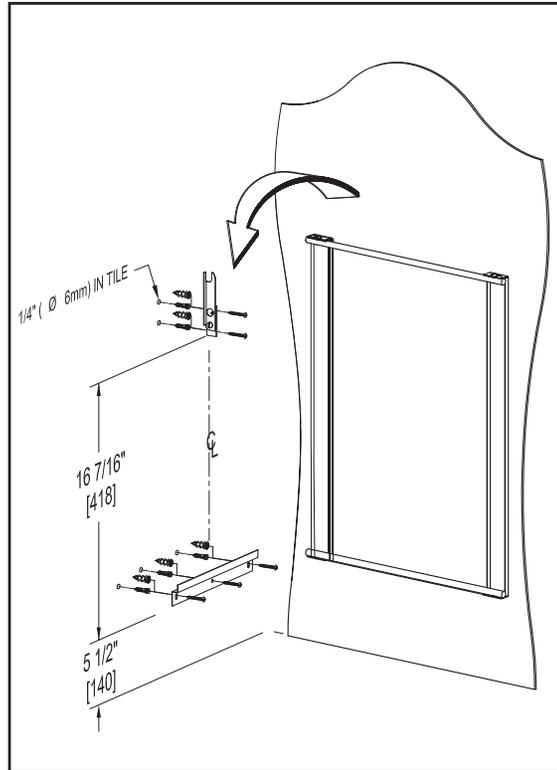

## TILTING MIRROR INSTALLATION:

1. Determine location of mirror on wall.
2. Position the mounting bracket as illustrated. The bracket should be level and in the center of the desired mirror location. Mark the location of the mounting bracket screw holes on the wall.

3. Position the tilting mechanism as illustrated. Mark the location of the mounting screw holes on the wall.

### 4a. For drywall installation:


Using a No. 2 Phillips screwdriver, push and turn zinc anchors in a clock-wise direction until flush with wall surface. If wood cross bracing or a stud is present, pre-drill a 1/4" (6mm) diameter hole and install small plastic anchor in place of the zinc anchor.

### 4b. For tile or solid wall installation:

Drill 1/4" (6mm) on marks made in Step 1. Insert plastic wall anchors and tap flush with wall.

5. Position the mounting bracket and the tilting mechanism over the anchors and install screws.
6. Swing the tilting mechanism to the vertical position (flush against the wall.)
7. Slide mirror down wall until cross rods are engaged in tilting mechanism and mounting bracket. The bracket, not the tilting mechanism, should support weight of mirror. Adjust mounting bracket or tilting mechanism position if necessary.

CIRCE STATIONARY MIRROR

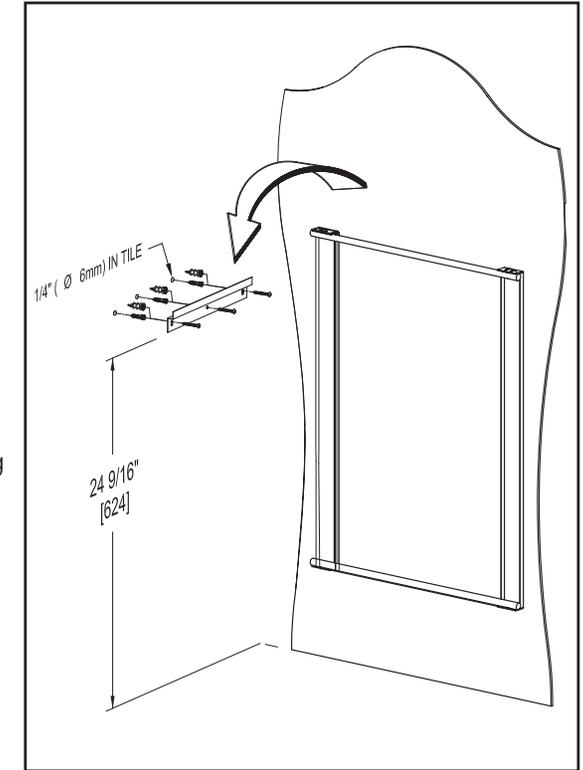

## STATIONARY MIRROR INSTALLATION:

1. Determine location of mirror on wall.
2. Position the mounting bracket as illustrated. The bracket should be level and in the center of the desired mirror location. Mark the location of the mounting bracket screw holes on the wall.

### 3a. For drywall installation:

Using a No. 2 Phillips screwdriver, push and turn zinc anchors in a clock-wise direction until flush with wall surface. If wood cross bracing or a stud is present, pre-drill a 1/4" (6mm) diameter hole and install small plastic anchor in place of the zinc anchor.

### 3b. For tile or solid wall installation:

Drill 1/4" (6mm) on marks made in Step 1. Insert plastic wall anchors and tap flush with wall.

4. Position mounting bracket over the anchors and install screws.
5. Slide mirror down wall until crossrod is supported by the mounting bracket.

## Tools needed:

Pencil, Tape measure, Phillips Screwdriver, Drill and Level.