





ACRYLIC APRONS  
MIRSK60 AND MIRSK72

Installation Instructions  
Instructions d'installation  
Instrucciones de instalación

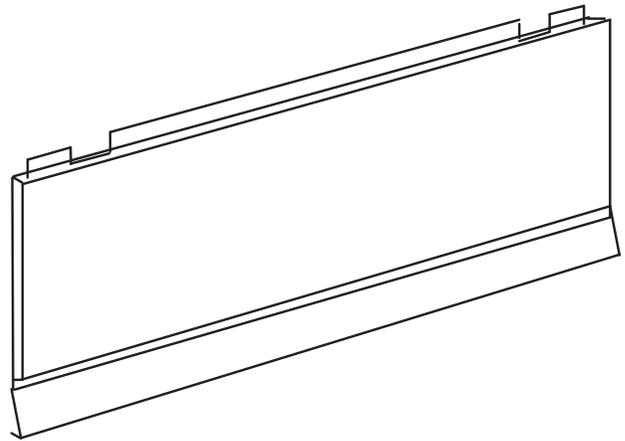


PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY before proceeding with the apron installation.  
NOTE: Not compatible with all Mirabelle tubs. Check specification dimensions for compatibility

INSTALLATION (FIG.1)

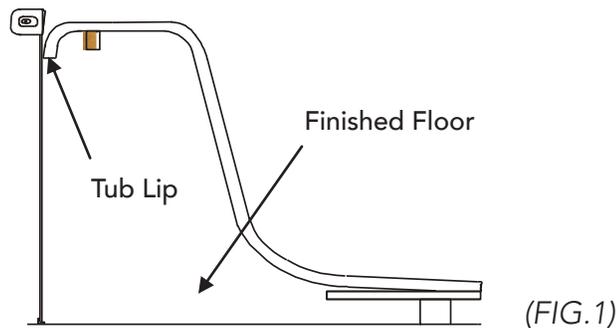


1. With soaking tub or whirlpool in place, measure from the bottom of the tub lip to the finished floor surface. Subtract 1/8" from this dimension for clearance. This adjusted dimension will be used to determine the proper apron height for your installation.

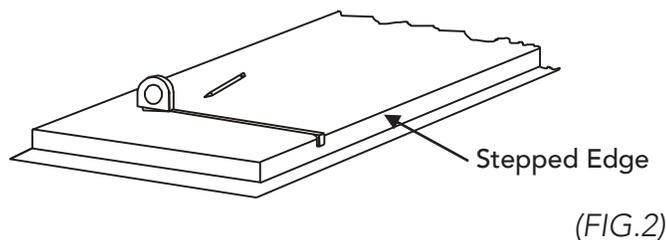


2. Lay apron face-up on flat surface. Hook tape measure on stepped edge of apron near top and mark the adjusted dimension (identified in step 1) near the bottom edge of apron. Repeat this several times across length of the apron. Draw a straight line at the marks on apron. This will be your cut line to custom fit the apron to your installation.


3. Apron can now be trimmed to the proper height by using a circular saw, jig saw or table saw with a medium toothed blade. To prevent scratching of the acrylic surface, tape over area to be cut. Cut at a slow cutting speed and from acrylic side to prevent chipping the acrylic.

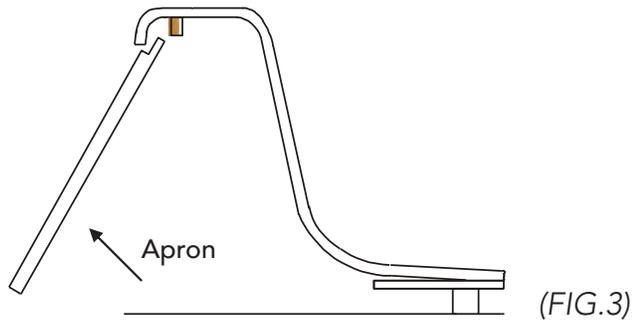

4. Insert the lip of trimmed apron up under tub edge, between the wooden blocks and the front tub lip. Check to see that you have cut the apron to the proper height. Remove apron.

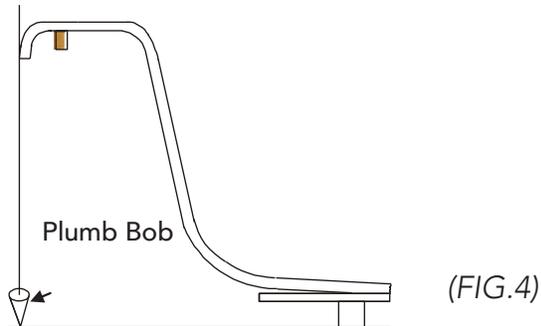


5. Using a plumb bob or level, project front edge of tub lip down to floor surface and make a mark on floor. Repeat several times across front of tub. Draw a straight line at these marks.

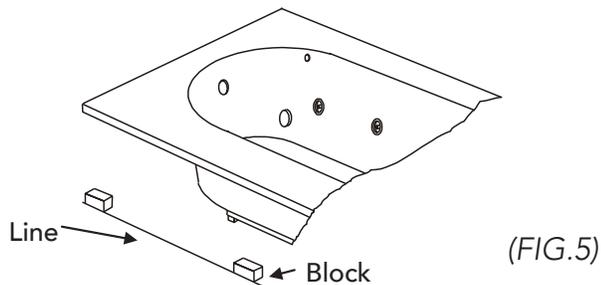

6. Attach at least 3 wooden blocks (not provided), to be used as back-stops, (1"x1" or 2"x2" and at least 6" in length), along the inside of the line drawn in Step 5. Secure blocks with screws or nails if your floor is wood. If your floor is concrete or tiled you will need to use an adhesive to attach the blocks.

7. For final apron installation and to allow for removal if necessary in the future, adhere apron to wooden back support blocks with silicone or other removable adhesive. Place a straight board against front bottom of apron to hold it firmly in place while the adhesive cures.

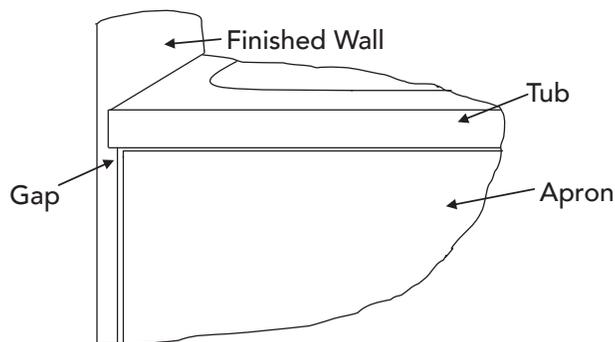

Note: Final installation will leave clearance between both ends of apron and finished wall to allow for future removal.