




"T" Series White Powder Coated Cold Rolled Steel Washing Machine Outlet Boxes

For top supply set pipes 50 1/8" above floor

For side supply set pipes 48" above floor

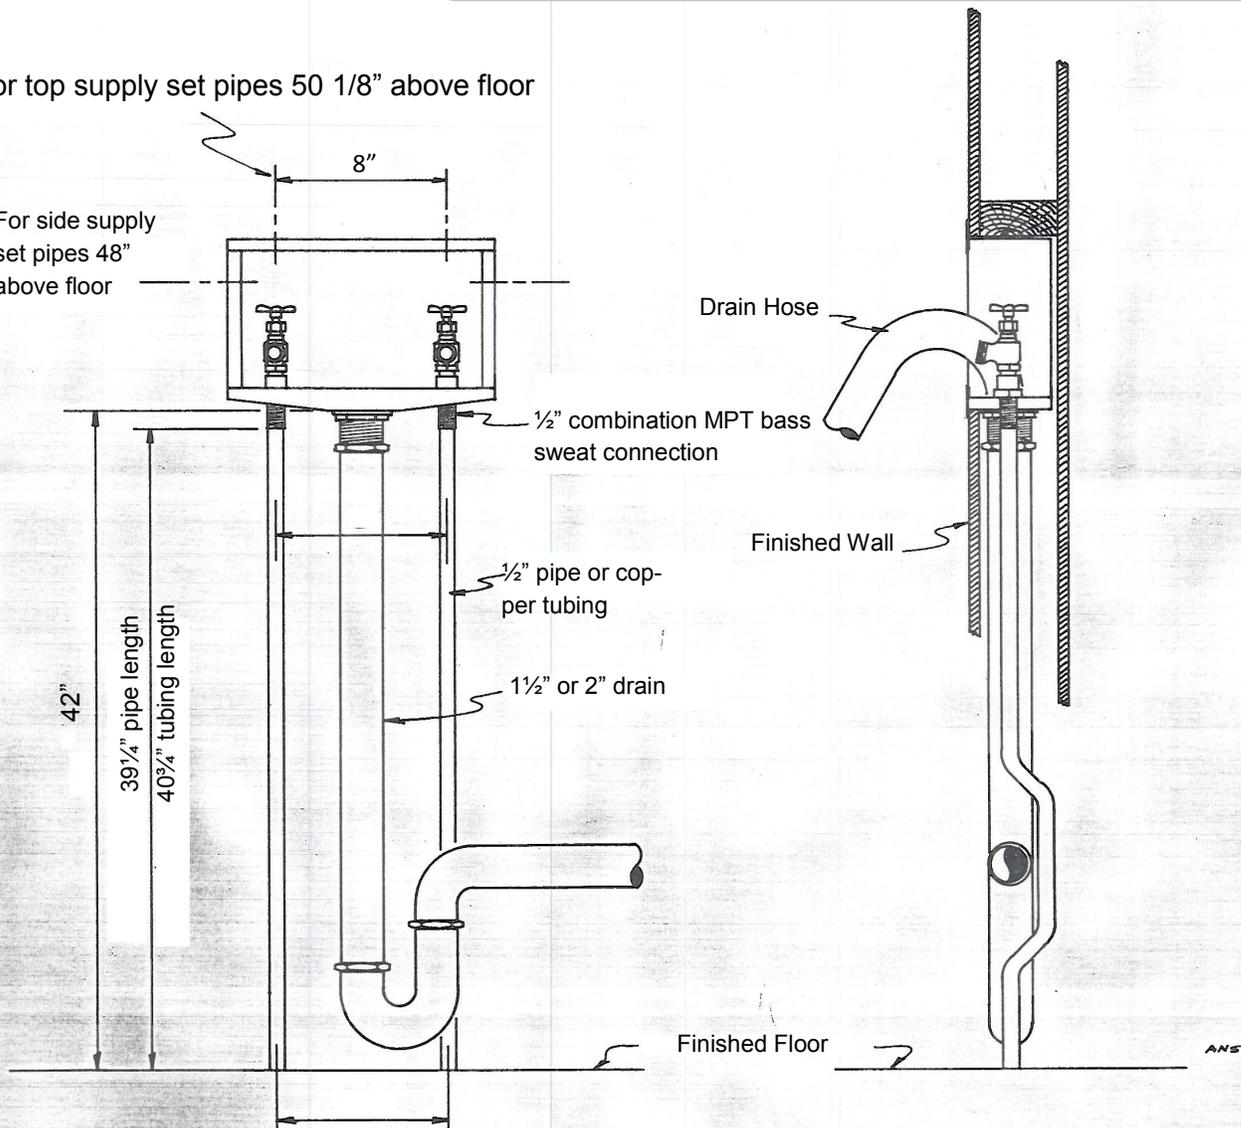

Plumbing rough-in measurements for space saver
Washing machine supply and drain—Model T-150 & T-200

INSTALLATION INSTRUCTIONS

**NOTE: For T-150 or 200-TP-PVC or ABS models:
Pipe will glue into coupling on box instead of nipple shown. Measurements will remain the same.**

1. Remove front plate from fixture.
2. Fasten fixture to stud or header with screws in holes provided.
3. Install half inch male end of connectors through half inch holes in top of fixture and secure with rubber washers—crow foot and half inch lock nuts.
4. Install half inch male faucets in female end of connector inside of fixture using pipe joint compound.
5. For copper installation sweat copper tube to bottom of connector.
6. For galvanized pipe installation use half inch coupling or unions.
7. To connect drain line use flanged locknut with rubber washer with slip nut installed inside fixture.
8. Drill weep hole in slip nut so any water spills in box will run into drain.
9. After wall is finished, replace front plate with screws provided with fixture.



www.ipscorp.com watertite@ipscorp.com