
NOTES:

- 1. MODEL SP21FC EYE/FACE WASH HEAD IS DESIGNED FOR 2.5 GPM FLOW
- 2. ASSEMBLY INSTRUCTIONS:
- STEP 1. REMOVE OLD EYE/FACE WASH HEAD.
- STEP 2. MAKE SURE THREADS ARE CLEAN.
- STEP Ŋ SCREW ON NEW EYE/FACE WASH HEAD UNTIL HAND TIGHT. DO NOT USE PIPE SEALANT AS THIS COULD DAMAGE THE TEFLON TAPE CAN BE USED BUT NOT REQUIRED. THE EYE/FACE WASH HEAD.
- TURN ON VALVE AND CHECK FLOW PATTERN USING EYEWASH GAUGE SUCH AS HAWS MODEL 9015 PER ANSI Z358.1.

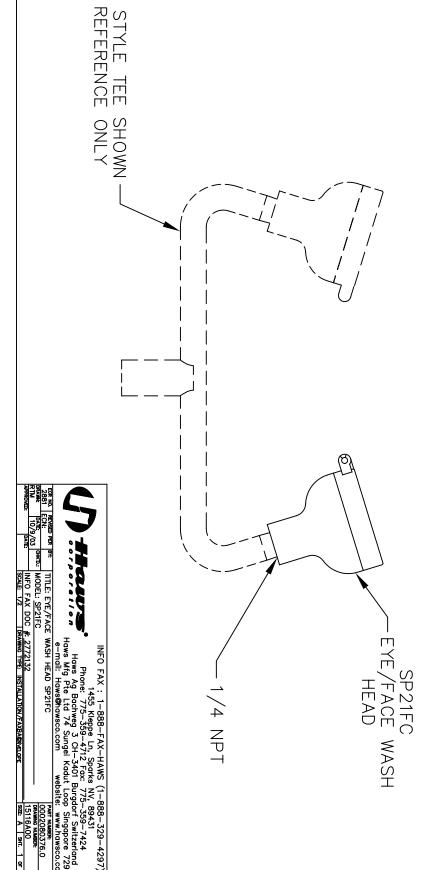

FOR

DWG. NO. 15116A00