

• 1-3/8" (34.9mm) • Snap-In • Stainless Steel

1. Apply Plumber's Putty to rim of cover and snap into hole in ledge of sink.

---

• 1,375 (34,9mm) • À Enclenchement • Acier Inoxydable

1. Appliquer du mastic de plombier sur le rebord du couvercle et enclenchez dans le trou du rebord de l'évier.


---

• 1-3/8" (34.9mm) • Insertable

• Acero Inoxidable

1. Aplique masilla para fontanero en el borde de la tapa e insertelo en el orificio de la superficie del fregadero.

SNAP-IN COVER  
CACHE ENCLICHEMENT  
TAPA INSERTABLE

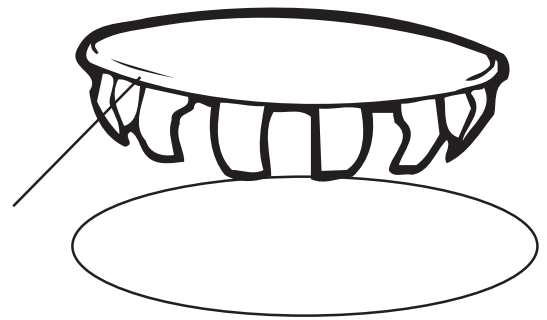

---

SINK LEDGE

EVIER

FREGADERO

---

Made in/Fabrique a/Hecho en: TAIWAN



Manufactured for/Fabrique pour/  
Fabricado para: Lincoln Products  
Industry, CA 91748 • © Copyright 2015