



IMPORTANT
Installation Instructions

IMPORTANTE
Instrucciones de Instalación


IMPORTANT
Instructions d'installation

© 2018 1B5990730A

Tools Needed

Herramientas requeridas



Outils requis




Hardware Kit Includes

El kit de instalación incluye

Le kit de matériel inclut

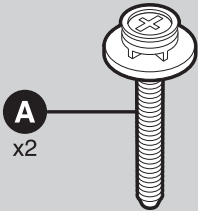

1

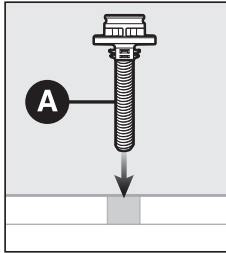


Insert (A).

Inserte (A).

Insérer (A).

2

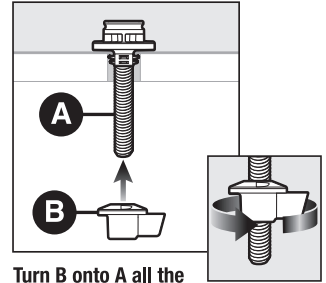


Turn B onto A all the way up.

Gire (B) en (A) todo hacia arriba.

Visser (B) sur (A) à fond.

3

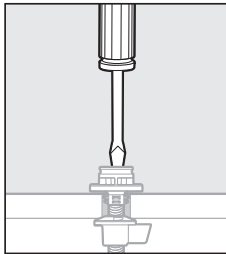


Tighten.

Ajuste.

Serrer.

4

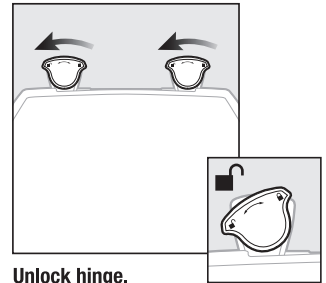


Unlock hinge.

Desbloquee.

Déverrouiller la charnière.

5

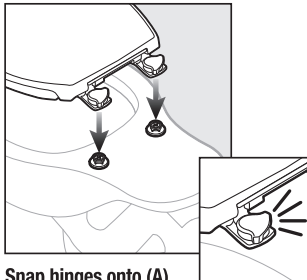


Snap hinges onto (A).

Coloque las bisagras sobre (A).

Enclencher les charnières sur (A).

6

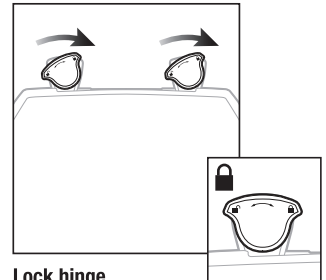

Lock hinge.

Bloquee.

Verrouiller la charnière.