

### • Fits Bathtub Overflow Plates • Flat


1. Unscrew face plate and pull face plate and lift rod assembly through hole in tub.
2. Reach in through access door (usually provided behind tub) and remove old washer.
3. Slip new washer over overflow pipe flush with tub wall.
4. Replace lift rod assembly and face plate; screw tight.

### • Convient Plaques de Trop-Plein de Baignoire • Plat

1. Dévissez le plaque frontale et retirez la plaque frontale et soulevez tringle à travers le trou dans la baignoire.
2. Atteindre à travers la porte d'accès (généralement prévu derrière baignoire) et enlever la rondelle ancienne.
3. Glisser une rondelle neuve sur affleurant tuyau de trop plein avec paroi de la cuve.
4. Remplacer lever ensemble tige et plaque frontale; vis à la main.

### • Para Placa del Rebosadero de la Bañera • Plana

1. Desenrosque la placa frontal y tirar de la misma junto con la varilla elevadora para sacar el mecanismo por el agujero de la bañera.
2. Retire la arandela existente desde atrás de la bañera (la puerta de acceso normalmente se encuentra detrás de la bañera).
3. Pase la arandela nueva por el caño de rebalse y dejarla contra la pared de la bañera.
4. Volver a introducir el mecanismo de varilla y la placa frontal; ajustar firmemente.

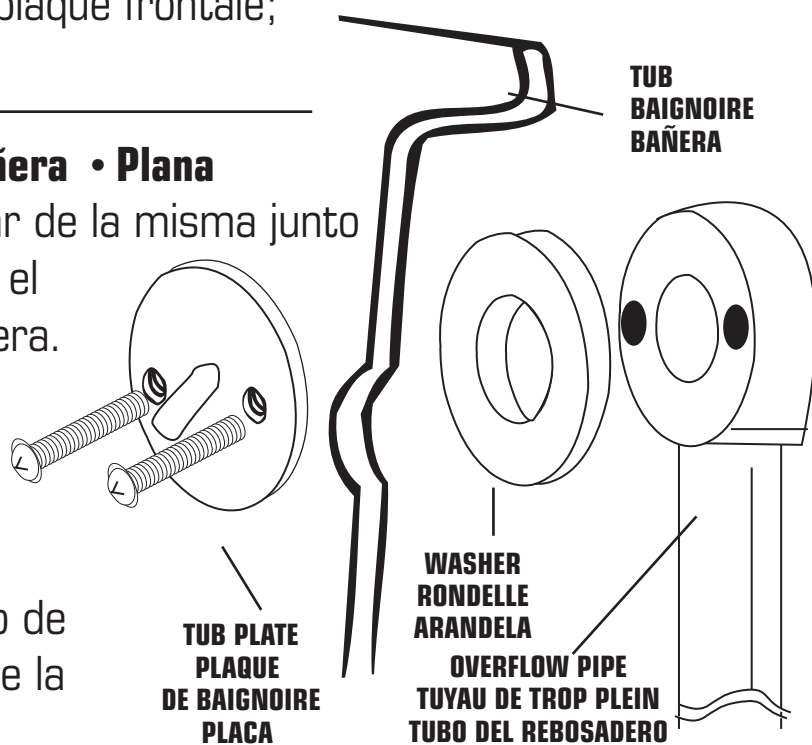

Made in/Fabrique a/Hecho en: CHINA



Manufactured for/Fabrique pour/  
Fabricado para: Lincoln Products  
Industry, CA 91748 • © Copyright 2015