




Instruction Sheet LT90

Assembly

1. Bend all the tabs almost straight up with a flat screwdriver.
2. Mate the two parts so that the screw holes line up.
3. Secure the flanges with five sheet metal screws.
4. Bend the tabs down and tape the joints along the flange.

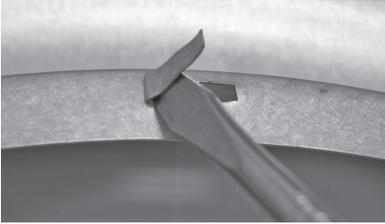

Installation

1. When used as a replacement to the standard sectioned ell, the contractor should net approximately 4.5 lineal feet of duct run. *Engineering paperwork available online, www.dryer-ell.com.*
2. Arrow indicates airflow from dryer and provides for proper male and female connections.
3. When used with the Model 4D "Down" Dryerbox®, cut and insert a 3" long section of snaplock pipe to transition into port for adequate flex connection.

