



Banding area if needed.

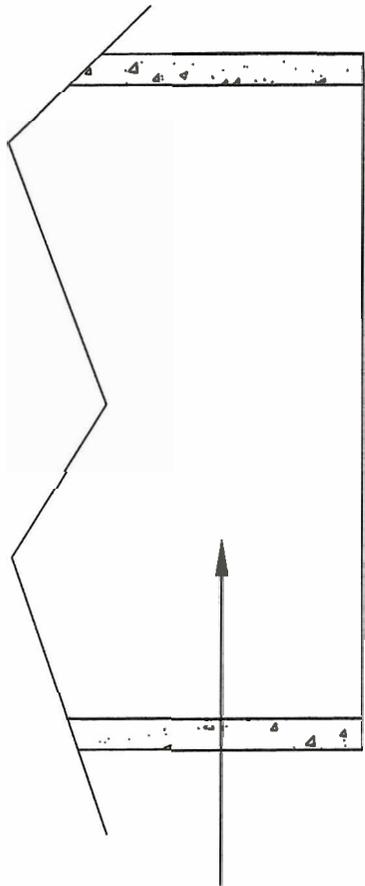

Typical RCP or PVC Pipe
cleaned & ready to receive
Waterstop Gasket.

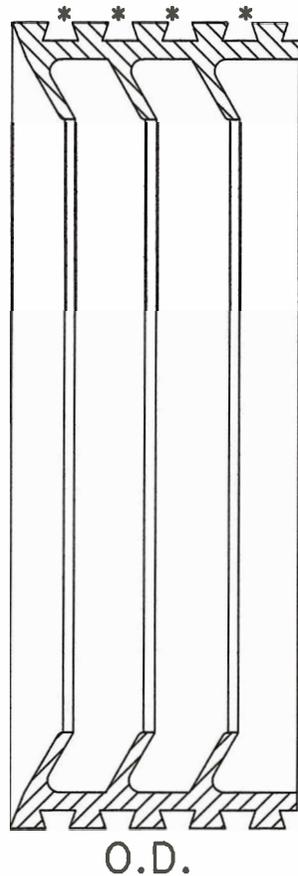

Manhole
cut-out
for Pipe
inlet. To
be grouted
around the
waterstop.

Structure
wall.

Sym	Revisions	Date	By

Clean CONC/PVC pipe before the gasket is stretched onto the OD as shown. If needed, stainless clamps placed in grooves. As pipe is placed into MH wall, center gasket in wall cut-out, support pipe, pack cut-out with proper grout, backfill after it has fully set-up.

Typical Installation of the
Vertite Waterstop Gasket.
15" & larger Profile shown.



Elastomeric
Seals

Mogadore OH 44260 USA

Description

VERTITE W-S, Waterstop

Material

C425, C443, C923, F477, 50±5

Scale
NTS

Date
12-28-00

Drawn By
WCA

Die Number
V-0033