


# INSTALLATION PROCEDURE





## Ford Style FSC-R Single Armor Wrap Clamps

(See Other Side for FSC-R2 Dual Armor Wrap Clamps)

### PREPARATIONS:

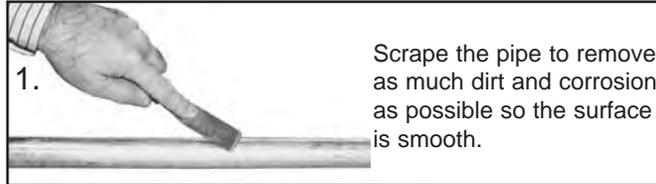

### ASSEMBLY:

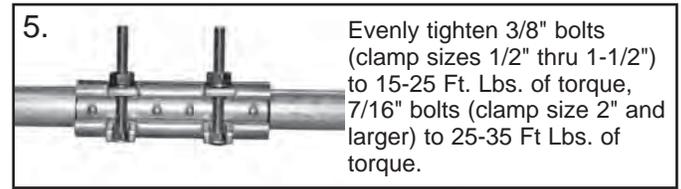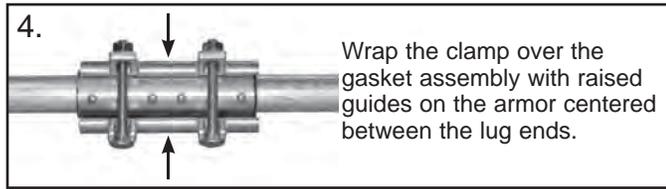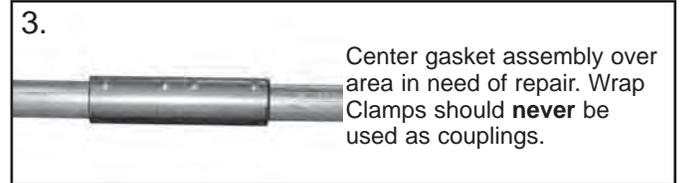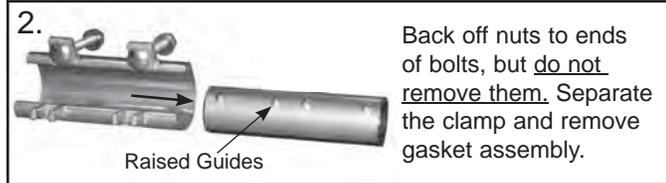

The Ford Meter Box Co., Inc. 775 Manchester Avenue, P.O. Box 443, Wabash, Indiana, USA 46992-0443  
 Telephone: 260-563-3171 FAX: 800-826-3487 Overseas FAX: 260-563-0167 <http://www.fordmeterbox.com>

FORM # 91711-99


03/15

# INSTALLATION PROCEDURE




## Ford Style FSC-R2 Dual Armor Wrap Clamps

(See Other Side for FSC-R Single Armor Wrap Clamps)

### PREPARATIONS:

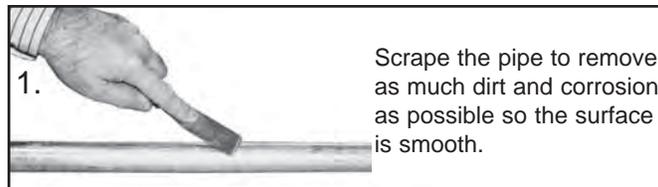

### ASSEMBLY:

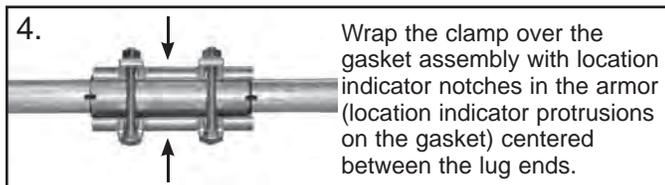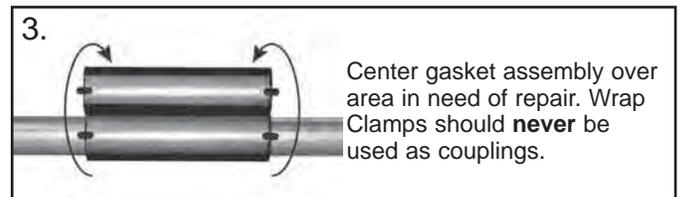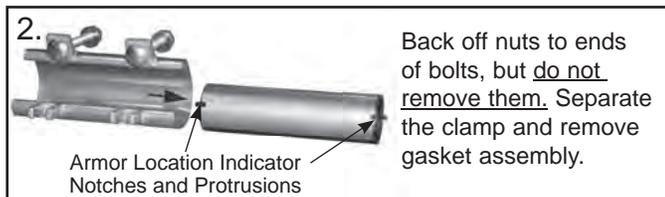

The Ford Meter Box Co., Inc. 775 Manchester Avenue, P.O. Box 443, Wabash, Indiana, USA 46992-0443  
 Telephone: 260-563-3171 FAX: 800-826-3487 Overseas FAX: 260-563-0167 <http://www.fordmeterbox.com>

FORM # 91711-99

03/15