
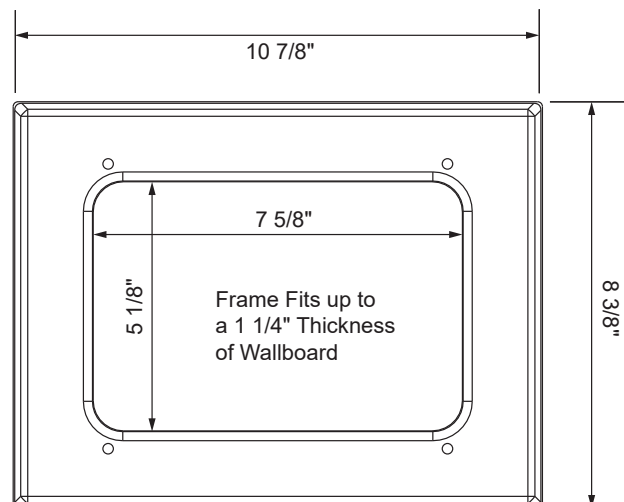


## Center Drain White White Powder Coated Metal WMOB with Quarter Turn Valves

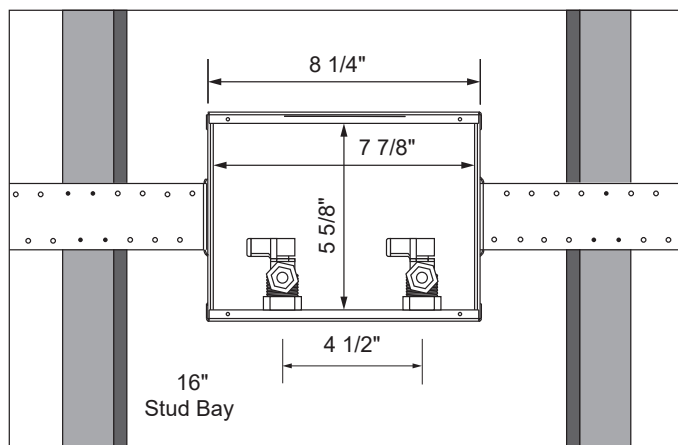

### TT200QTS Washing Machine Outlet Box Installation Instructions

- 1) Install mounting flanges to washer box
- 2) Mount washer box to studs with screws or nails. Bottom of washer box should be mounted at a minimum of 42" from the floor.
- 3) Connect 1/2" copper supply lines to inlet of washing machine valves using appropriate methods approve by local codes.
- 4) Install 2" locking nut and 2" washer from furnished drain kit to 2" ABS, PVC male adapter or 2" pipe nipple(drain connection not supplied). Install from the bottom of the washing machine box through the bottom drain outlet of washing machine outlet box. Install chrome plated slip-nut onto drain outlet male threads from inside the washer box and tighten to the washing machine outlet box making a watertight connection.
- 5) Connect 2" drain line using appropriate piping and methods approved by local codes.
- 6) Test all valve and drain connections for leaks. Make corrections if leaks are found and retest until all leaks are gone.
- 7) After sheetrock has been mounted around washing machine outlet box, install finished trim ring onto washing machine outlet box. Box is now ready for the washing machine hoses and drain hose to be connected to washing machine outlet box.

Item #	Product Description	Model #	Quantity
82118	Center Drain Qtr Turn Valves*, 1/2" Sweat Conx., Unassembled	MWB-9	5
82119	Center Drain Qtr Turn Valves*, 1/2" Sweat Conx., Cont. Pack, Unassembled	MWB-10	5
82120	Center Drain Qtr Turn Valves*, 1/2" CPVC Conx., Unassembled	MWB-11	5
82121	Center Drain Qtr Turn Valves*, 1/2" CPVC Conx., Cont. Pack, Unassembled	MWB-12	5
82122	Center Drain Qtr Turn Valves* Installed, 1/2" Sweat Conx.	MWB-13	5
82123	Center Drain Qtr Turn Valves* Installed, 1/2" Sweat Conx., Cont. Pack	MWB-14	5
82146	Center Drain Qtr Turn Valves* Installed, 1/2" PEX Conx.	MWB-15	5
82154	Qtr Turn Hammer Arrestor Valves Installed, 1/2" Sweat Conx.	MWB-19	5
82161	1/2" Qtr Turn Sweat Valve TM Installed, 2" Slipnut Drain Kit	MWB21	5
86154	Metal Center Drain WMOB with F1807 pex conx valves Top mount	MWB31	5
86162	1/2" Qtr Turn Sweat Valve TM Installed, Arrestor, 2" Slipnut Drain Kit	MWB26	5
82162	1/2" Qtr Turn Wirsbo@ Top Mount Installed, 2" Slipnut Drain Kit	MWB22	5
86163	1/2" Qtr Turn CPVC Valve TM Installed, Arrestor, 2" Slipnut Drain Kit	MWB27	5
86164	1/2" Qtr Turn PEX Valve, Arrestor Installed, 2" Slipnut Drain Kit	MWB28	5