


Installation Instructions

»» Clamping Collar for Halo™

Always be aware of, and follow local plumbing codes. Follow all manufacturer's installation instructions for waterproofing membrane. Failure to follow these instructions could result in personal injury or property damage.

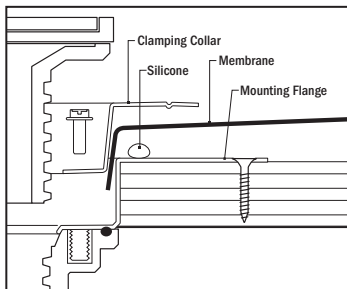

1. Remove drain head and clamping collar and set aside. Lay membrane over drain in the position it will be installed.
2. Center the clamping collar over the drain/membrane and trace the collar's inside circle onto the membrane.
3. Cut the circle out and remove. Confirm the membrane hole is centered above drain body.

4. Apply a continuous bead of silicone adhesive/sealant between the membrane and stainless steel drain mounting flange - as shown above.
5. Center the clamping collar over the membrane hole and align the four fastener holes in the clamping collar with the four threaded holes in the recess of the drain body.

TIP: Cover the drain outlet temporarily during the next step to prevent losing screws down the drain line. Screws can be installed with a 5/16" socket.

6. Firmly push collar down over drain body and hold in place while starting all four fasteners. Alternately tighten all four fasteners completely.
7. Before flooring installation, always perform a flood test of the waterproofed area as required by plumbing code and TCNA Guidelines.

#IS-822COLLAR - 8-21

Supply

Drainage

Support

Specialties

www.siouxchief.com

14940 Thunderbird Road
Kansas City, MO 64147
P 1.800.821.3944
F 1.800.758.5950

