

- **Linkage & Stopper**

- **For Price Pfister Bathtub Drain**

1. Remove screws from face plate.
2. Gently pull face plate out (make sure linkage comes out with it).
3. Remove cotter pin from lever.
4. Adjust new linkage to be the same length as the old one.
5. Attach new linkage and cotter pin to lever.
6. Drop linkage back down in tube.
7. Re-position face plate and put screws back in.

- **Enchaînement & Bouchon**


- **Pour Price Pfister Baignoire Vidange**

1. Enlevez les vis de la vieille plaque.
2. Tirez doucement sur la plaque frontale sur (assurez-vous de liaison sortir avec elle).
3. Retirer la clavette à partir levier.
4. Réglez nouveau lien à la même longueur que l'ancien.
5. Fixer le nouveau lien et clavette de sécurité à levier.
6. Déposez lien vers le bas dans le tube.
7. Reposez la plaque et mettre les vis.

- **Articulación y Tapón**

- **Para Desagües de Bañeras Price Pfister**

1. Sacar los tornillos de la placa.
2. Cuidadosamente extraer la placa frontal (asegúrese de que salga también el conjunto elevador).
3. Sacar el pasador de la palanca.
4. Ajustar el conjunto elevador nuevo al tamaño del existente.
5. Enganchar el nuevo mecanismo y el pasador en la palanca.
6. Pasar el conjunto elevador a través del tubo.
7. Re-instalar la placa y poner los tornillos de nuevo.

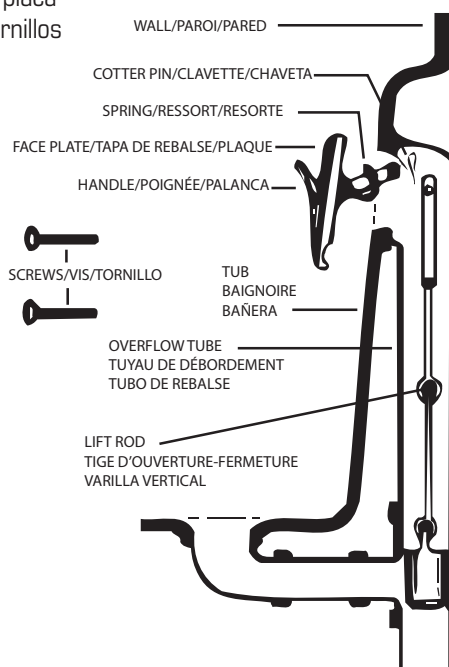

Made in/Fabrique a/Hecho en: TAIWAN



Manufactured for/Fabrique pour/
Fabricado para: Lincoln Products
Industry, CA 91748 • © Copyright 2015