



# LOMBARDIA / AVANTI INTEGRATED VOLUME CONTROL PRESSURE BALANCE TRIM WITHOUT DIVERTER

ROHL Transitional Bath Avanti ROHL Modern Bath Lombardia

A6200LM (Metal Lever) A6200XM (Cross Handle)

#### **FEATURES**


- Trim for concealed pressure balance rough valve with volume control without diverter
- Complete with plate, escutcheon and handle
- Brass construction
- Move handle up for on, down for off
- Rotate handle clockwise for hot, counterclockwise for cold
- Must order R2012D rough valve to complete


## **COLORS/FINISHES**

- Polished Chrome
- Polished Nickel
- Inca Brass
- Satin Nickel
- Tuscan Brass
- Matte Black

#### WARRANTY

- Limited Lifetime\*
- \* No warranty on Tuscan Brass
- \* 5-year warranty on Inca Brass
- \* 5-year warranty on Matte Black

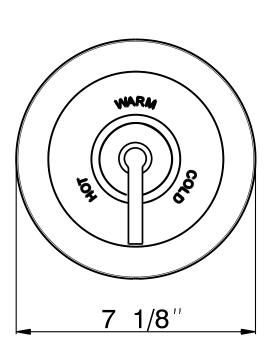

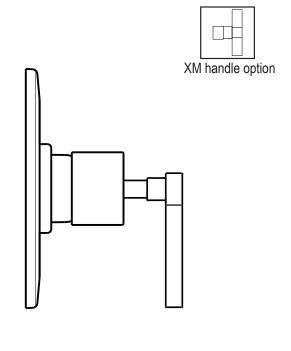




## INSTALLATION INSTRUCTIONS

## Pressure Balance Trim with Integrated Volume Control Installation Instructions

For Model/s: ARB6400, ARB7400, AC600, AC700, A6400, A7400, U.6700, U.7700, U.6000, U.7000, A6200, A7200, BA600, & BA700

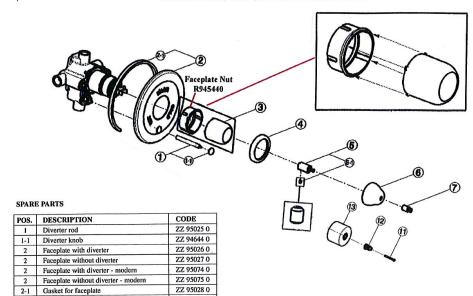

ZZ 95029 0

ZZ 95030 0

ZZ 95031 0 ZZ 94063 0

ZZ 95032 0

77, 92671 0

ZZ 95078 0

ZZ 93497 0 ZZ 95077 0

# **Trim Parts Instructions:**

Mount Sealing Gasket (2-1) into Faceplate (2)

Dome cap

Cover ring Cartridge rod adaptor

5-1 Set screw M.5x6 6 Lever escutcheon

Lever extension

Screw M.3,5x30

13 Modern dome cap

• Thread on Diverter Rod (1) if applicable

12 Extension

- Remove faceplate nut (R945440) from valve and install faceplate (2)
- Thread on faceplate nut (R945440)
  - Please note: faceplate nut is provided on the rough valve not with the trim
- Use Cover Sleeve (3) as a wrench to tighten the faceplate nut into place
- SlideTrim Ring (4) onto Cover Sleeve (3) to hide the edge of the Faceplate nut (R945440)

  Please note: O-ring on (4) is installed on the inner diameter of the Trim Ring (4)
- Install Cartridge Interface (5) onto stem of cartridge Use of 2.5 MM Allen key is needed
- Slip Trim cover (6) against cartridge interface (5)
- Install Handle Spacer (7) and tighten screw (5-1)
- Install lever or cross handle onto Handle Spacer (7)
   Use of 2.5 MM Allen key is needed
- Thread on Diverter button (1-1)
- Test. Adjust if necessary.
- 3/8" Extension Nut available; part # R945440/2
- Extended stem available; part # 30134

