



## Tub/Shower Wall System

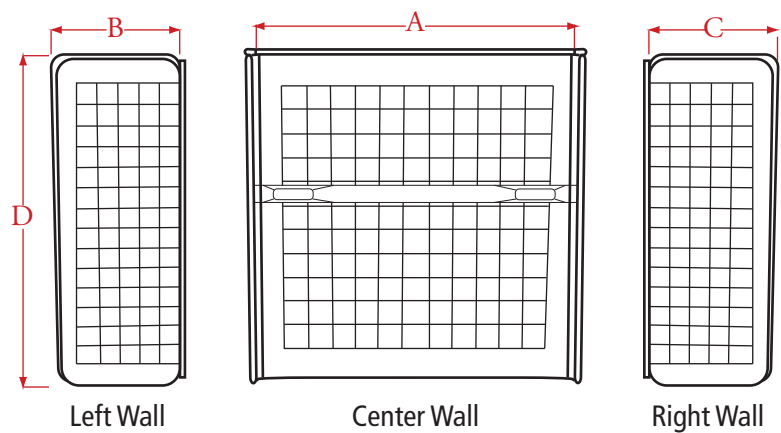

### 3PC Shower Wall

| Model  | A   | B   | C   | D   |
|--------|-----|-----|-----|-----|
| 3160WS | 60" | 26" | 26" | 59" |

## Fiberglass Bath

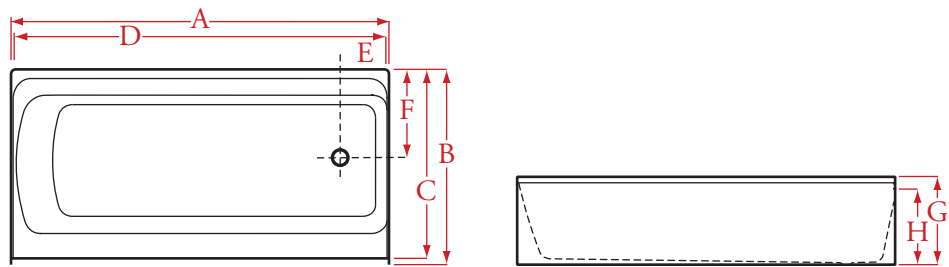

| Model   | A   | B   | C   | D    | E   | F   | G   | H    |
|---------|-----|-----|-----|------|-----|-----|-----|------|
| 6012-3W | 60" | 31" | 30" | 59½" | 8¼" | 14" | 15" | 12½" |

## Product Information

The Florestone Wall System is shipped in two cartons. One contains the Back Wall and the other contains the two Side Walls. Before beginning installation, check for damage. Report damage to your supplier. DO NOT INSTALL A DAMAGED UNIT.

**IMPORTANT:** Sealant must be applied to the seam where the walls meet the tub and where the Side Walls and Back Wall interlock to avoid water damage.

Do not use abrasive or acid based materials on wall surface.

OBSERVE ALL LOCAL PLUMBING CODES.