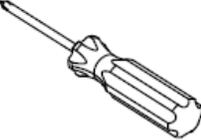
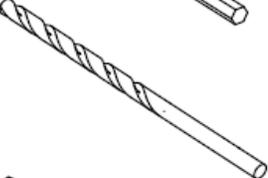
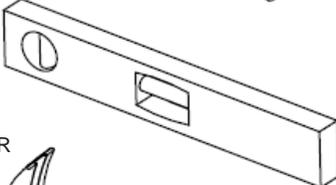

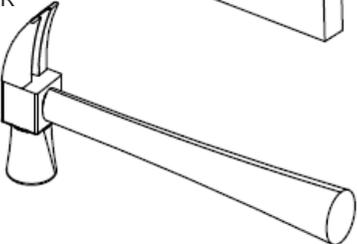


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR X3 	PHILLIPS SCREW DRIVER 
TILE ANCHOR X3 	PEN / PENCIL 
#8 SCREW X3 	1/4" (6 mm) DRILL 
MOUNTING BRACKET X1 	LEVEL SET 
MIRROR X1 	HAMMER 
SOLD SEPARATELY OPTIONAL ITEM TILTING BRACKET PN : MTM-009 	

CINU

INSTALLATION INSTRUCTIONS

4741

MIRROR

GINGER
Luxury For Your Lifestyle™

2001 CARNEGIE AVE, SANTA ANA CA 92705


(949) 417-5207

WWW.GINGERCO.COM


GNG - 4741
 EN-1294
 REV -

①

a) STANDARD INSTALLATION b) INSTALLATION WITH OPTIONAL TILTING MECHANISM

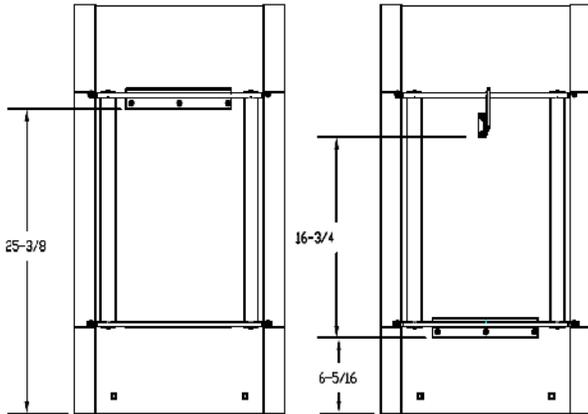

② ALIGN MOUNTING BRACKET AND MOUNT LOCATION

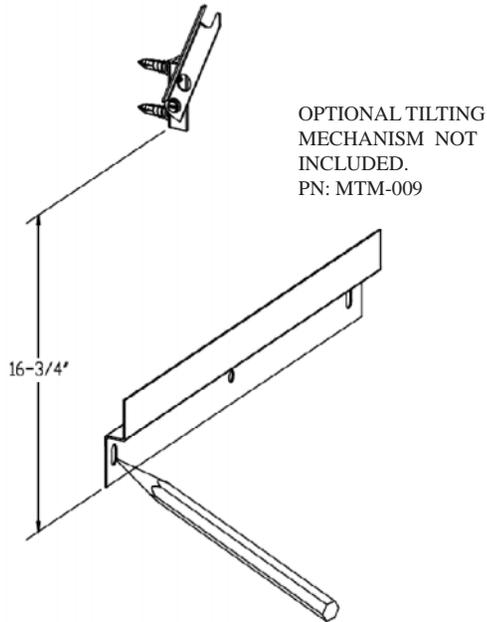


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS MADE IN STEP 2

TAP IN UNTIL THREADS ARE REACHED

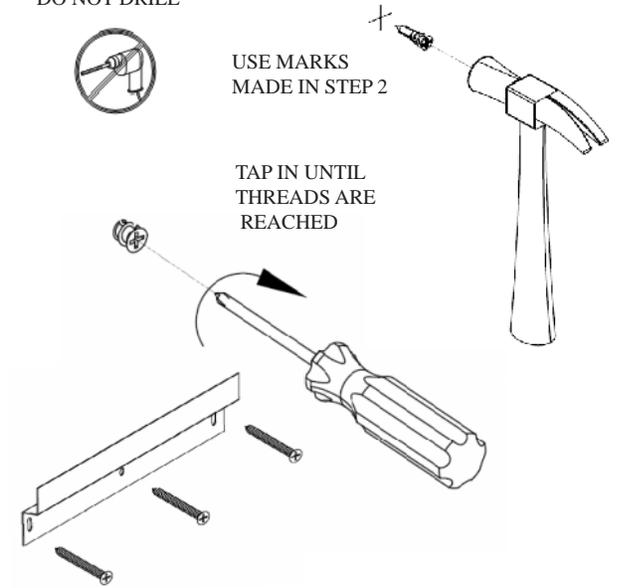


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2


DRILL 1/4" (6mm)

INSERT TILE ANCHOR

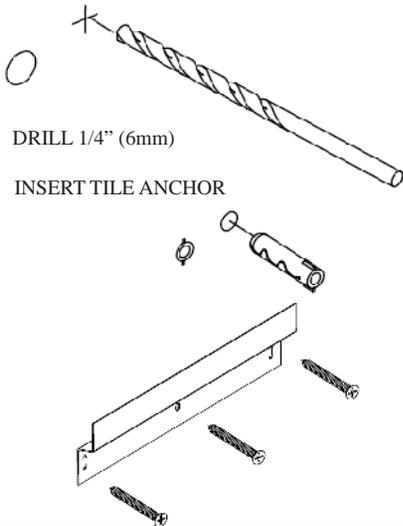

⑤

a) STANDARD INSTALLATION

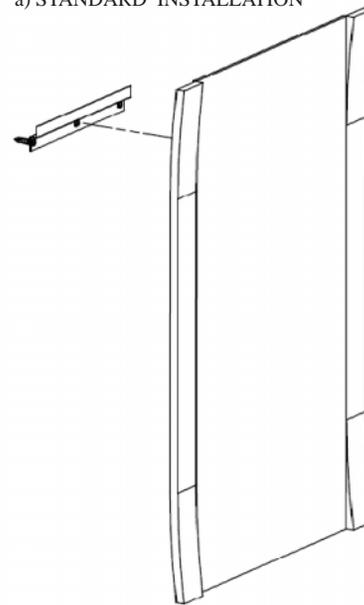

b) INSTALLATION WITH OPTIONAL TILTING MECHANISM

