

## **FAST** and EASY as **APC!**

Step 1 **A**ssemble up to three gray *FAST* Tube sections to achieve the length needed.

Step 2 **P**rep for duct detector by affixing the starter piece\* to *FAST* assembly


Step 3 **C**ut and cap to your finished length

*\*starter pieces are supplied w/ every APC-brand detector. Starter pieces also available (order: FAST Fit Kit)*

Finished assembly should completely cross duct width or must cross 80% minimum. Remember by code, finished lengths > three feet must be mechanically supported.



Trim to length, firmly press Red end-cap onto end.

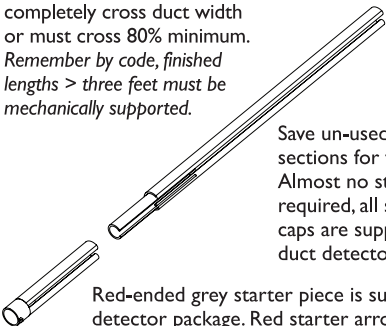

Save un-used *FAST* Tube sections for future jobs! Almost no storage space required, all starters and end caps are supplied with the duct detectors.

Red-ended grey starter piece is supplied in duct detector package. Red starter arrow points into air flow for visual verification.

No tools are required in the *FAST* Tube assembly process!