

CORALAIS®

Required Accessories			
K-304-*	Rite-Temp® valve OR	<input type="checkbox"/> NA	
K-2971-KS	HiFlow Rite-Temp valve with stops		<input type="checkbox"/> NA
* For a complete listing of all the Rite-Temp valves, refer to the KOHLER Price Book.			

Optional Accessories			
88526	HiFlow Rite-Temp® thin wall installation kit	<input type="checkbox"/> CP	<input type="checkbox"/> Other_____

Installation Notes

Install this product according to the installation guide.

NOTICE: Risk of product damage. Long screws, for installing trim, can damage the K-2971-KS valve. Consult the trim installation guide to verify if the thin wall installation kit (88526) is needed.

Avoid cross-flow conditions. Do not install shut-off device on either valve outlet.

Cap shower outlet if deck-mount spout, diverter, or handshower is connected to spout outlet.


Install straight pipe or tube drop of 7" (178 mm) to 18"

(457 mm) with single elbow between valve and wall-mount spout.

1/2" NPT pipe or 5/8" OD tubing

For slip-fit spout, 5/8" OD tubing must extend 1-1/2" (38 mm) Min to 2-7/8" (73 mm) Max beyond finished wall.

For NPT spout, pipe must extend 4" (102 mm) beyond finished wall.

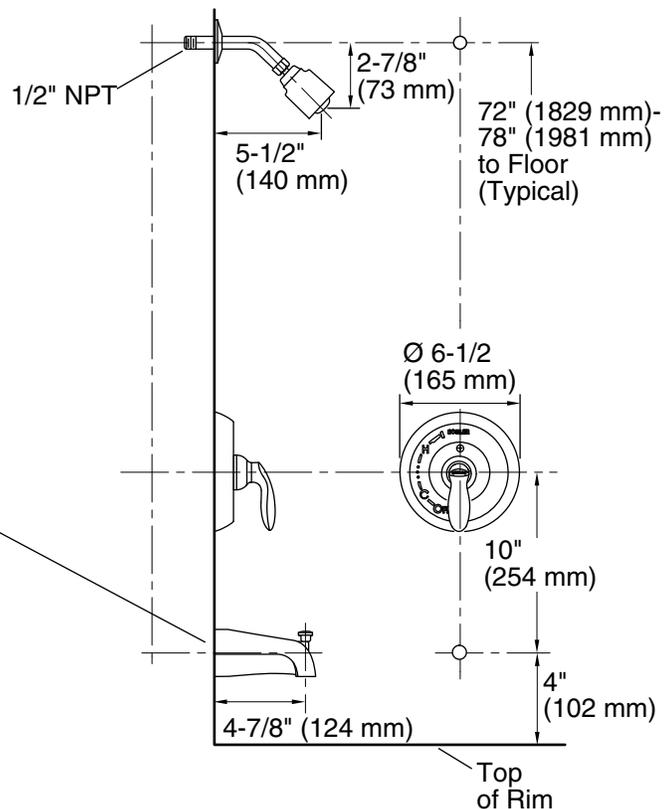

Product Diagram