



# BATHROOM SINK DRAIN INSTALLATION

## BEFORE YOU BEGIN


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing, or personal injury during installation.

Unpack and inspect the item for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

## TOOLS AND MATERIALS:



Plumber's Tape



Basin Wrench


\*not included

## GETTING STARTED

- Ensure that you have gathered all of the required materials that are needed for the installation.

## INSTALLATION


1. Dissassemble the drain assembly and lay the parts aside, in the same order they were removed. See the illustration below as a reference if needed.

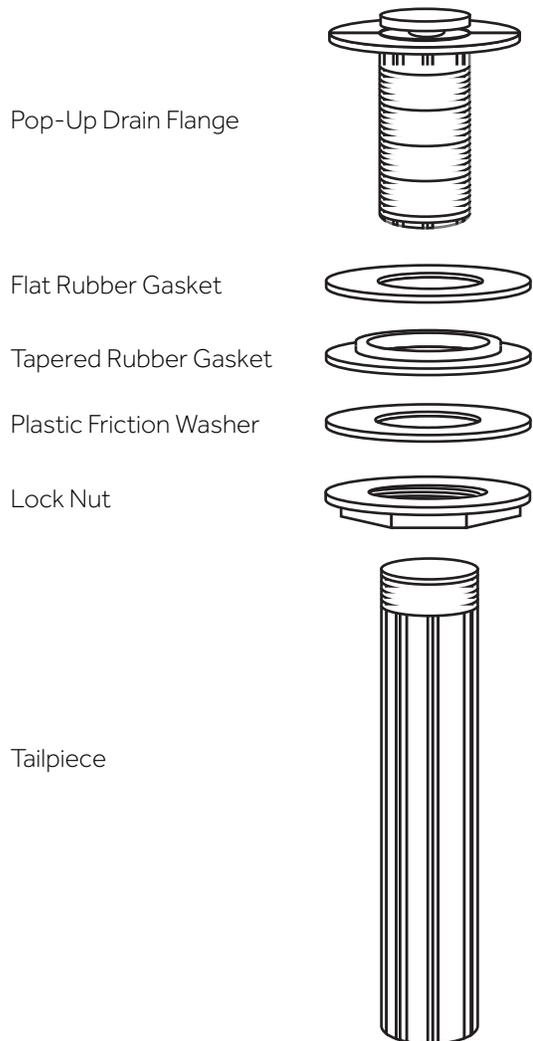




# BATHROOM SINK DRAIN INSTALLATION


2. Apply plumber's tape to the threading on the tailpiece, then reattach the tail piece to the pop-up drain flange.

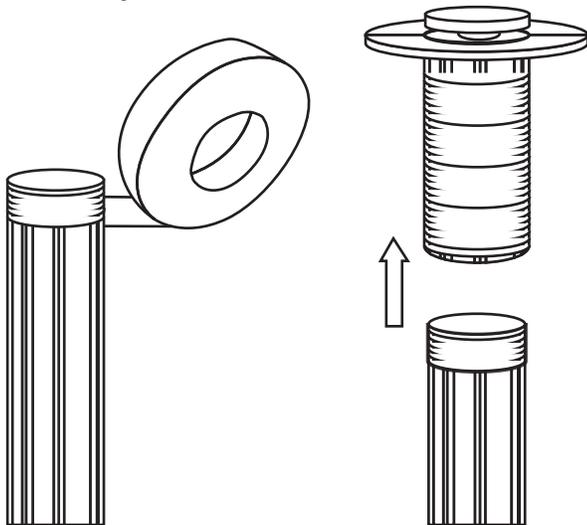


3. Slide the flat rubber gasket up the tailpiece until it meets the lip of the pop-up drain flange.

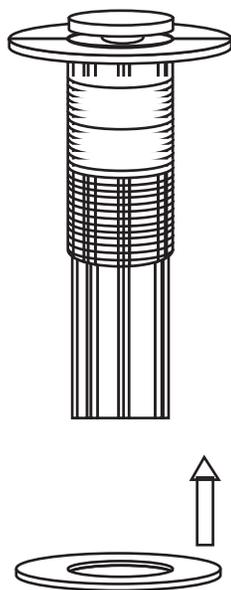

4. Insert the drain flange and tailpiece through the top of your sink's drain hole.

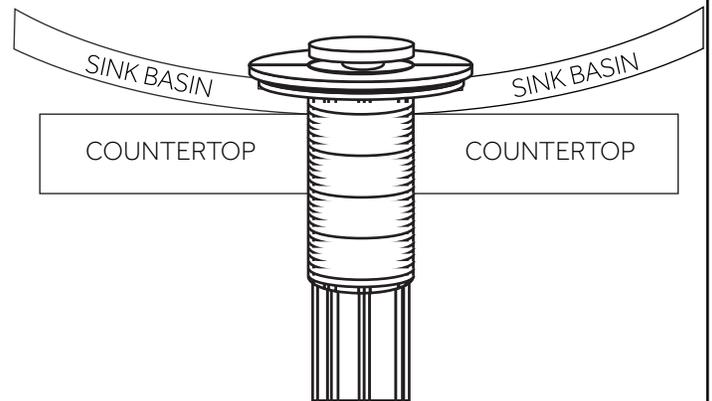

5. From under your counter, slide the tapered rubber gasket followed by the plastic friction washer onto the tailpiece until they meet your sink or countertop. Be sure that the tapered side of the rubber washer is facing up.

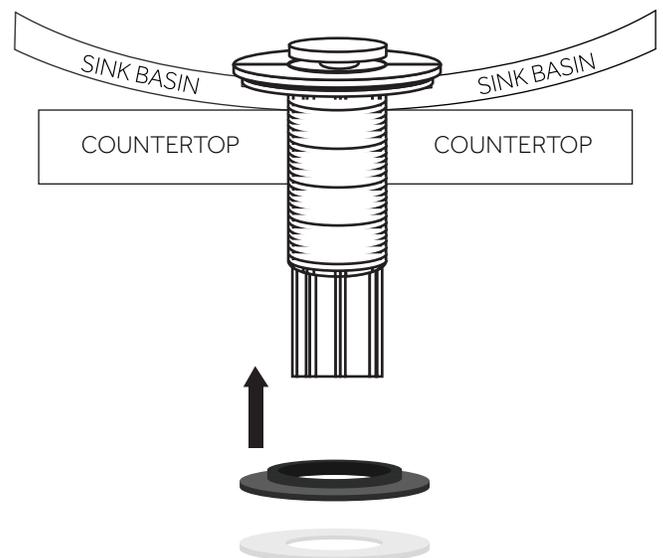



## BATHROOM SINK DRAIN INSTALLATION

6. Thread the lock nut onto the drain flange. Hand tighten until secure, then finish tightening with a basin wrench once the drain is properly aligned.

**Important:** Be careful not to overtighten, which could crack a porcelain sink or stone countertop.

