


tile redi[®]





REDI BENCH[®] - INSTALLATION INSTRUCTIONS

The Redi Bench is designed to be installed exclusively with Tile Redi[®] shower pans (known as Redi Base[®], Redi Trench[®], Wonder Drain[®], WonderFall Trench[®], Bathtub Replacement[™], Redi Free[®], and Redi Your Way[®]) using the Redi Flash[®] flashing system.

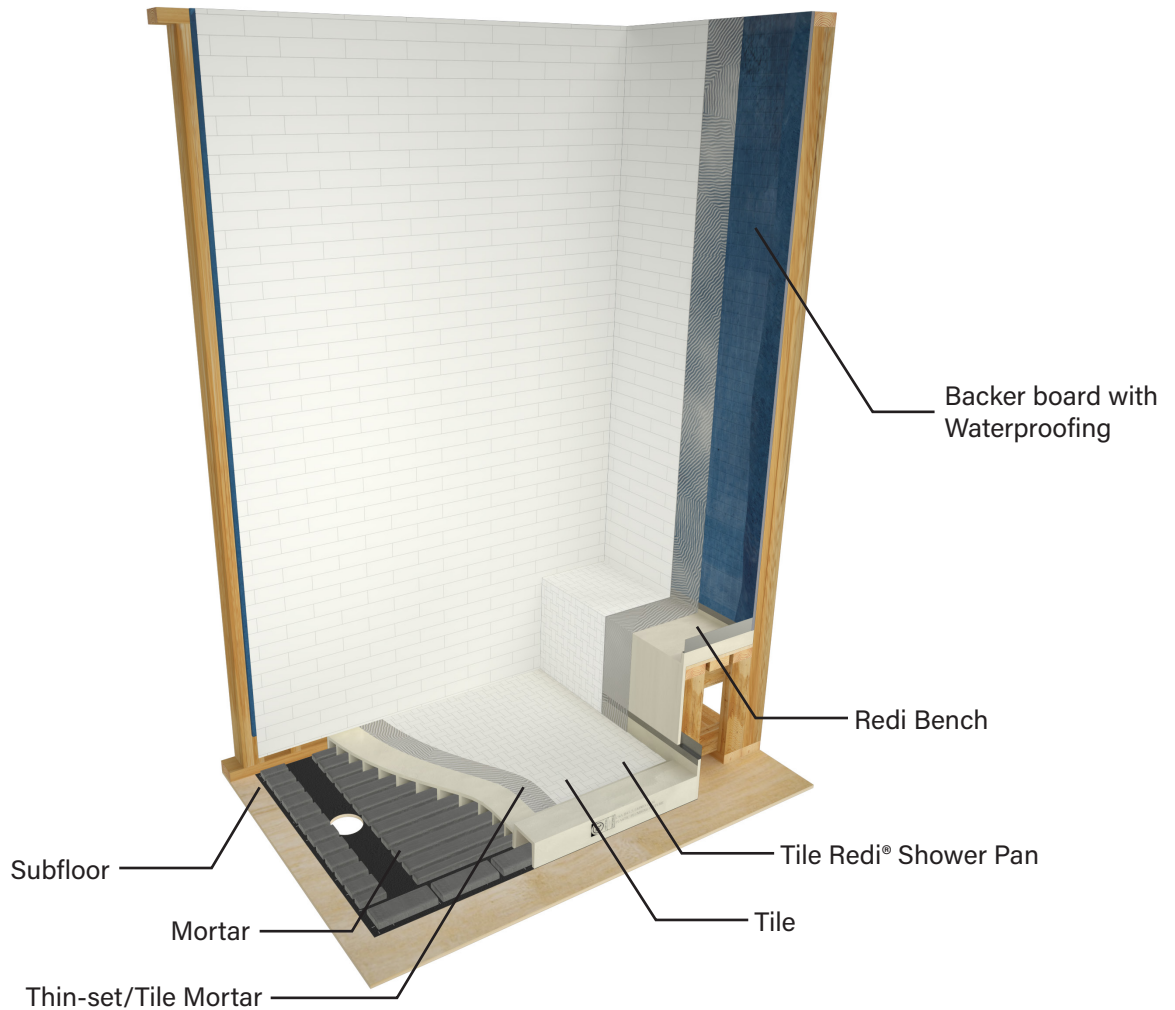


TOOLS REQUIRED

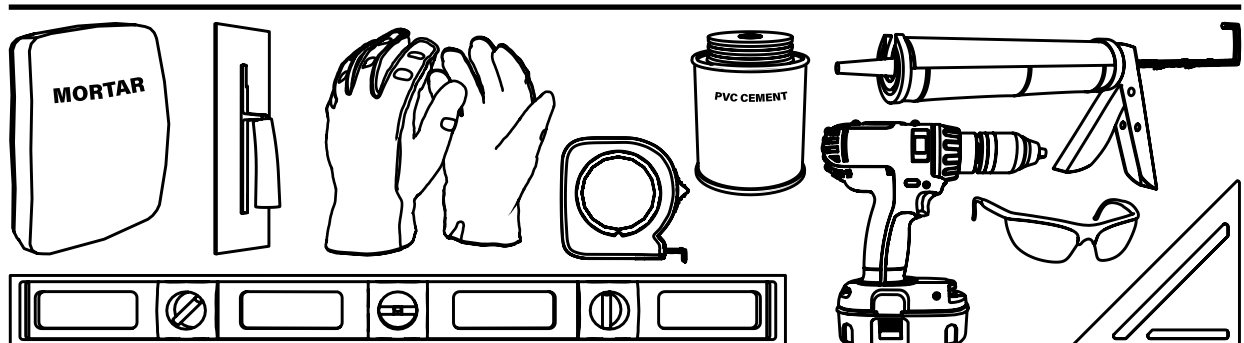


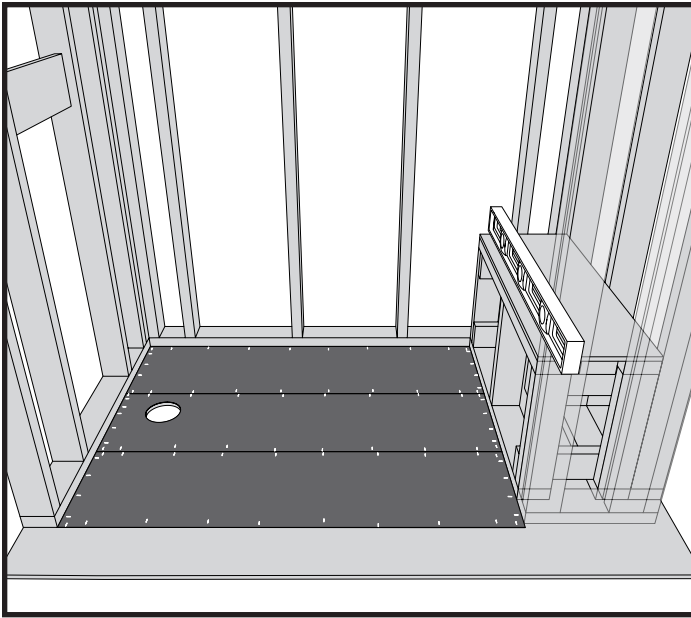


1. Install the Redi Bench frame between the shower base footprint and the shower wall framing. Either wood or metal framing may be used as required by local building codes. The Redi Bench framing (the framing height is based on personal preference, but it is usually a height of 18") should be installed along the appropriate side of the shower base so that it will be butted up against the splash wall of the shower base. The bench framing will then need to be securely attached to the shower floor substrate, and the shower framing on the three sides of the Redi Bench. The Redi Bench framing will need to be level because the Redi Bench is already designed with a slope so the seat of the bench will drain into the shower.

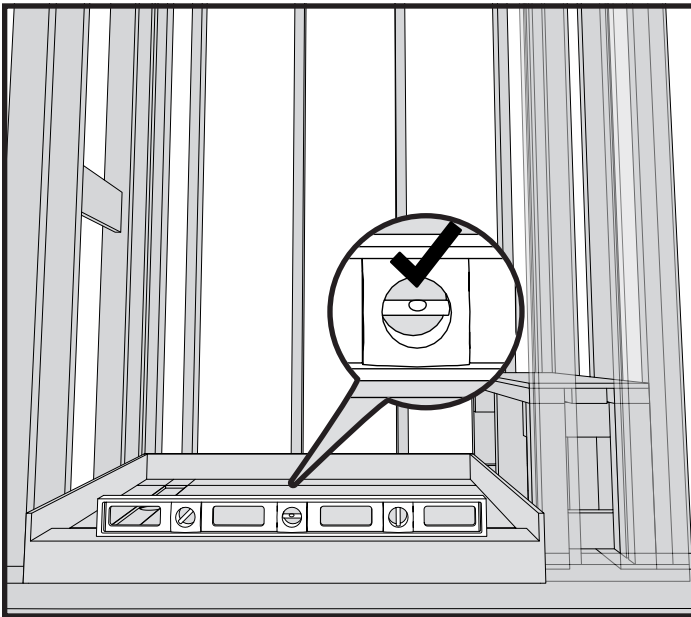


2. Install your Tile Redi shower pan according to the instructions. Using a level, ensure that the pan is level left to right, and front to back along the splash walls. Also make sure the pan is level left to right along the curb.

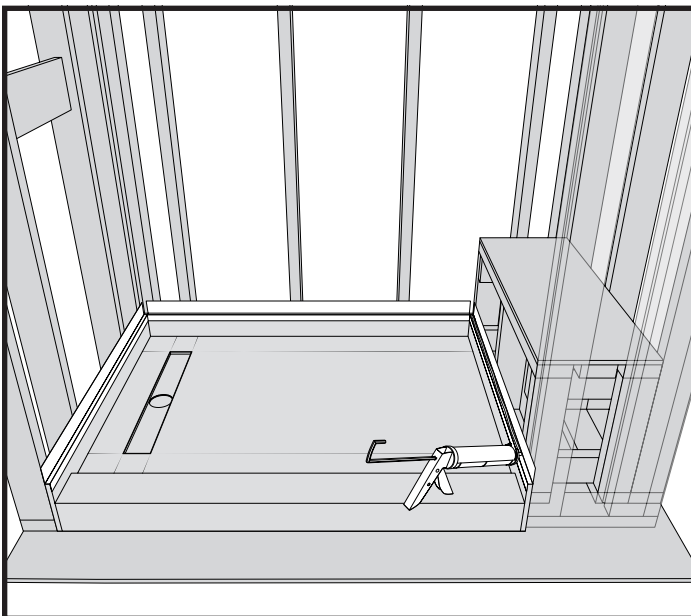


3. Install the Redi Flash flashing system along the splash walls of the shower pan. Apply a bead of 100% silicone to the top of the Redi Flash flashing that runs along the splash wall alongside the bench frame.

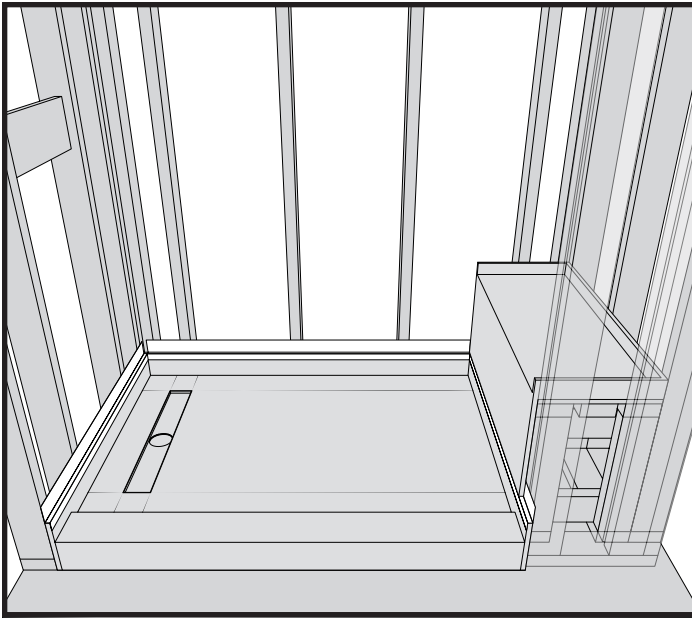


4. Apply Loctite PL Premium construction adhesive to all surfaces of the bench frame which are in contact with the Redi Bench when it is placed in the frame (i.e., the top of the frame and the vertical frame studs above the splash wall.) Then, install the Redi Bench by securely placing the Redi Bench on the framing so it is in contact with all the seat and leg support areas containing Loctite PL Premium construction adhesive. Press the Redi Bench firmly onto the Loctite PL Premium construction adhesive on the bench frame and hold it securely in place for approximately 30 minutes. After placing the bench frame wipe clean any excess silicone.

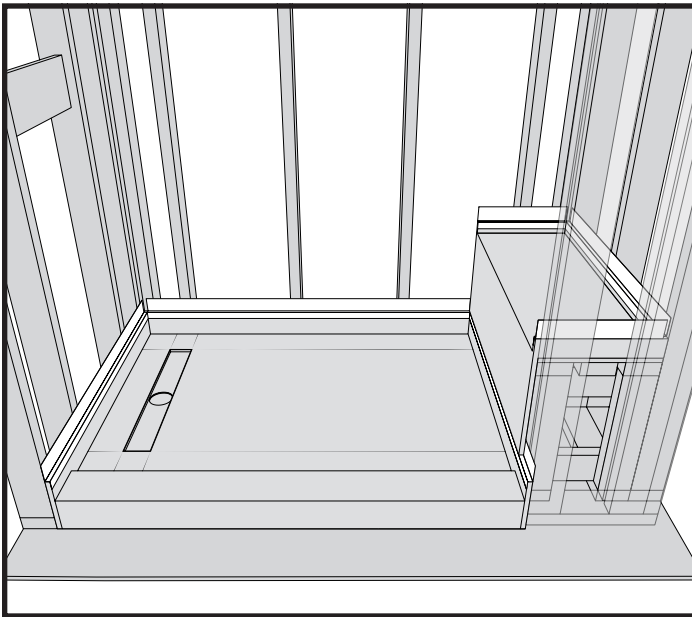


5. Install the Redi Flash on the top of the 3 splash walls of the Redi Bench in the same fashion that the Redi Flash was installed on the shower base splash walls.

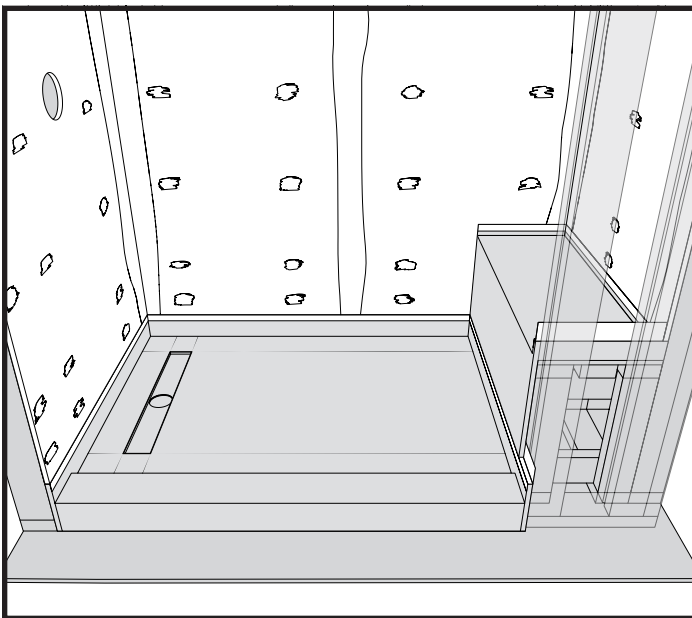

6. Install the shower backer board and waterproofing in accordance with the standards established by the Tile Council of North America, Inc. Seal and waterproof joint between backer board and the shower pan splash walls using Redi Flash or 100% silicone. It is recommended to use a membrane and fluid applied waterproof in addition to the Redi Flash or 100% silicone.

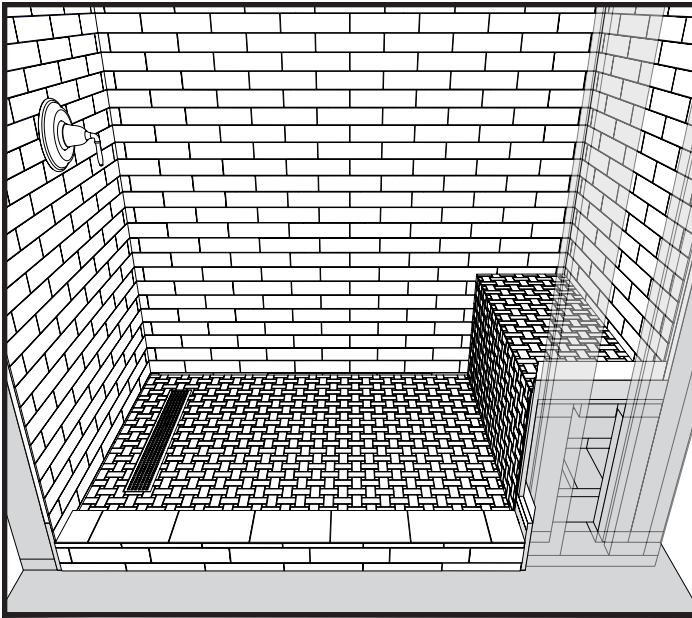

7. Adjust the height of the drain as necessary to accommodate the floor covering. Set your tile using a white modified thin-set/tile mortar and a notched trowel as specified by the thin-set/tile mortar manufacturer based on your tile size. Tile Redi recommends the modified thin-set/tile mortar products found in table below.

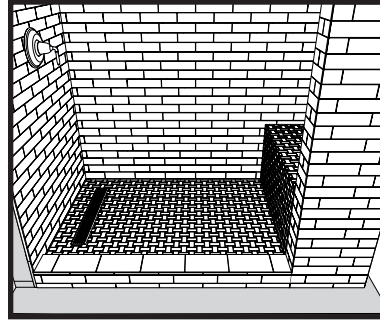

Tile the rest of the shower.

Tile Redi Approved Modified Thin-sets/Tile Mortars		
MAPEI Ultraflex LHT White	MAPEI Large Format Floor and Wall White	CBP Prolite White
MAPEI Ultraflex 1 White	MAPEI Porcelain Tile White	CBP Flexbond White
MAPEI Large Tile and Stone White	MAPEI Ultraflex LFT White	TEC Ultimate 6 Plus 487 White

⚠ CALIFORNIA PROP 65 WARNING: This product contains one or more chemicals, including Chromium, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

436 East 36th Street, Charlotte, NC 28205
800.232.6156 | sales@tileredi.com

www.tileredi.com

Tile Redi® trademarks and logos are owned by and the Intellectual Property of Tile Redi, LLC.
©2023 Tile Redi, LLC. All Rights Reserved.

PATENT: www.TileRedi.com/PatentMarkings