

American Standard

Method One & Method Two Installation Instructions for Undermount Series Sinks

Notes for Fabricator/Installer

1. American Standard accepts no liability for damage to the solid surface countertop, or sink fixture, during installation.
2. Inspect the sink fixture for any shipping damage, prior to installation. Do not install a damaged unit.
3. Aesthetics are essential to presentation of the installed sink unit. Take the necessary care to ensure that the exposed silicone joint is kept to a minimum, the sink is properly aligned to the cut-out, and excess silicone is cleaned from the sink.
4. We have supplied within the sink carton: sink strainers, hardware kit, 1/8" masonite template, and a product use and care sheet + Product Warranty.
5. Undermount sinks have a striking silk polished profile on the sink rim. To highlight this unique design feature, our installation system reveals up to 1/16" of the sink rim flat.

Call Customer Service

1-800-442-1902
Monday through Friday
8:00 A.M. to 7:30 P.M. EST

Technical Customer Service

1-800-442-1902
Monday through Friday
8:00 A.M. to 6:00 P.M. EST
Saturday
8:00 A.M. to 3:00 P.M. EST

Write Customer Service

Customer Care at American Standard
P.O. Box 6820
1 Centennial Plaza
Piscataway, NJ 08855-6820

UNDERMOUNT INSTALLATION - METHOD ONE

NOTE: THESE INSTRUCTIONS APPLY **ONLY** TO:

SURELL BY FORMICA
CORIAN BY DUPONT
AVONITE (CLASS 1)
FOUNTAINHEAD BY NEVAMAR

For all other polymer based materials, or natural stone countertops, refer to **INSTALLATION METHOD TWO**

Material Supplied

3 1/2" strainers (waste assembly)

Template

Homeowner's manual and warranty

Hardware kit (includes machine screws, brackets, thumbscrews, tee nuts, 1" diameter PVC discs and glue)

The intention of the hardware kit is to clamp the sink rim to the underside of the countertop, and backup the silicone seal.

Required by Fabricator for METHOD ONE INSTALLATION

An assortment of clamps

Solvent such as methyl hydrate or denatured alcohol (for excess silicone removal)

Silicone sealant


1/2" plywood buildup

Fabricator Template Preparation

The masonite template supplied has been machined to the exact size and shape of the finished countertop cut-out.

The cut-out will reveal approximately 1/16" of the silk finished sink rim flat.

We recommend that the template be used to create a female template from 1/2" plywood.

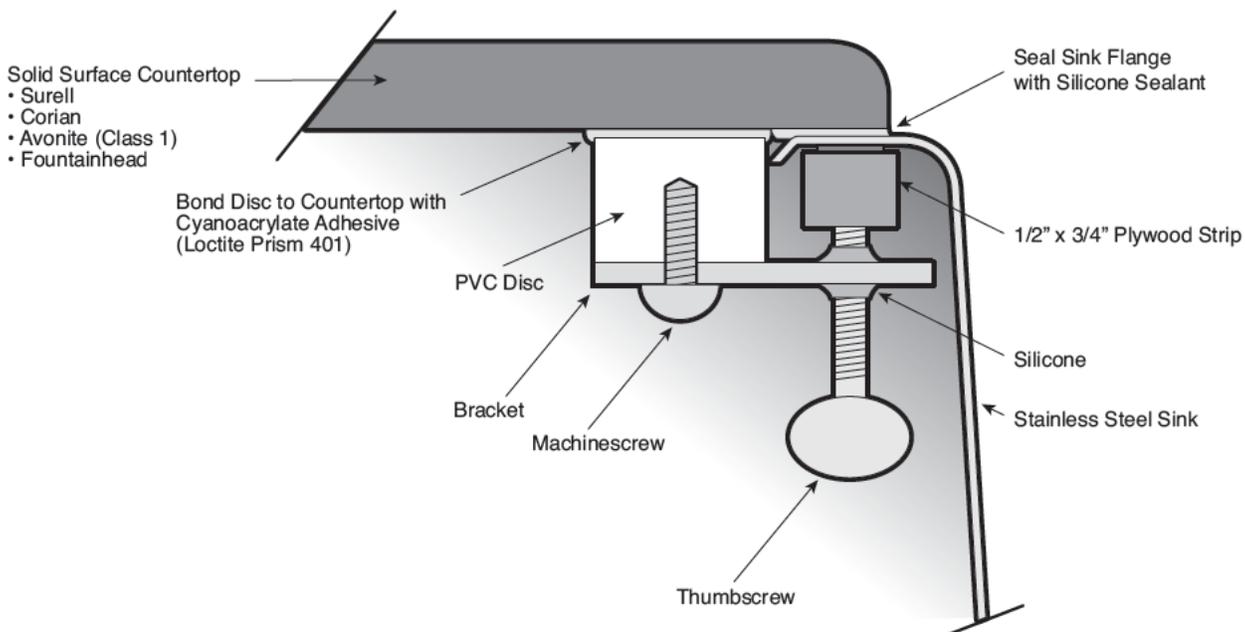

UNDERMOUNT INSTALLATION - METHOD TWO

NOTE: THESE INSTRUCTIONS APPLY ONLY TO:

GRANITE COUNTERTOPS

ANY POLYMER BASED MATERIALS (that are not compatible with the adhesive supplied)

Material Supplied

3 1/2" strainers (waste assembly)

Template

Homeowner's manual and warranty

Hardware kit (includes machine screws, brackets, thumbscrews, tee nuts, 1" diameter PVC discs and glue)

The 1" diameter PVC discs and glue are not required for METHOD TWO INSTALLATION

The intention of the hardware kit is to clamp the sink rim to the underside of the countertop, and backup the silicone seal.

Required by Fabricator for METHOD TWO INSTALLATION

An assortment of clamps

Solvent such as methyl hydrate or denatured alcohol (for excess silicone removal)

Silicone sealant

1/2" plywood buildup

Fabricator Template Preparation

The masonite template supplied has been machined to the exact size and shape of the finished countertop cut-out. The cut-out will reveal approximately 1/16" of the silk finished sink rim flat.

We recommend that the template be used to create a female template from 1/2" plywood.

