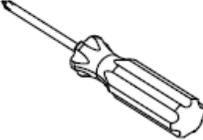
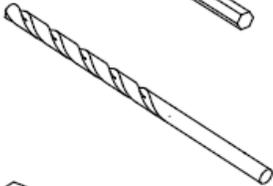

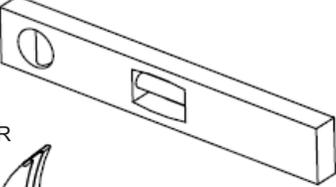
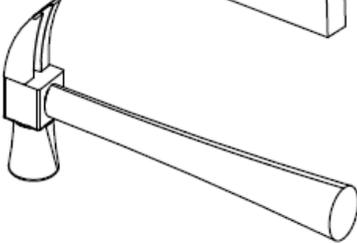

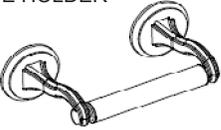


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR X 4 	PHILLIPS SCREW DRIVER 
TILE ANCHOR X 4 	PEN / PENCIL 
#8 SCREW X 4 	1/4"(6 mm) DRILL 
MOUNTING BRACKET X 2 	LEVEL SET 
M5X5 SET SCREW X 2 	HAMMER 
2.5 MM HEX KEY X 1 	
DOUBLE POST TISSUE HOLDER X 1 	

NWP - 39-28
EN-1984

KIARA

INSTALLATION INSTRUCTIONS

39-28

DOUBLE POST TISSUE HOLDER


NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705


(949) 417-5207
WWW.NEWPORTBRASS.COM

REV -

① REMOVE MOUNTING BRACKETS

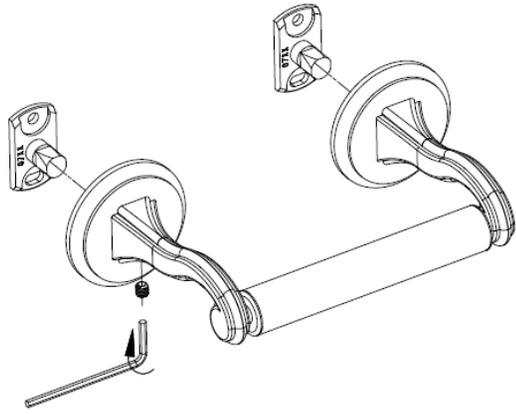

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

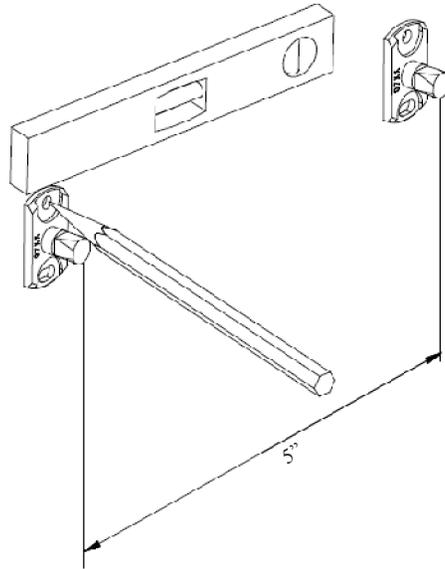


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

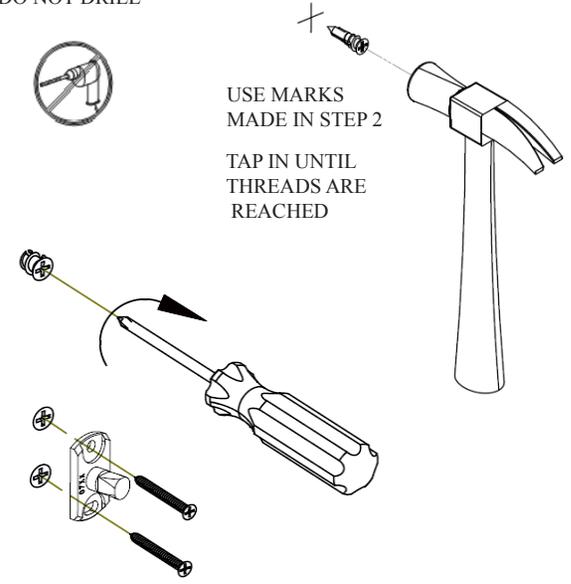


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

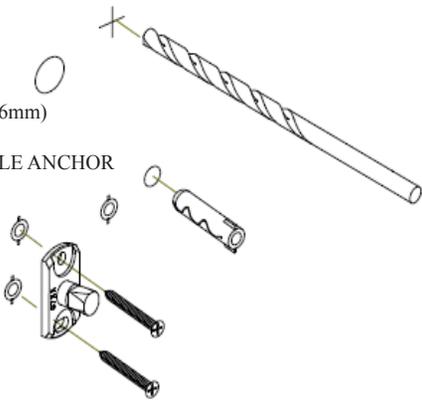

⑤ INSTALL PRODUCT ONTO BRACKETS

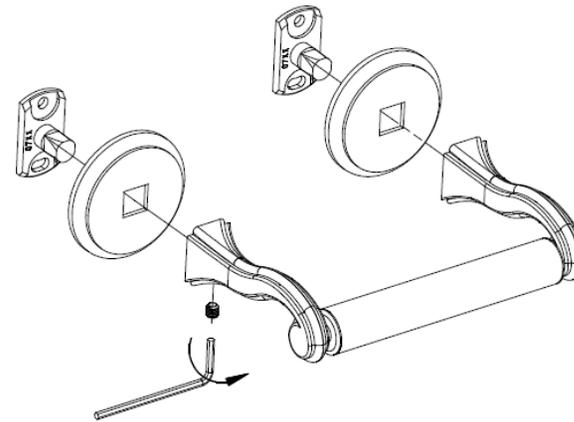

SECURE WITH SET SCREW