


INSTALLATION INSTRUCTIONS  
JACOBEOAN SINGLE HOLE  
KITCHEN FAUCET

**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

Model No's: 2470-5203, 2470-5303

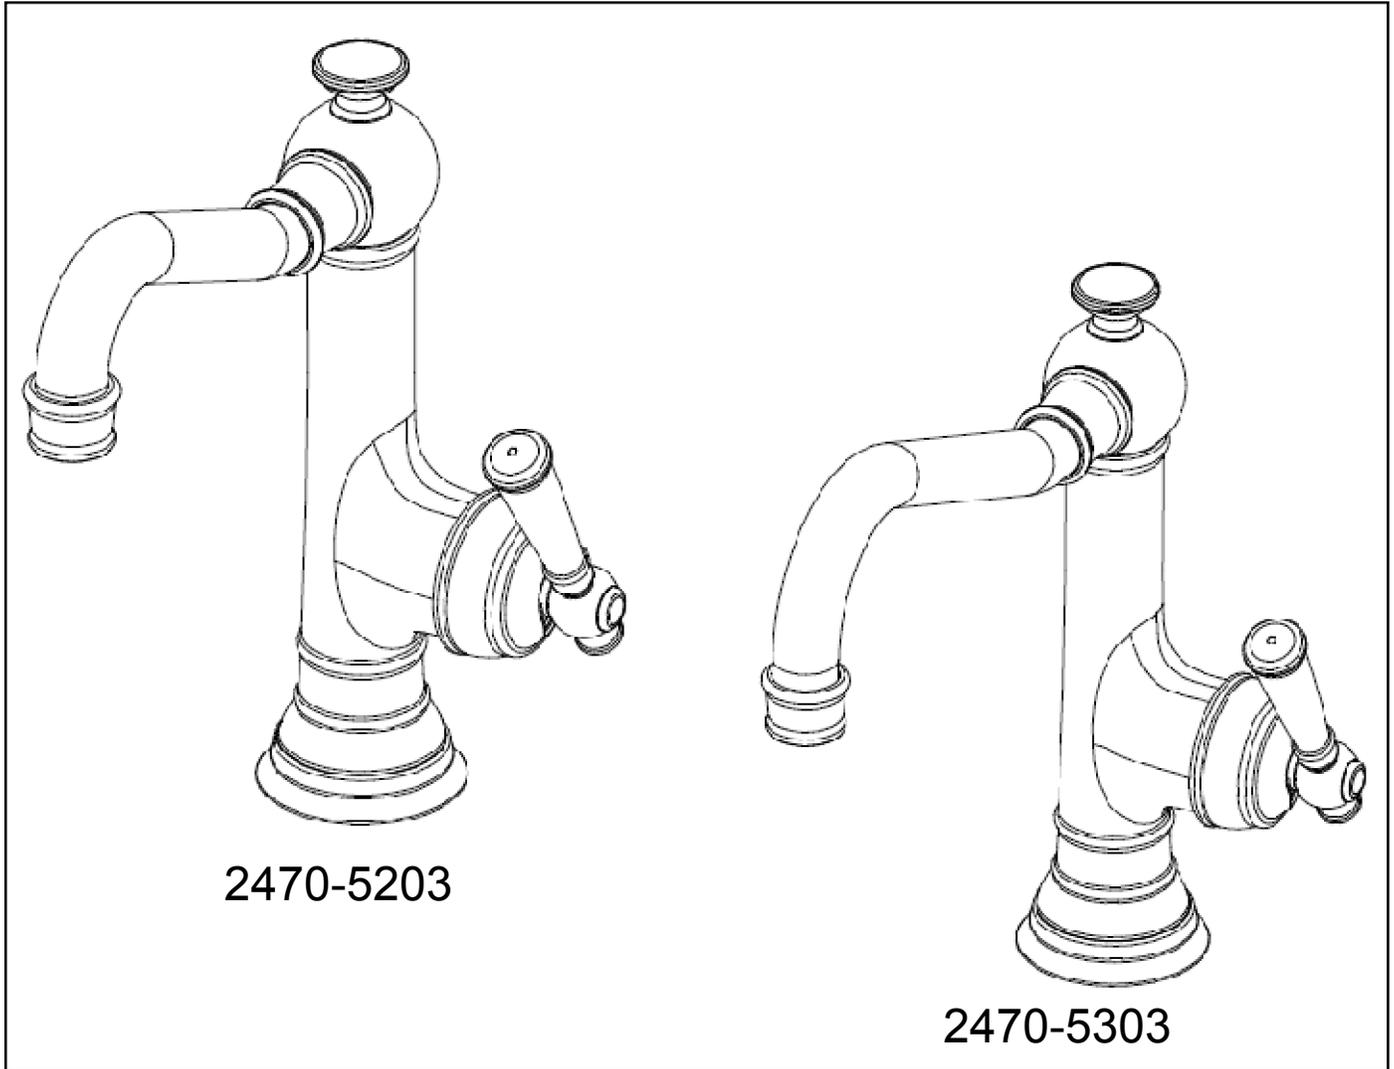



**Congratulations on the purchase  
of your Newport Brass product,  
an excellent choice, that will give you  
years of quality service and enhance  
the look and style of your home.**

## Recommended Installation by a Professional Plumbing Contractor


**Note:** The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size x 1/2" thick), should be utilized.

1. Drill hole in mounting surface. Recommended deck hole  $\varnothing 1.500''$  not to exceed  $\varnothing 1.562''$ .
2. Place O-ring (2) on underside of base RING (1). **See Figure 1a.**
3. Insert Hoses through base RING (1) and hole in mounting surface. Secure into place with MOUNTING KIT (3). **See Figure 1.**
4. Attach hot/cold spout supply directly to valves in the wall. **See Fig. 2**
5. With faucet in the OFF position, open water supplies valves. Inspect connections under sink for leaks. **DO NOT** turn faucet on yet.
6. Detach AERATOR ASSY (4) from SPOUT (5), turn on faucet and flush for one minute to remove debris from lines.
7. Turn OFF faucet and reattach AERATOR ASSY (4) to SPOUT (5).

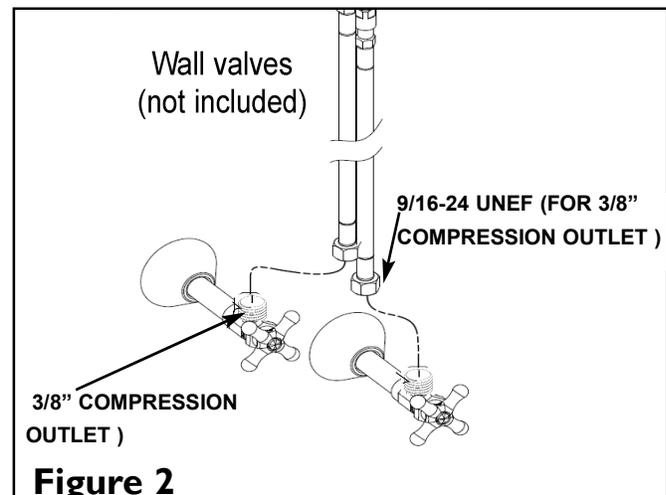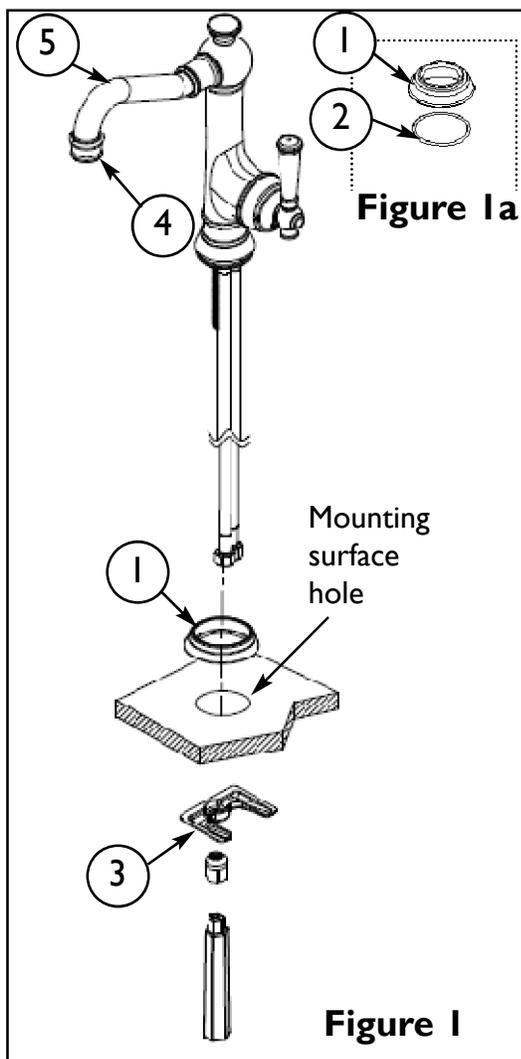

ORDER 2-786 FOR  
2470-5303

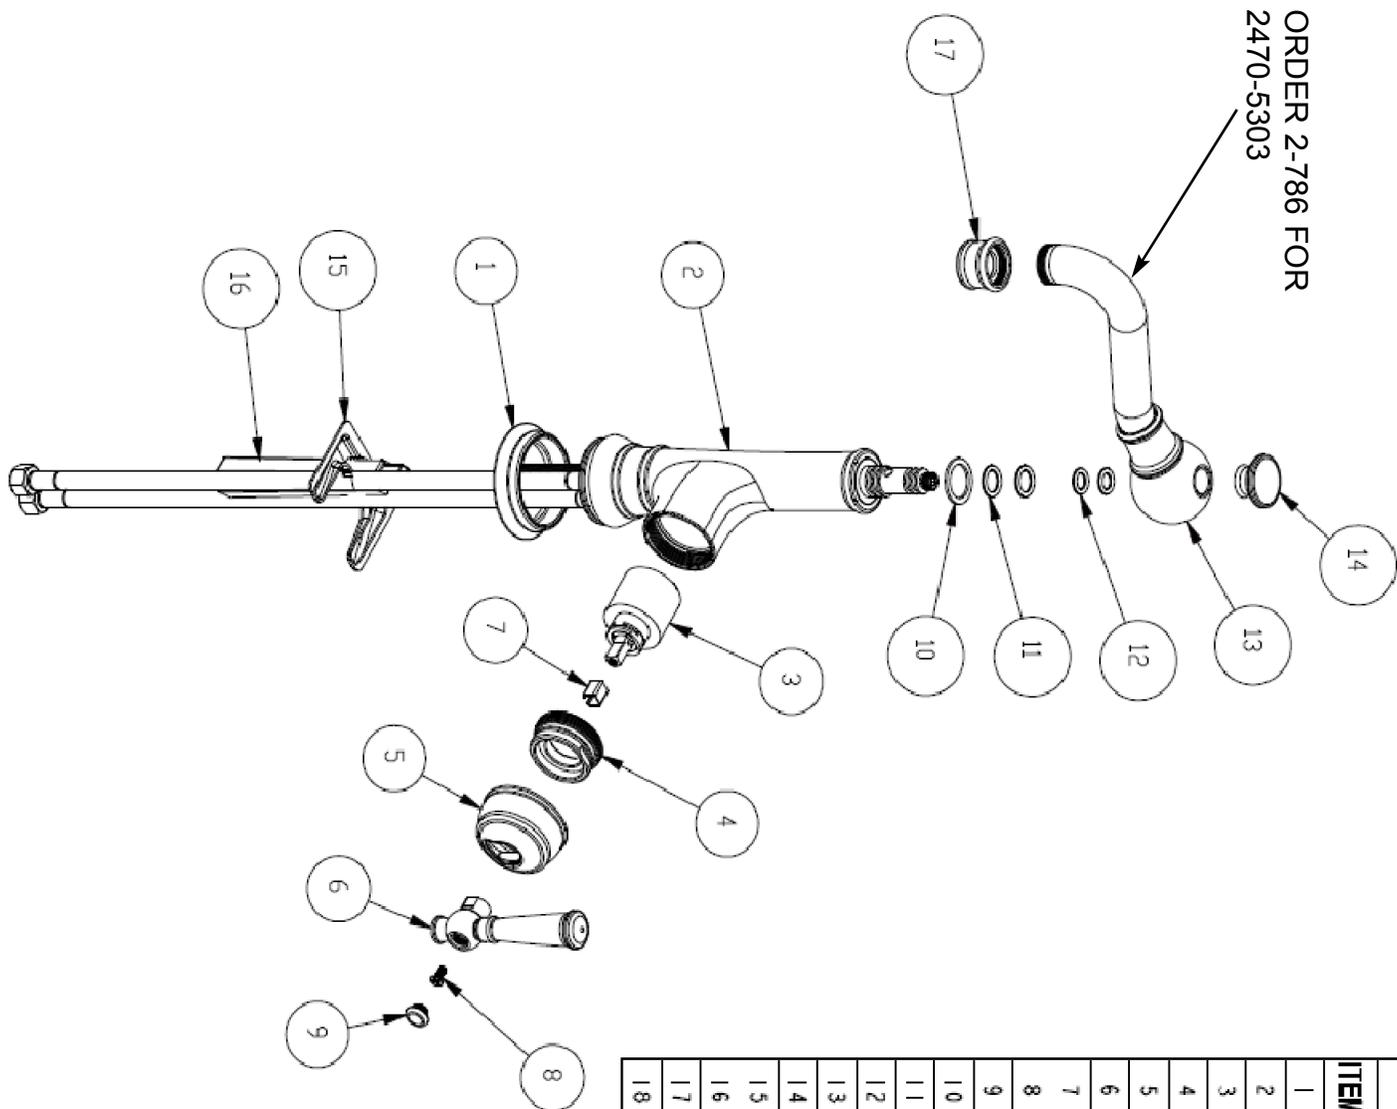

BILL OF MATERIAL (CURRENT LEVEL)				
ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY
1	2-783	BASE RING ASM	ASSEMBLY	1
2	2-787	MAIN BODY ASM, JACOBEAN	ASSEMBLY	1
3	1-064	SINGLE LEVER CARTRIDGE	PART	1
4	2-781	CARI. RETAINER ASM	ASSEMBLY	1
5	2-793	HANDLE HUB ASM, JACOBEAN	ASSEMBLY	1
6	2-733	HANDLE ASM, JACOBEAN	ASSEMBLY	1
7	9-534	CARTRIDGE STEM INSERT	PART	1
8	92035	SCREW- FLT HD M4 X .7 X 10mm	PART	1
9	2-718	CAP ASM	ASSEMBLY	1
10	9-353	WASHER, TEFLON 1"OD X .7 ID	PART	1
11	9-027	O-RING (AS-568A NO.:112)	PART	2
12	9-025	O-RING (AS-568A NO.:110)	PART	2
13	2-789	SPOUT ASM	ASSEMBLY	1
14	1-855	FINIAL NUT	PART	1
15	1-280	MOUNTING BRACKET	PART	1
16	1-285	MOUNTING NUT	PART	1
17	2-746	AERATOR ASSEMBLY	ASSEMBLY	1
18	92297	INSTALLATION TOO., WRENCH	PART	1

Figure 3 - Spare Parts