


Tile Flange Kit Installation Instructions

Remove the tile flange strips from the shipping carton.

Using the length and width of the tub as a dimensional guide, measure the strips and mark for cutting.

The strips should be mitre-cut at a 45° angle to create a picture-frame-like joint in the corners.




Using a generous bead of silicone sealant, apply a continuous line of sealer around the two or three sides of the tub which are to be tiled. The silicone should be applied to the tub, along the upper radius as shown to the right.

Tape the flange strips into position until secure, and then seal the mitred corners with silicone to ensure a water tight barrier.

Once the flange is secure to the tub, the tub may be moved into its installed position.

Waterproof wallboard may now be installed against the studs, extending down over the top of the flange. Be careful to keep the wallboard away from the top of the tub by at least 1/4".

After the tile is installed, another finish bead of silicone should be applied between the lower course of tile and the tub for best results.

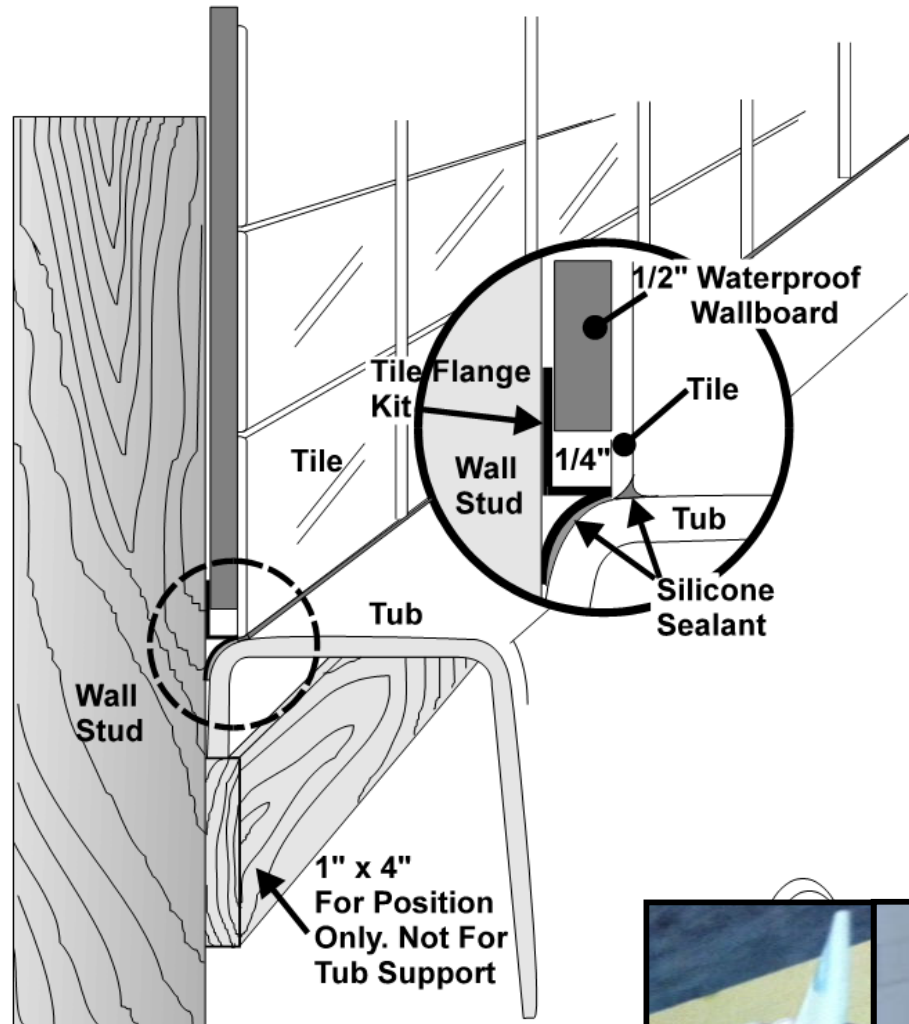

TLK kit consists of:
 1 ea 75" piece
 2 ea 55" pieces

TLKC kit consists of:
 2 ea 75" pieces



Height of Tile Flange
 1 7/8"

