




MOUNTING INSTRUCTIONS FOR HYGIENIC PUSH PADDLE UNIVERSAL ROLL TOWEL DISPENSER

TECHNICAL SUPPORT:
1-866-HELLOGP (435-5647)

**THIS DRAWING IS NOT TO SCALE.
INSTALLATION REQUIRES SCREWS.**

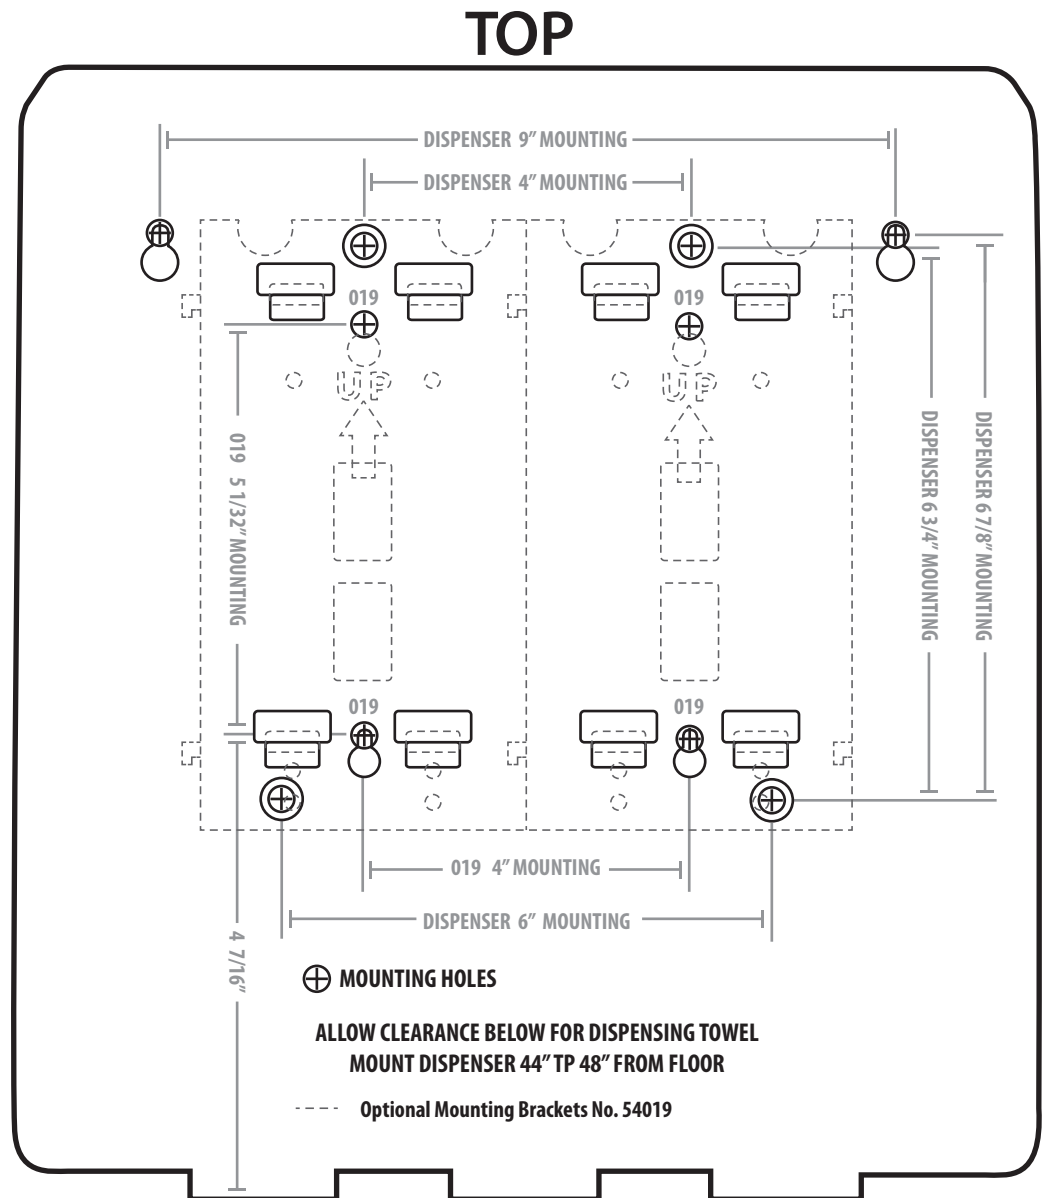

CONCRETE, BRICK, MARBLE OR TILE WALLS

Use 1" No. 8 plastic anchors with
No. 8 pan head self-tapping screws

PLASTER WALLS

Use 3/16" x 3"
toggle bolts

STEEL PARTITIONS

Use 5/8" No. 8 pan head
sheet metal screws

WOODEN WALLS

Use 5/8" No. 8 round head
wood screws




INSTRUCCIONES DE MONTAJE PARA SURTIDOR UNIVERSAL DE TOALLAS EN ROLLO CON PALANCA HIGIÉNICA

ASISTENCIA TÉCNICA:
1-866-HELLOGP (435-5647)

**ESTE DIAGRAMA NO ESTÁ A ESCALA.
LA INSTALACIÓN REQUIERE TORNILLOS.**

PARTE SUPERIOR

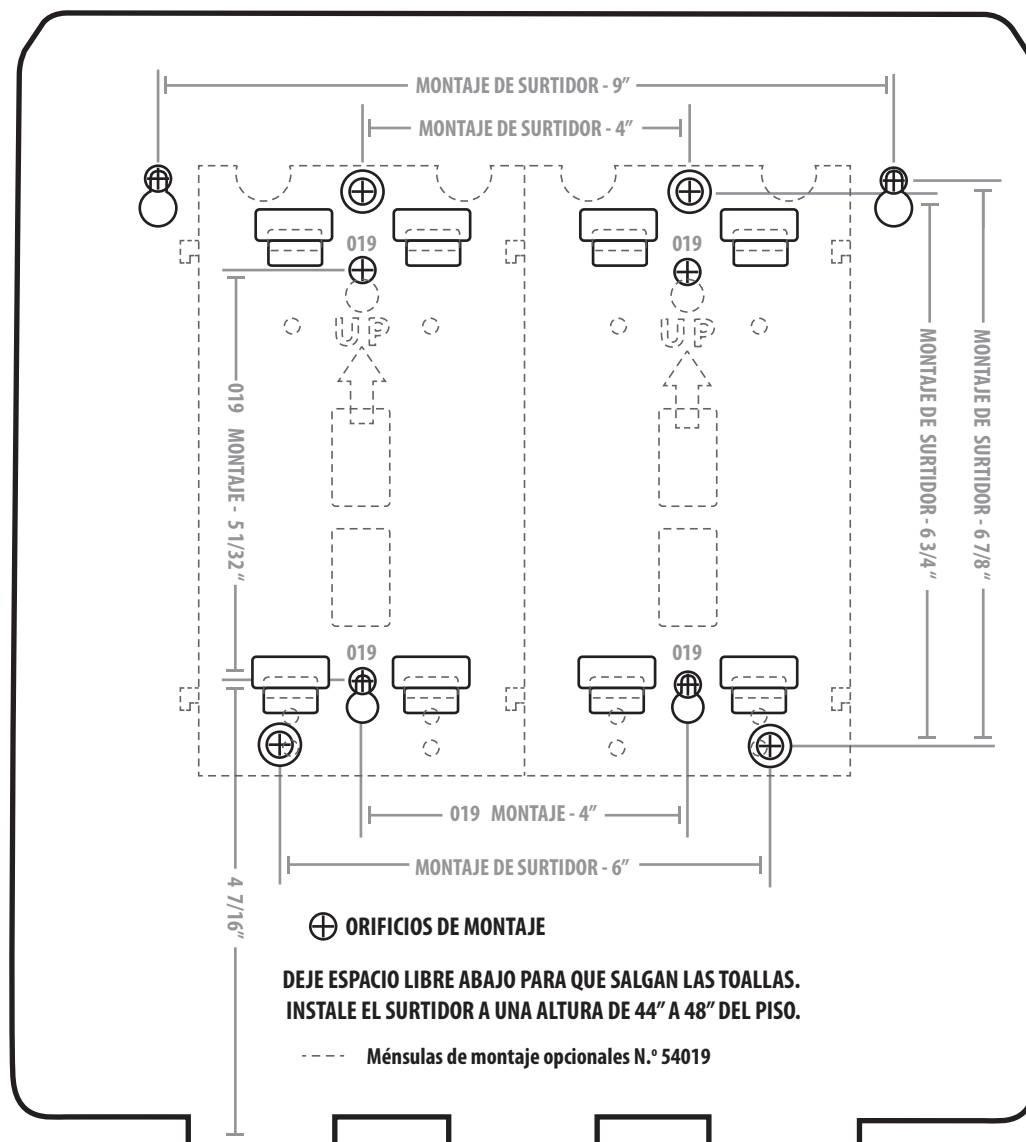

PAREDES DE CONCRETO, LADRILLO, MÁRMOL O AZULEJO

Use taquetes de plástico N.º 8 de 1" con tornillos autorroscantes de cabeza troncocónica N.º 8

PAREDES DE YESO

Use tornillos acodados para anclaje de 3/16" x 3"

PANELES DE ACERO

Use tornillos de cabeza troncocónica para chapa metálica N.º 8 de 5/8"

PAREDES DE MADERA

Use tornillos de cabeza redonda para madera N.º 8 de 5/8"