








# 4700-TRM, 4701-TRM, 4702-TRM Allura® Trim Series

## **Operation & Maintenance Manual**

Мо	del Numbers	Specification
V □ <b>4</b> S	700-TRM falve Trim 701-TRM shower Trim 702-TRM sub/Shower Trim	Tub/shower trim with lever handle includes diverter tub spout and 3 mode showerhead with standard 2.5 gpm (9.5 L/min) flow restrictor. Shower trim with lever handle includes all of the above less diverter tub spout. Valve trim with lever handle includes valve trim only. Components made from metal and nonmetallic materials plated in standard polished chrome finish.
Options/Modifications		Compliance
□		-ASME A112.18.1; CSA B125.1  Warranty
	-LAM Metal finish insert handle  -LR Lever handle  -SS Slip spout on any tub and shower unit -STN Satin Nickel finish	Limited Lifetime - to the original end purchaser in consumer/residential installations.  5 Years - for industrial/commercial installations.  Refer to www.symmons.com/warranty for complete warranty information.
lote: /	Append appropriate -suffix to model number.	

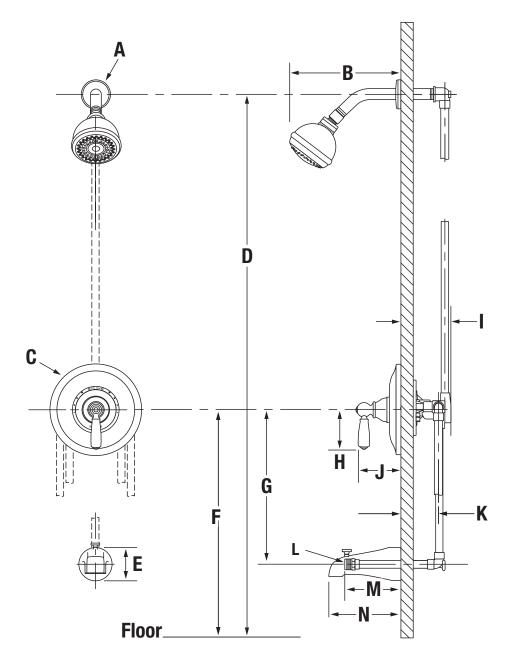

Measurements			
Α	Ø 2 1/2", 64 mm		
В	6 3/4", 172 mm		
С	Ø 7", 178 mm		
D	Ref. 77", 1956 mm		
Е	2 1/2", 64 mm		
	Ref. 32", 813 mm		
F	(4702-TRM)		
-	Ref. 42", 1067 mm		
	(4700-TRM, 4701-TRM)		
G	12", 305 mm		
Н	3 1/8", 79 mm		
ı	3 1/2", 89 mm		
J	4", 102 mm		
K	Rough-in		
_ r\	2 3/8" ± 1/2", 60 mm ± 13 mm		
L	1/2" NPT		
М	4", 102 mm		
N	5 1/4", 133 mm		

### Notes:


- All dimensions measured from nominal rough-in (see K as reference).
   Dimensions subject to change without notice.

#### Installation

#### Note:


For valve body installation, please see valve body manual.

1) Install escutcheon (K) to shower valve. Secure with two screws (J). Snap dial (I) into escutcheon.

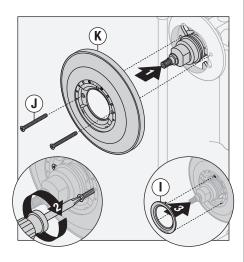


**Note:** Logo on dial should be in the 6 o'clock position.

2) Install dome cover (H) to valve by turning clockwise.

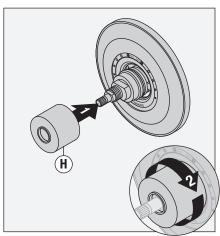


3) Install handle (G) to valve. Secure handle with star washer (F) and screw (E). Attach plug button (D) to handle.

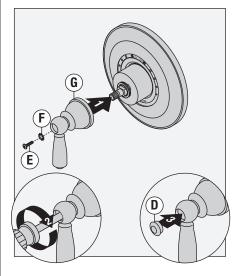


**Note:** Handle should be facing the 6 o'clock position.

4) Install tub spout (L) to pipe fitting. Turn clockwise to secure.

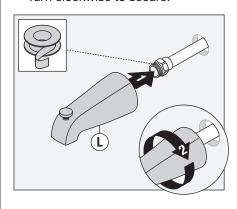

5) Attach shower arm (C) and flange (B) to vertical shower pipe turning clockwise to tighten.

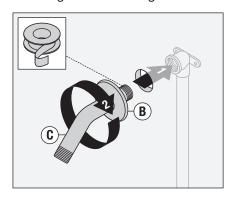

6) Install showerhead (A) to shower arm (C) turning clockwise to tighten.

