




365DTB-18, 365DTB-24, 353TB-18, 353TB-24,
353TS-22, 353TR, 353RH, 353DRH, 353TH,
353TP, 353TPC, 353SD, 353-SD2

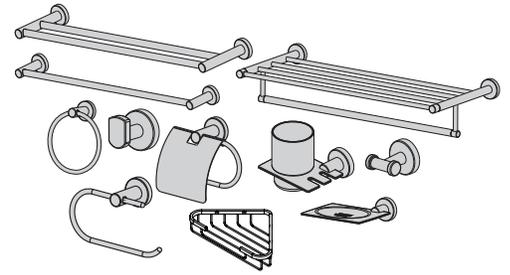


Accessory Suite


Operation & Maintenance Manual

Model Numbers	Specification
<ul style="list-style-type: none"> <input type="checkbox"/> 353DTB-18 <i>18" Double Towel Bar</i> <input type="checkbox"/> 353DTB-24 <i>24" Double Towel Bar</i> <input type="checkbox"/> 363TB-18 <i>18" Towel Bar</i> <input type="checkbox"/> 363TB-24 <i>24" Towel Bar</i> <input type="checkbox"/> 353TS-22 <i>22" Towel Shelf</i> <input type="checkbox"/> 363TR <i>Towel Ring</i> <input type="checkbox"/> 353RH <i>Robe Hook</i> <input type="checkbox"/> 353DRH <i>Double Robe Hook</i> <input type="checkbox"/> 353TH <i>Toothbrush Holder</i> <input type="checkbox"/> 353TP <i>Toilet Paper Holder</i> <input type="checkbox"/> 353TPC <i>Toilet Paper Holder</i> <input type="checkbox"/> 353SD <i>Soap Dish</i> <input type="checkbox"/> 353-SD2 <i>Soap Basket</i> 	<p>All premium accessories constructed from metal materials, plated in standard polished chrome finish.</p> <hr/> <h3>Warranty</h3> <p>Limited Lifetime - to the original end purchaser in consumer/residential installations. 10 Years - for commercial/industrial installations. Refer to www.symmons.com/warranty for complete warranty information.</p> 
<h3>Modifications</h3> <ul style="list-style-type: none"> <input type="checkbox"/> -STN <i>Satin Nickel finish</i> <p>Note: Append appropriate -suffix to model number.</p>	


Dimensions

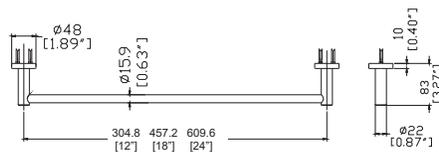


353TB-18 & 353TB-24

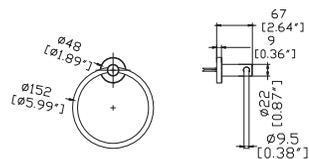

353TR

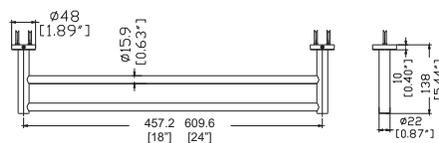


353DTB-18 & 353DTB-24

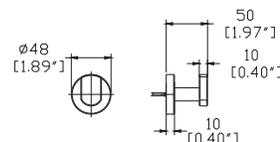

353RH


Installation

- 1) Measure and mark centerlines for mounting bracket installation using dimensions on page 2.

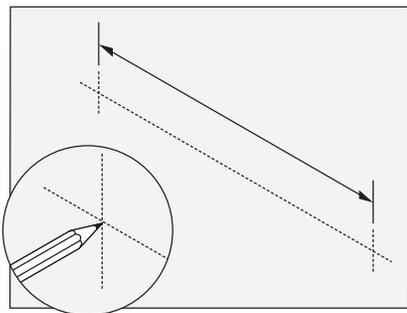


Note:
365DTB-18, 353DTB-24, 353TB-18, 353TB-24, 353TS-22 only.
Make sure both centerline marks are level.

- 2a) **Dry Wall Option:** Place mounting brackets into desired position. Using brackets as a guide, carefully drill 5/16" holes into wall. Remove brackets and install anchors.


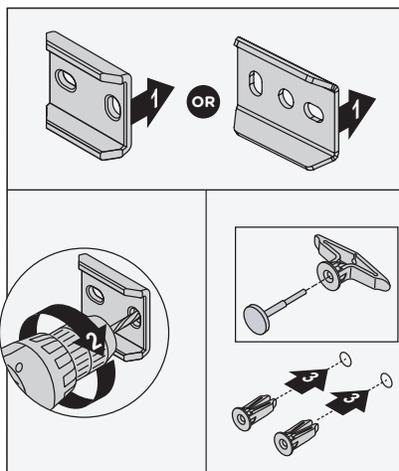


Note:
For plaster walls 1/2" thick or less, insert toggle tool into toggle to secure behind wall prior to installing accessory trim.


- 2b) **Stud Option:** Center bracket on centerline. Using brackets as a guide, carefully drill 3/16" holes into wall.

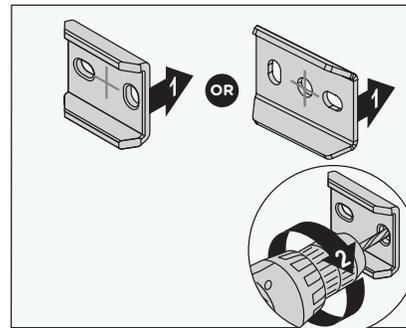


- 5) Hang top of accessory on mounting bracket. Lower into position.

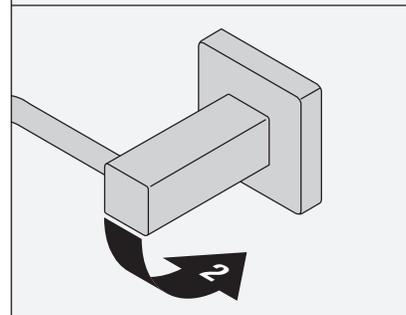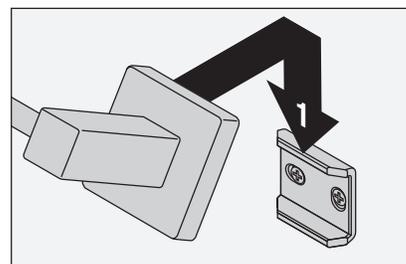


353-SD2 Only: Carefully drill 5/16" holes into wall and install anchors. Secure to wall using screws.

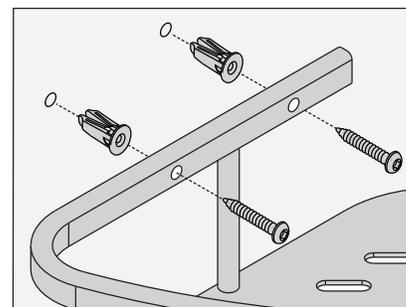

- 3) With mounting brackets in position, secure to wall using screws.
Use bracket as screw template

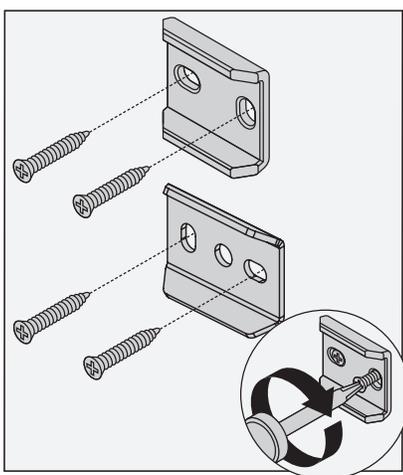

- 4) Secure with set screw.

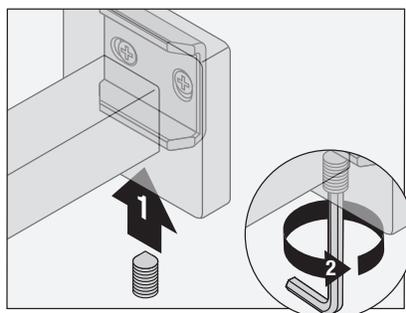

Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.