

DOOR BOTTOMS

Applies to the following door bottoms:

368_N, 315_N, 315SSN, 321SSN, 321_N

Testing/Ratings:




BHMA
CERTIFIED



Category J gaskets for use with listed steel frames and/or classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes.

Tools Required:

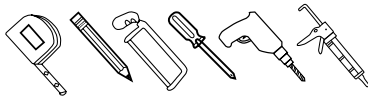

Installation Instructions:

1. Measure, mark and trim door bottom sweep to full width of the door.
2. Drill pilot holes in door at marks.
3. Mount to door with supplied fasteners.