

2_HAL_5126/715.12.12

3_HAL_5126/715.12.12


DURAVIT


Vero

Schablone und Montageanleitung Einbauwaschtisch
 Template and mounting instructions Vanity basin
 Gabarit et notice de montage Vasque à encastrer
 Sjabloon en montagehandleiding Inbouwwastafel
 Dima e istruzioni di montaggio Lavabo da incasso
 Modelo e instruções de montagem Lavabo empotrado
 Şablon ve montaj kılavuzu Gömme lavabo
 样版和安装说明 嵌入式洗脸盆

03155000 . . .
 # 03155500 . . .
 # 0330430000
 # 0330480000


Best.-Nr. 5126/715.12.12 We reserve the right to make technical improvements and enhance the appearance of the products shown.



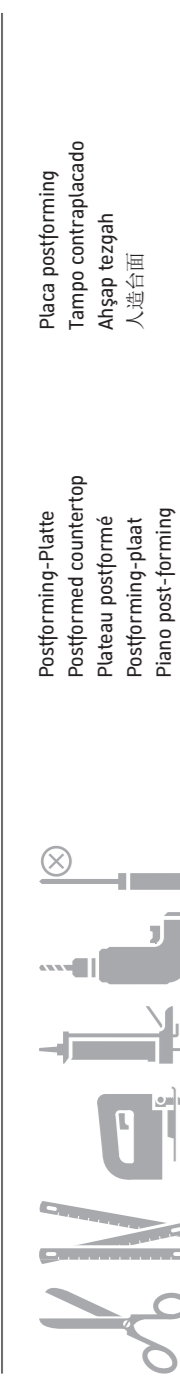

Performing-Platte
Papanan-pangguno
Papanan-pangguno
Papanan-pangguno
Papanan-pangguno

Placa de piedra natural
Natural stone
Natural stone
Natural stone
Natural stone

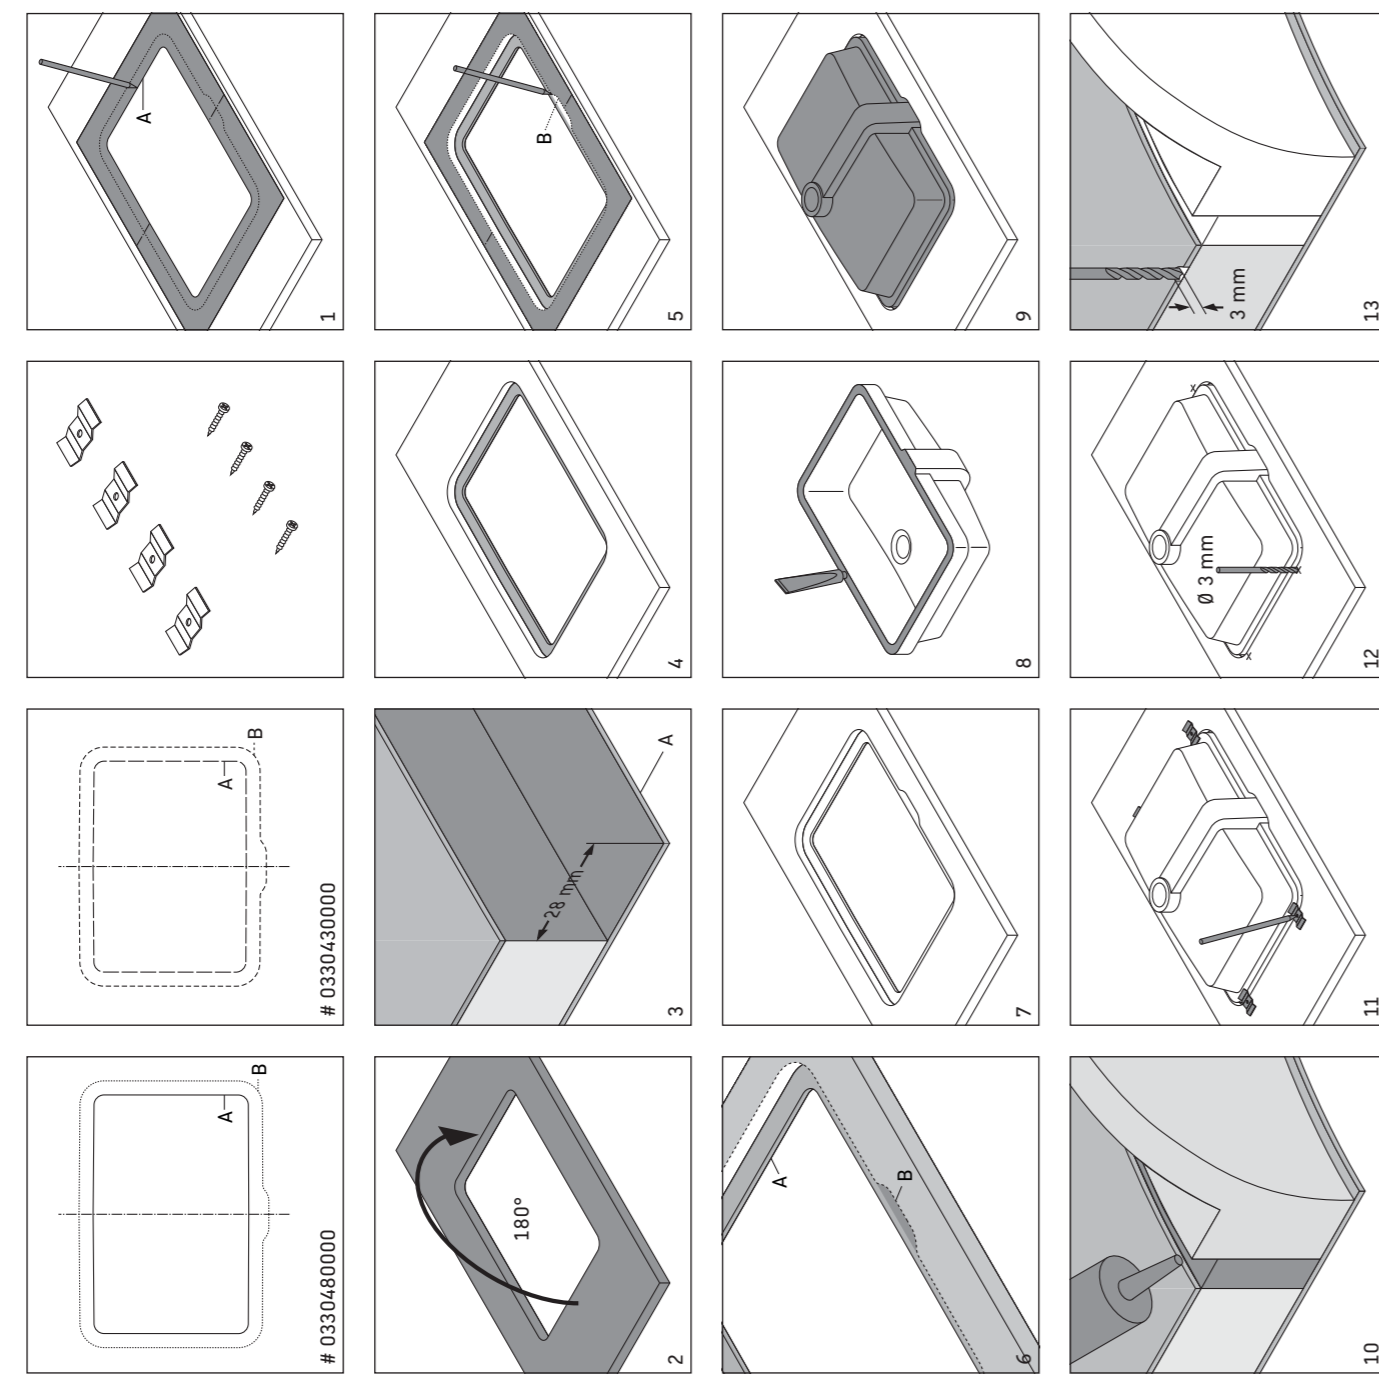


4 HAL_1324/0713.12.22




Placa de piedra natural
Natural stone
Natural stone
Natural stone
Natural stone

Natursteplatte
Natural stone
Natural stone
Natural stone
Natural stone

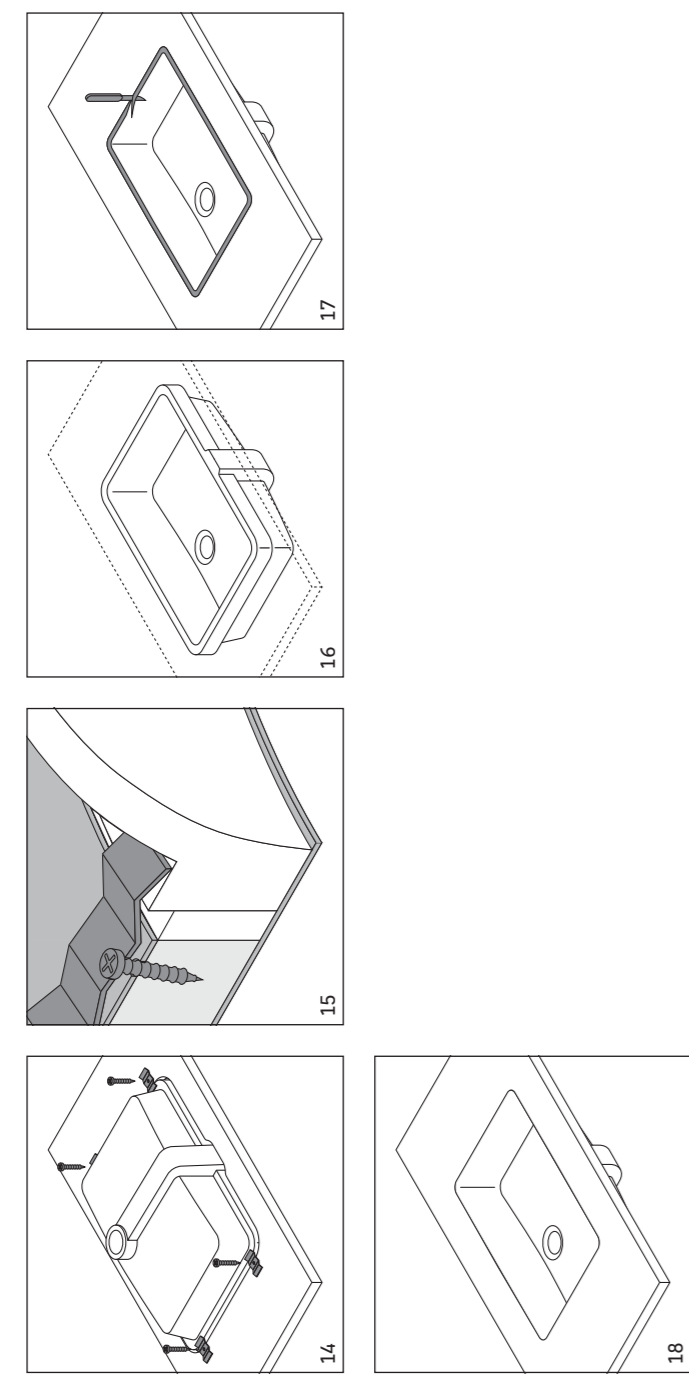


5 HAL_1324/0713.12.22

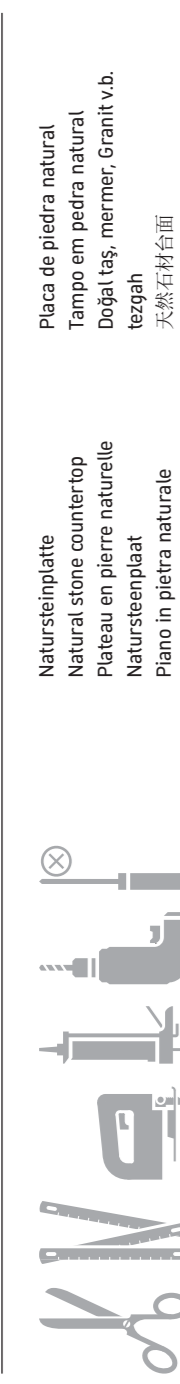


Placa de piedra natural
Natural stone
Natural stone
Natural stone
Natural stone

Natursteplatte
Natural stone
Natural stone
Natural stone
Natural stone

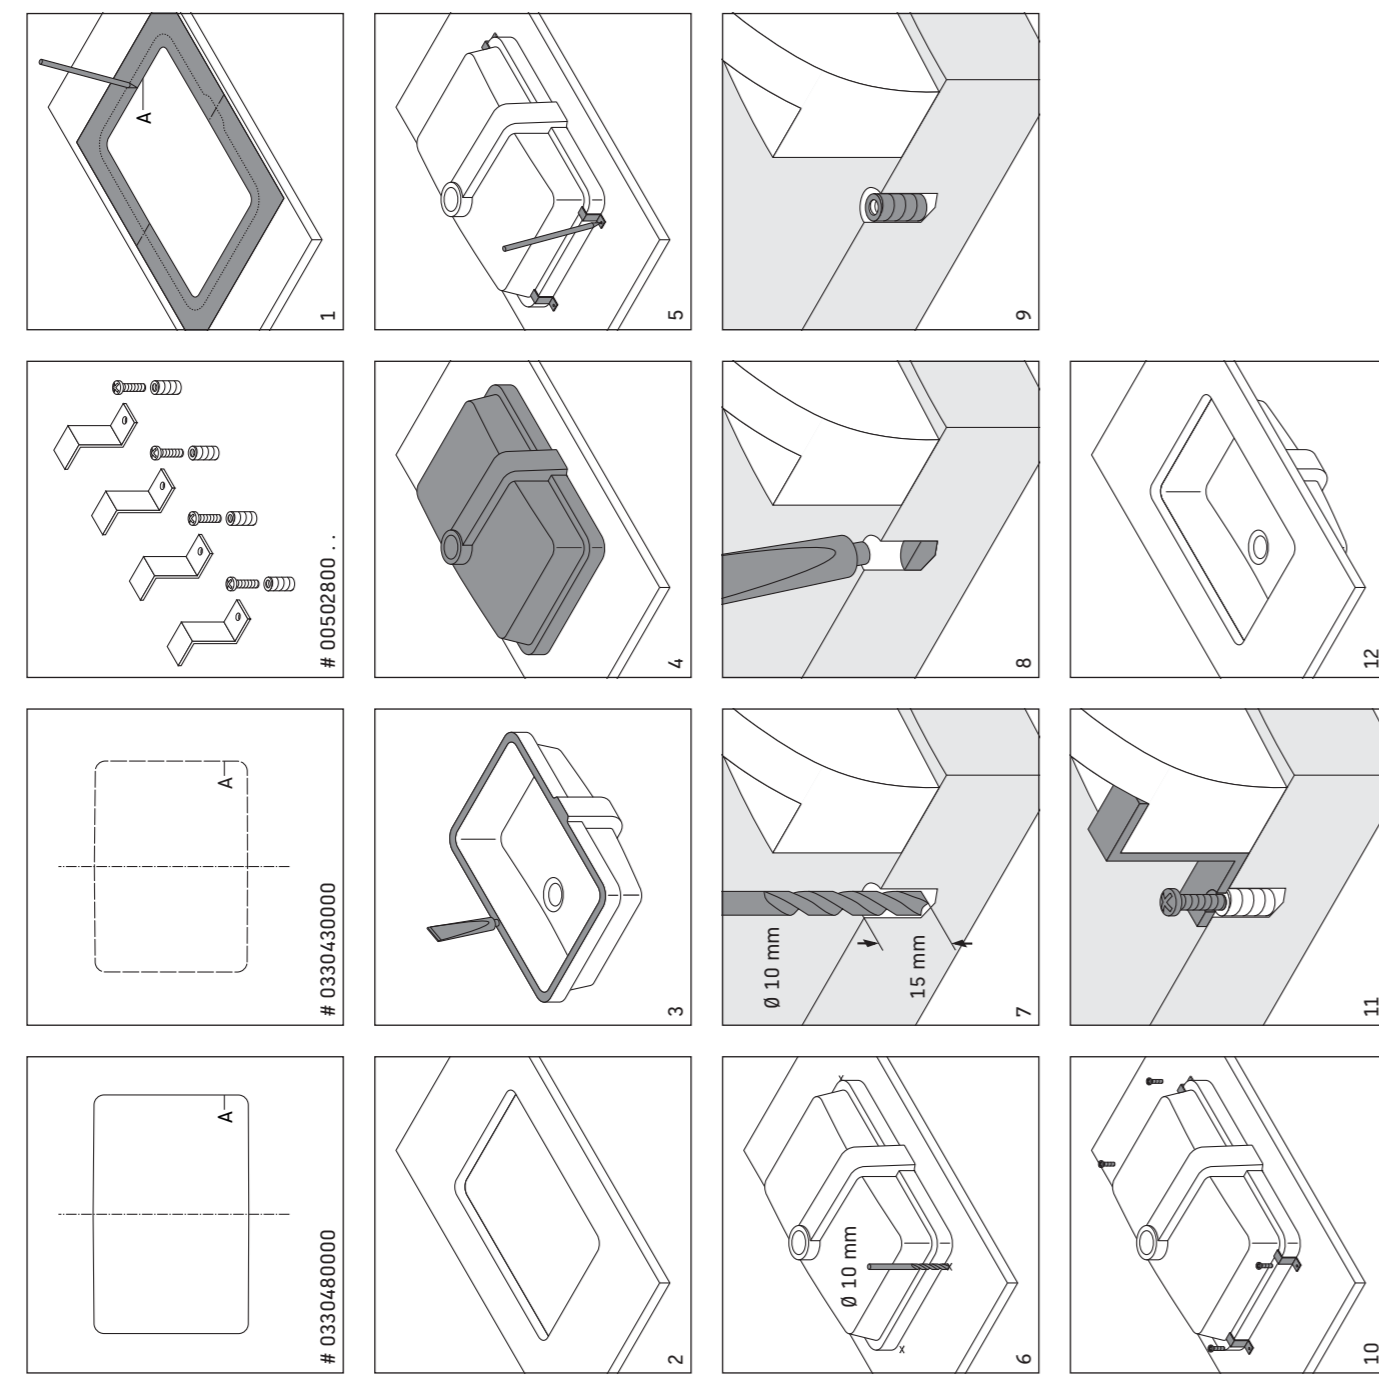

6 HAL_1324/0713.12.22

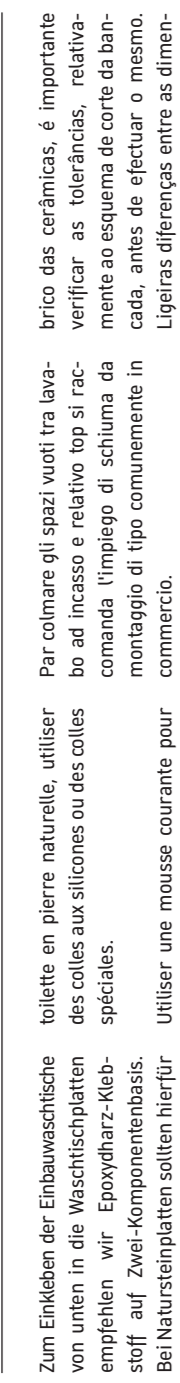


Placa de piedra natural
Natural stone
Natural stone
Natural stone
Natural stone

Natursteplatte
Natural stone
Natural stone
Natural stone
Natural stone



7 HAL_1324/0713.12.22

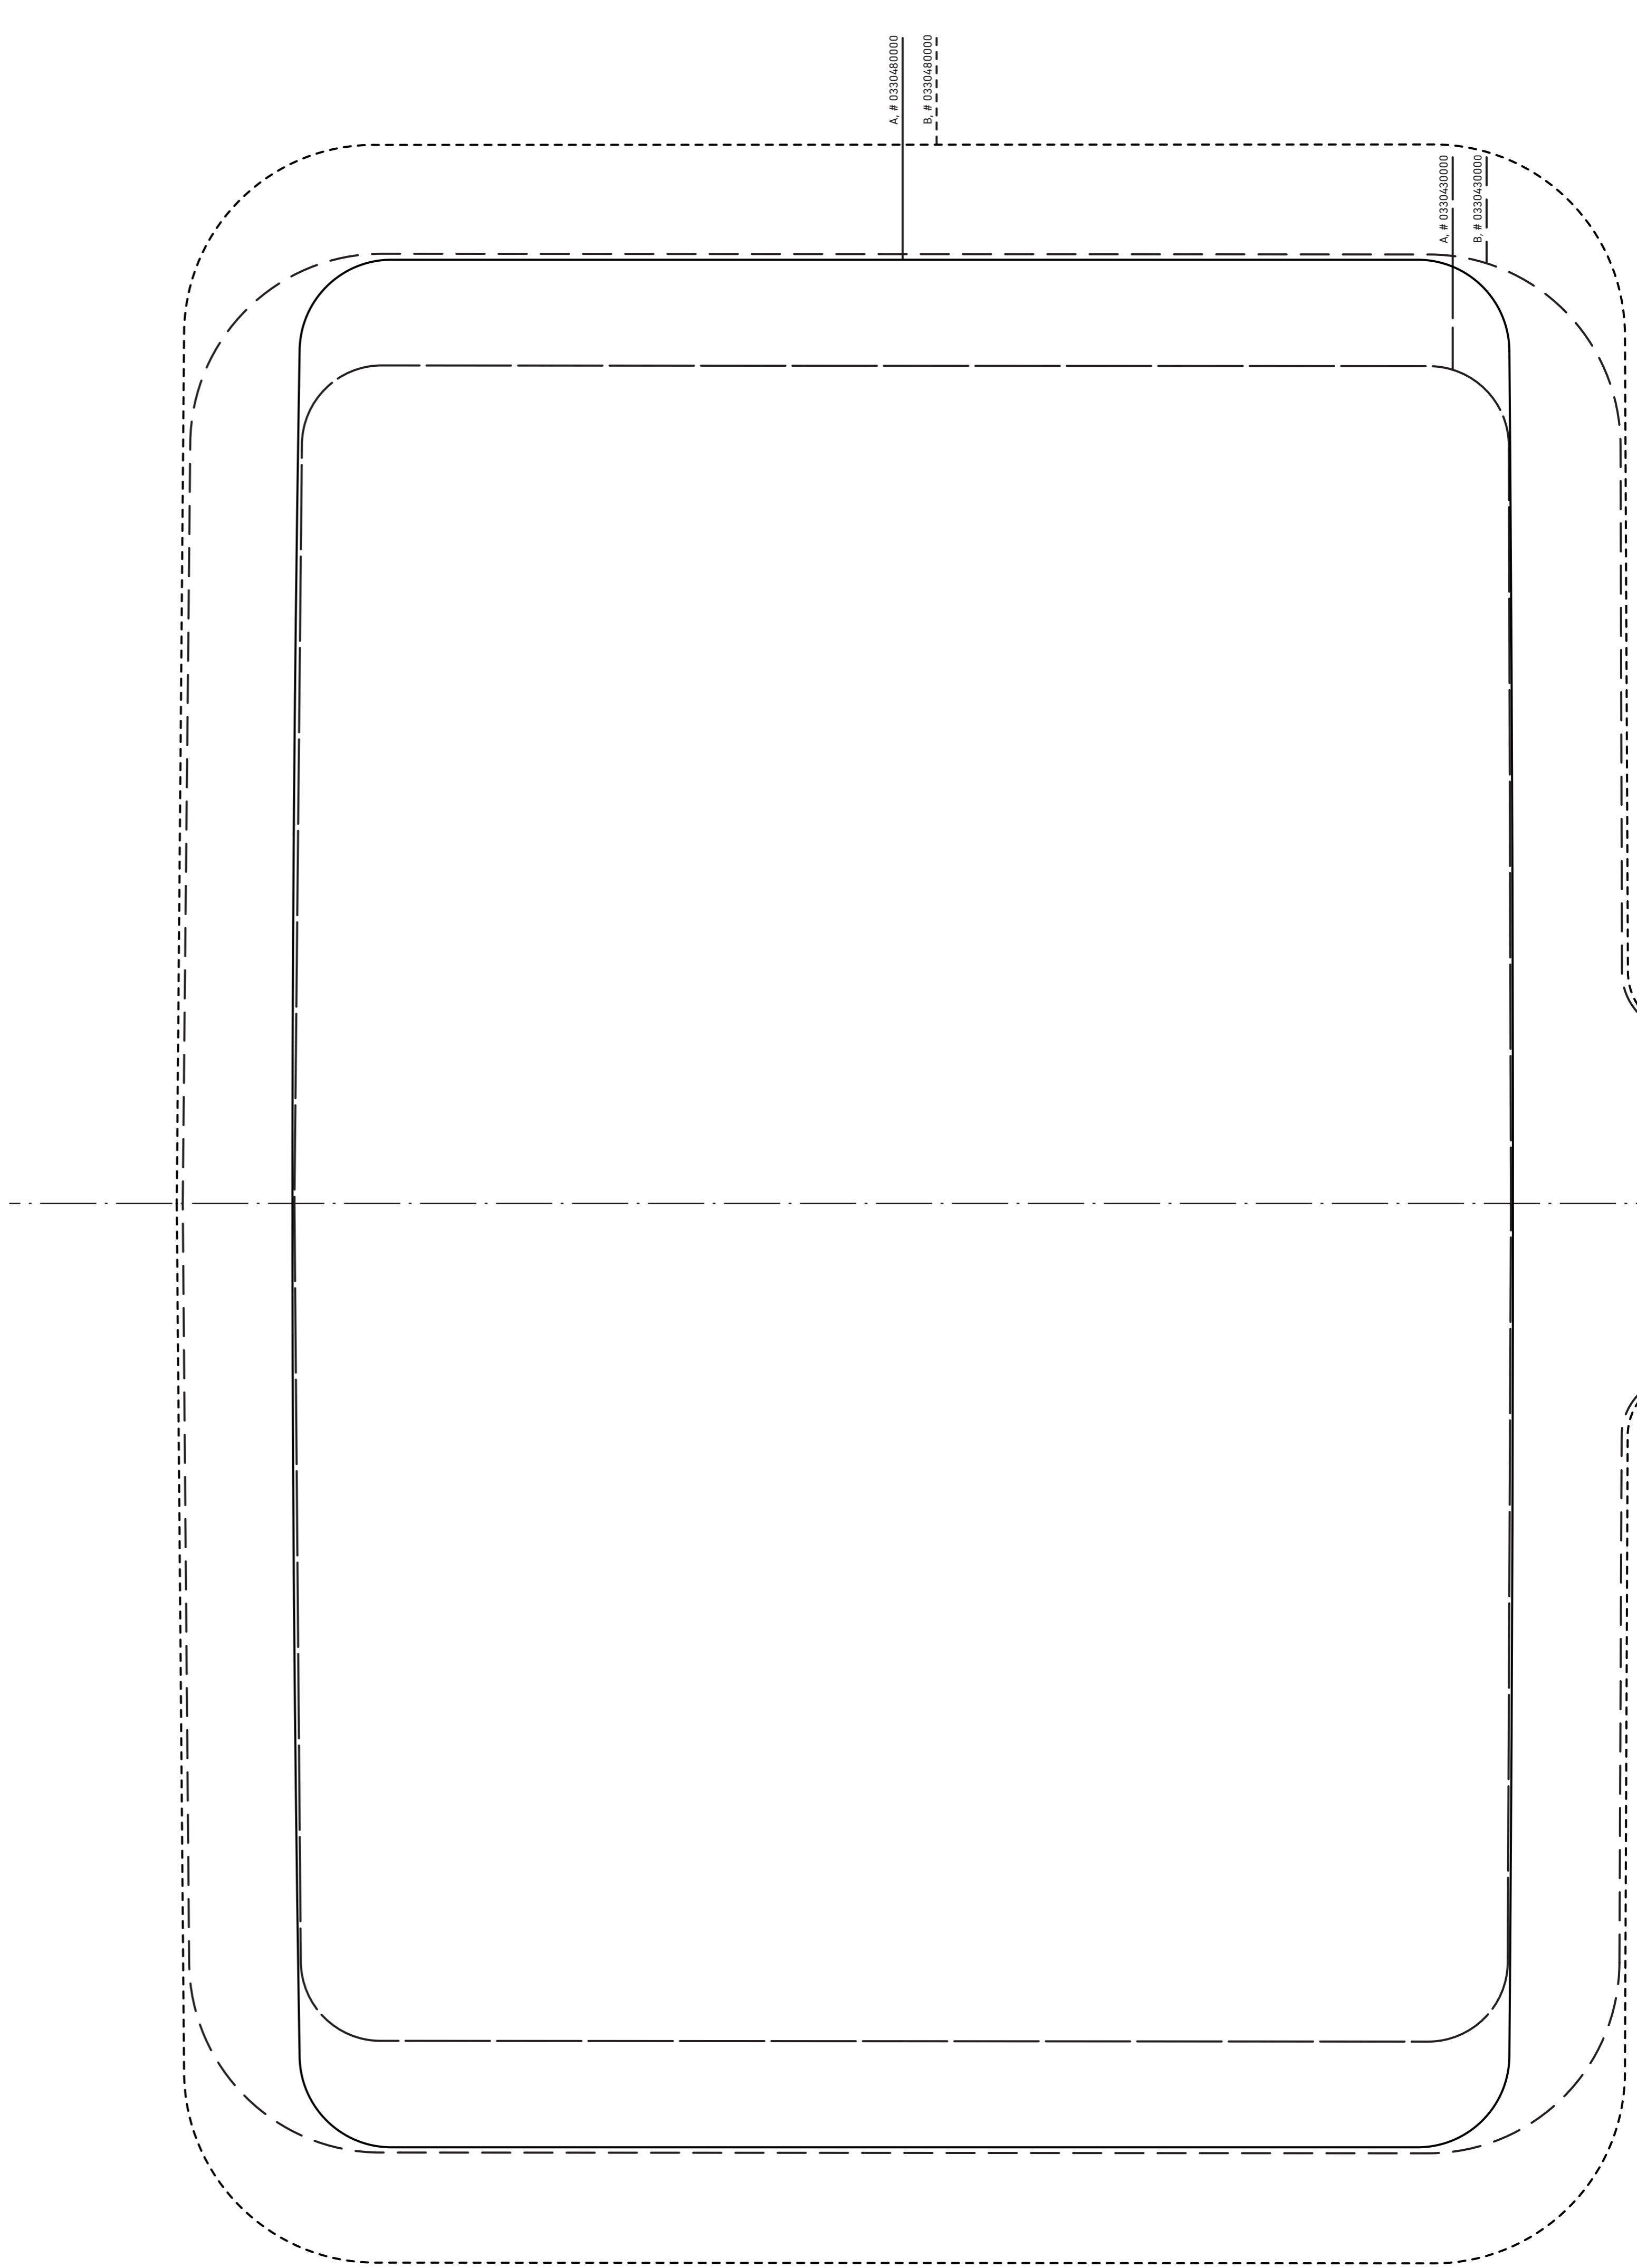

Achtung! Überlaufkanal vorne!
Attention! Canal de trop-plein à l'avant!
Let op! Overloop of aan de voorzijde!
Atención! Canal rebosadero está delante.
Обратите внимание на передний перелив!
注意! 溢流管位于前方!

