


5 INSTALL HAND SHOWER SLIDE BAR

NOTE

REFER TO INSTALLATION INSTRUCTIONS (M968637) SUPPLIED WITH SHOWER SYSTEM KIT FOR COMPLETE INSTALLATION AND REPAIR PART INFORMATION.

- The height and location of the SLIDE BAR is optional. It can be installed to the right or left side of the R120SS VALVE.

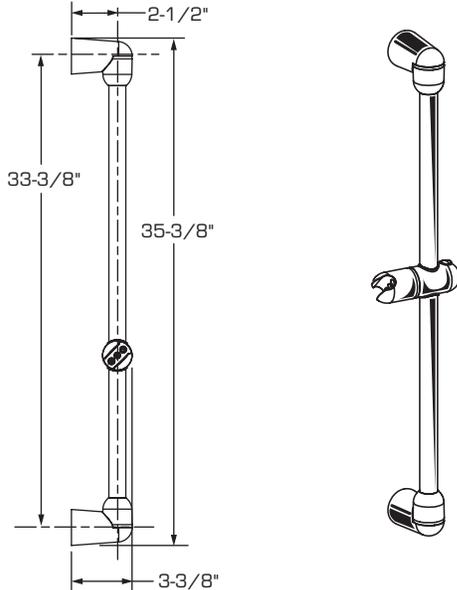


6 INSTALL HOSE AND HAND SHOWER TEST SHOWER SYSTEM

NOTE

REFER TO INSTALLATION INSTRUCTIONS (M968637) SUPPLIED WITH SHOWER SYSTEM KIT FOR COMPLETE INSTALLATION AND REPAIR PART INFORMATION.

- Place the HAND SHOWER into the SLIDE BAR after all hose connections are made. The installation of the SHOWER SYSTEM KIT is now complete.
- Turn on water supplies and check all functions of the SHOWER SYSTEM KIT. Check for any leaks.

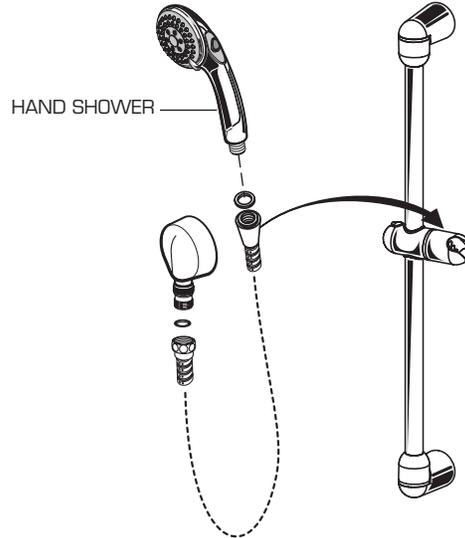

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.


DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard

PRESSURE BALANCE TEMPERATURE/VOLUME CONTROL VALVE

MODEL NUMBER

R120SS

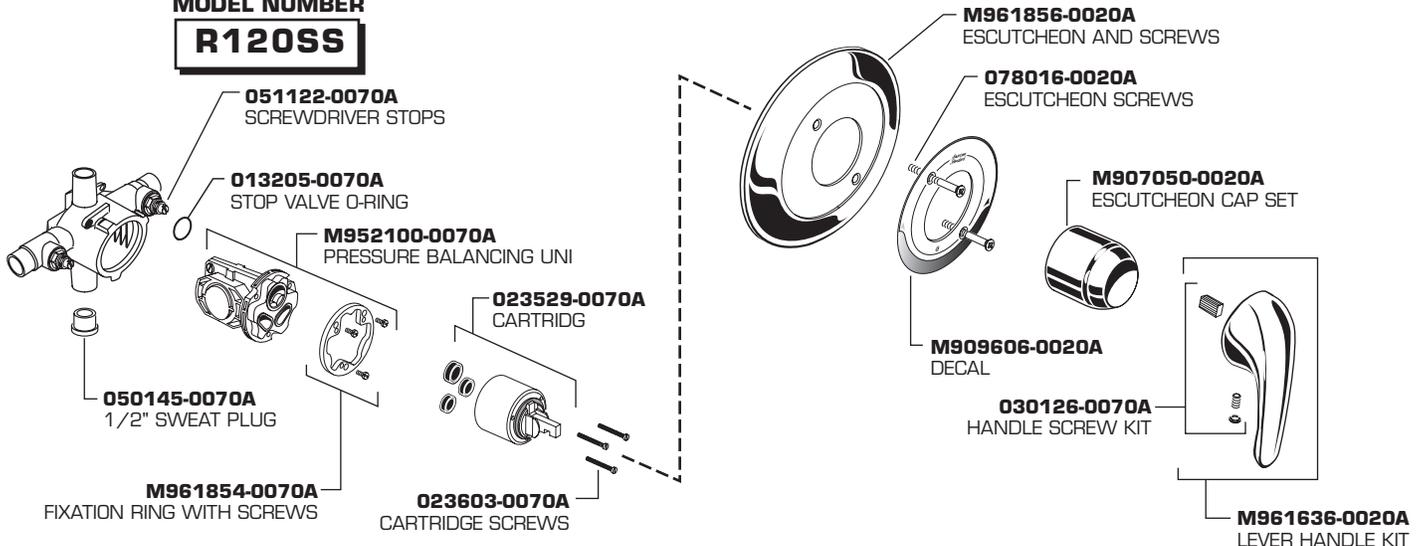

COLONY SOFT
VALVE TRIM
MODEL NUMBER

T675.500



3-FUNCTION HAND SHOWER

1660766.002
(1.5 gpm)

1660767.002
(2.5 gpm)

WALL SUPPLY

8888.037.002

8888037.002
WALL SUPPLY



M962520-0020A
CHECK VALVE




030782-0020A
HOSE KIT



METAL HOSE

8888.035.002


M962506-0020A
SUPPORT BRACKET

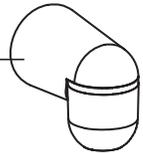

36" SLIDE BAR

1660.236.002


M919211-0020A
36" SLIDE BAR



M962507-0020A
HAND SHOWER HOLDER



M950105-0070A
HARDWARE KIT



M962506-0020A
SUPPORT BRACKET



HOT LINE FOR HELP

For toll-free information and answers to your questions, call:
1-800-442-1902
Weekdays 8:00 a.m. to 6:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST
IN MEXICO 01-800-839-1200

