


N 6500

Roller (1/4" Offset) Plastic wheel (7/8" O.D.)


Rodillo (Relieve de 6 mm)

La rueda de plástico (22 mm)


Rouleau (6 mm Compenser) La roue du plastique (22 mm)

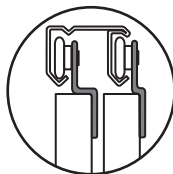

3/4 in. doors
13 mm puertas
13 mm portes

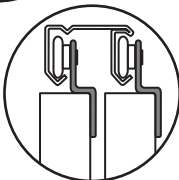


1 in. to 1-1/8 in. doors
2.5 cm a 2.9 cm puertas
2.5 cm à 2.9 cm portes


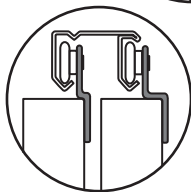


1-3/8 in. doors
3.5 cm puertas
3.5 cm portes

Roller offset / Relieve de rodillo / Compenser rouleau:

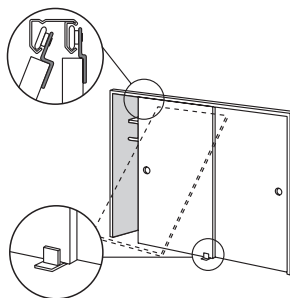

Remove center guide, lift up and tilt door out.
Saque la guía central, levante la puerta e inclínela hacia afuera.
Enlevez le guide central, levez et inclinez la porte vers l'extérieur.

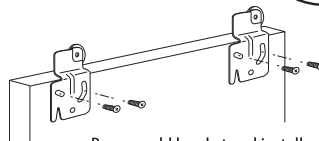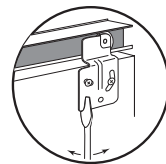

Remove old bracket and install new one. Level doors, then tighten screws. Check for proper adjustment before installing guide.

Quite el sostén viejo y ponga el nuevo sostén. Puertas de nivel, luego apriete los tornillos. Chequee que esté adecuadamente ajustada antes de instalar el guía.

Enlevez l'ancien support et remplacez-le. Portes de niveau, puis serrez les vis. Vérifiez le bon réglage, avant d'installer le guide.

6500-INS

©2025 Prime-Line

1980 Orange Tree Lane, Suite 100, Redlands, CA 92374

For warranty information and other available finishes, visit our website: primelineparts.com



Tools needed / Herramientas necesarias / Outils nécessaires