





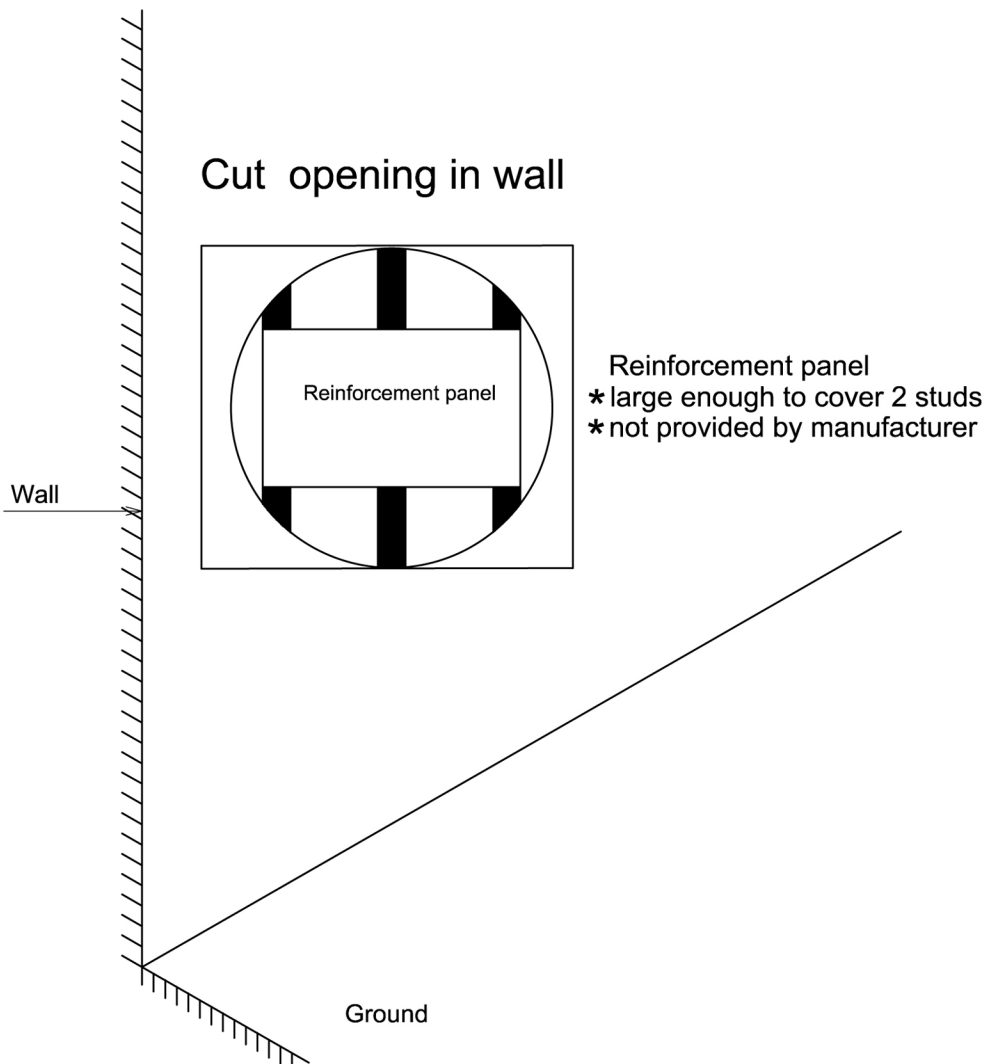



1512-WV 3621

## Step 1




PARTS INCLUDED				TOOLS AND MATERIALS		
1		280*150*80*3MM	2 PCS			
2		50*50*50*3MM	2 PCS			
3		Φ8 X 38mm	12 PCS			
4		Φ3.5*15MM	10 PCS			

**Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential resulting from possible printing error in instruction**

1512-WV 3621

## Step 2


Mouting bracket must  
be attached to  
reinforcement panel.

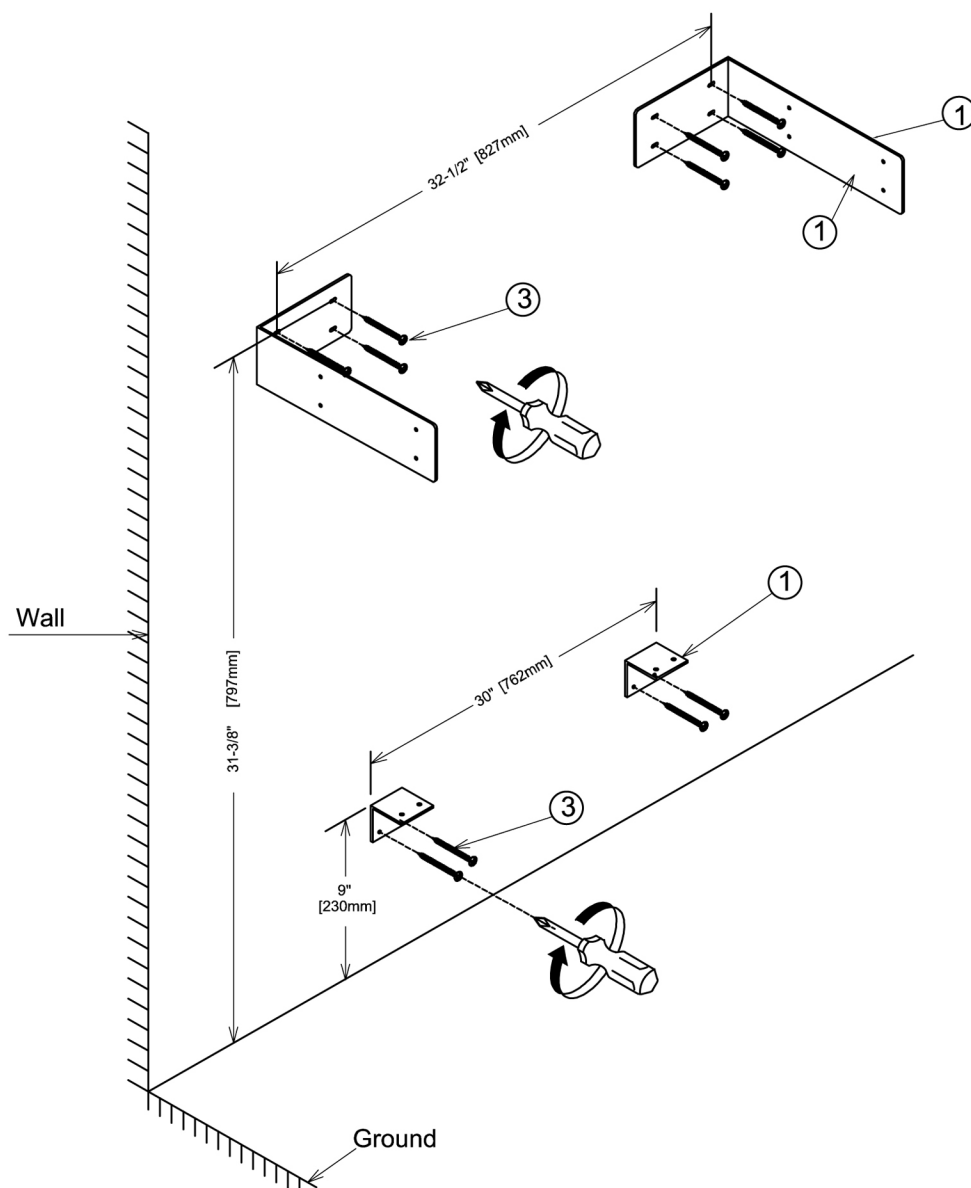


Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential resulting from possible printing error in instruction

1512-WV 3621

### Step 3

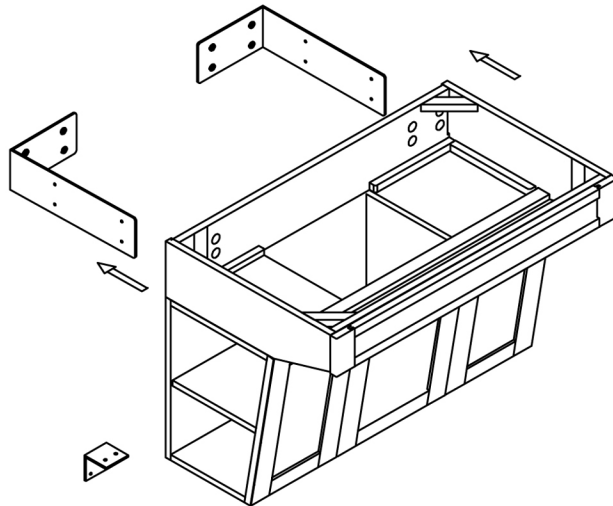

### Step 4

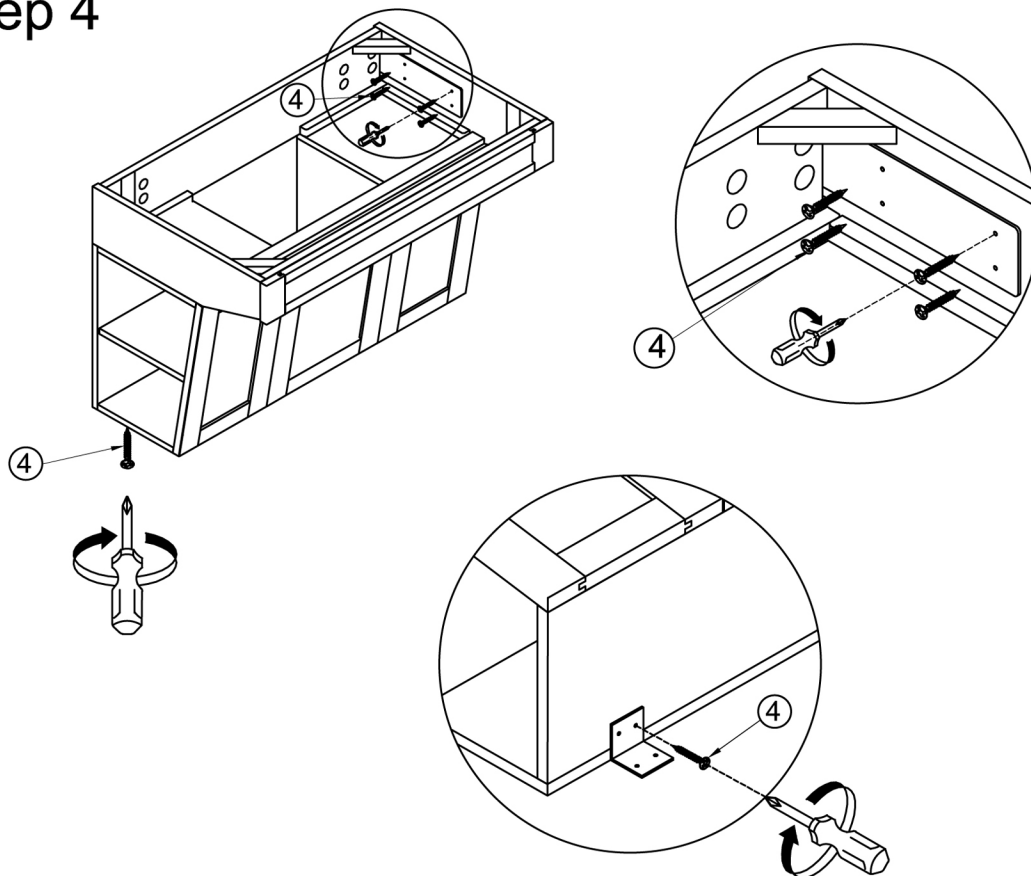

Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential resulting from possible printing error in instruction