

Towel Ring / Garment Hook Installation Instructions Model No. 13-09, 13-12

Recommended Installation by a Professional Contractor

1. Locate BASE (1) on mounting surface and mark hole location. (See Fig. 1)

2. Drill hole in wall at point marked using the appropriate drill size:

- Wood Screw (#10 x 1-3/4") - use: 1/8" Drill
- Toggle Screw (10-24 x 3") - use: 9/16" Drill

3. Fasten BASE (1) to wall using either WOOD/TOGGLE SCREWS (2).
(See Fig. 2)

4. Place ESCUTCHEON (3) onto the BASE (1). (See Fig. 3)

4a. Towel Ring: Slide END POST (4) onto BASE (1) and secure into place with SETSCREW (5). (See Fig. 4)

4b. Garment Hook: Slide END POST (4) onto BASE (1) and secure into place with SETSCREW (5). (See Fig. 5)

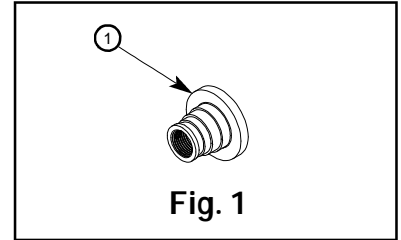


Fig. 1

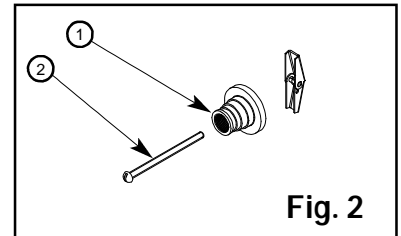


Fig. 2

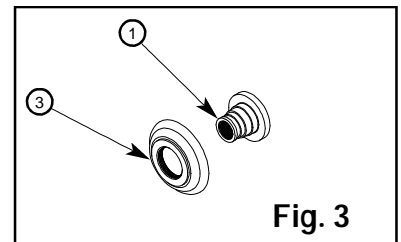


Fig. 3

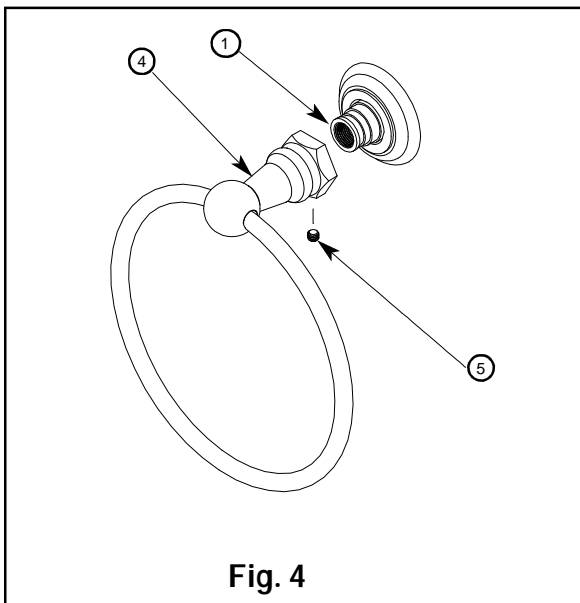


Fig. 4

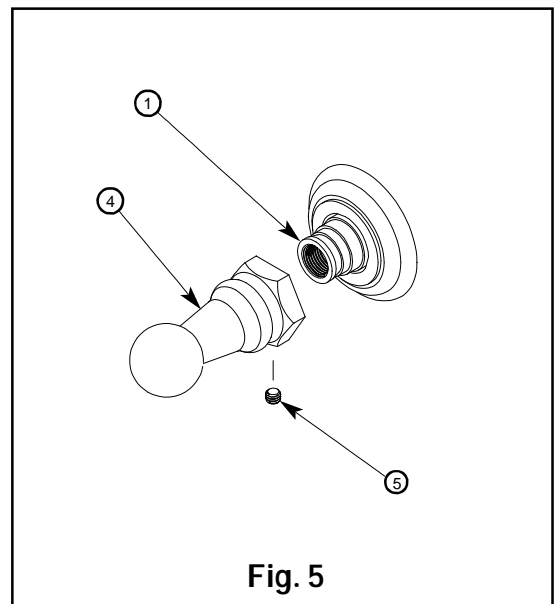


Fig. 5

NEWPORT BRASS
The Luxury of Style