

Installation Guide

Accessories

P34401, P34402, P34403,
P34406, P34407, P34408,
P34410

Français, page "Français-1"
Español, página "Español-1"

KALLISTA®

1078044-2-A

Thank You For Choosing Kallista

Thank you for choosing Kallista. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us from within the USA or Canada at 1-888-4-KALLISTA (1-888-452-5547).

Tools and Materials




Level



Tape Measure



Pencil



Assorted Screwdrivers



Drill



5/64"

Plus:


- 5/16" Drill Bit
- Silicone Sealant
- Caulk Gun


Before You Begin



CAUTION: Risk of personal injury. These products are not designed or intended for use as a grab bar or support bar. Do not install any of these products in any area where they are likely to be used inadvertently as a grab bar or support bar.


- Observe all local plumbing codes and building codes.
- Kallista reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

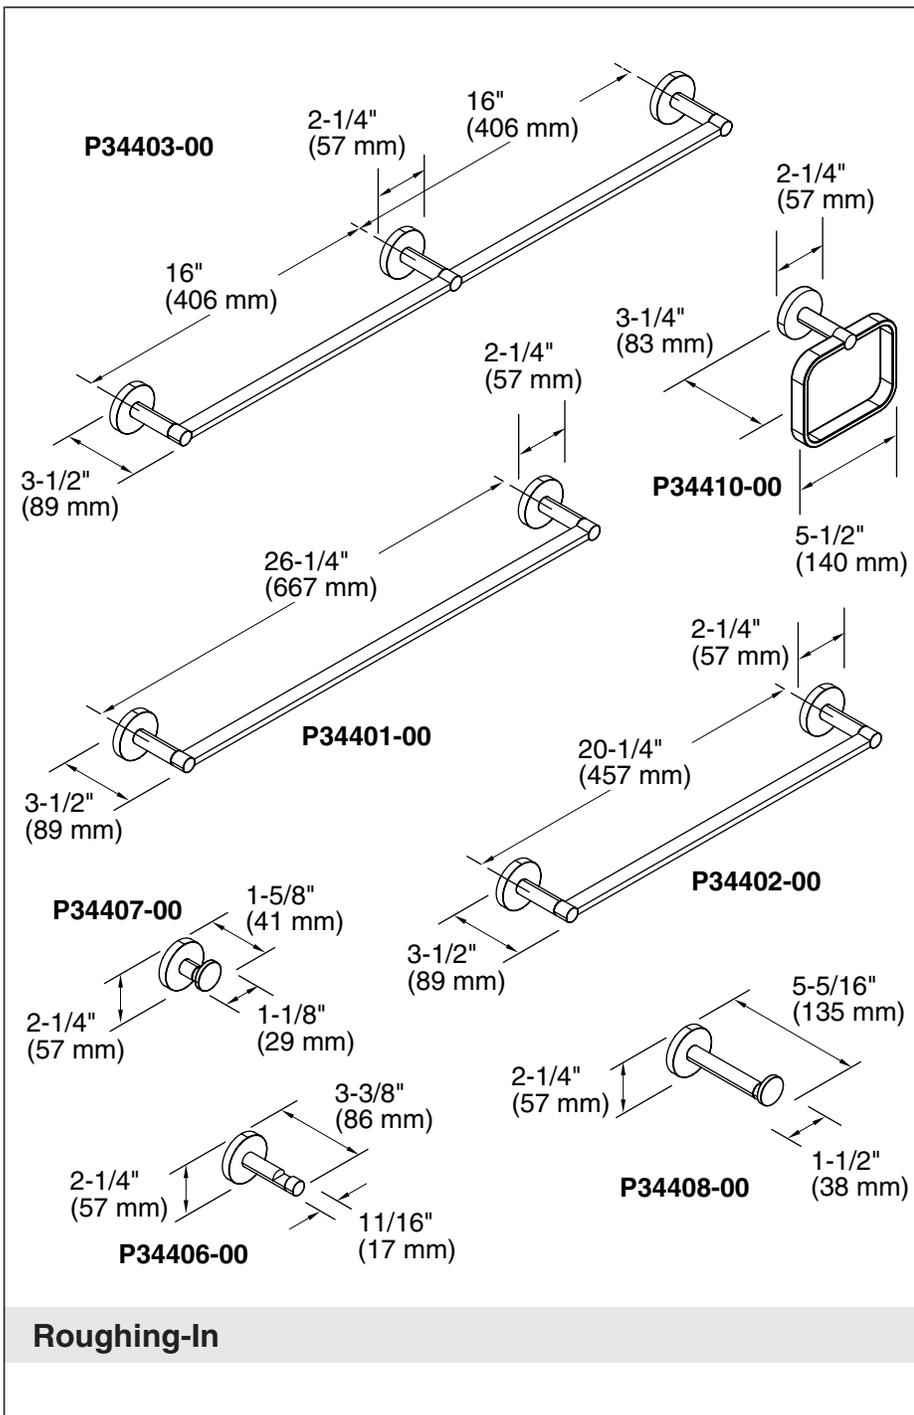

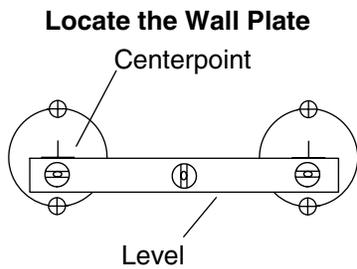

For multiple-post layout only.

Wall Bracket Hole Locations

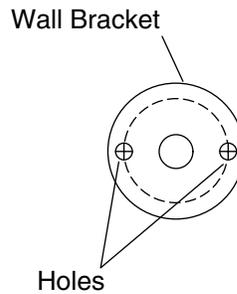

1. Prepare the Site — Anchor Holes

For Multiple-Post Accessories

NOTE: Take into account the length of the accessory components to determine the required distance between the post center points. Consult the "Roughing-In" section for dimensions.

- Mark the vertical and horizontal centerlines for each post. Use a level to ensure that all center points are level.
- Vertically align and mark the holes of each wall plate. Set the wall plate aside.

For Single-Post Accessories

- Mark the vertical and horizontal centerlines for the post. Consult the "Roughing-In" section for dimensions.
- Horizontally align and mark the holes of the wall plate. Set the wall plate aside.


For the P34410 Towel Ring

- Select a drill and 3/8" drill bit appropriate for the wall material you will be drilling through.
- Carefully drill a 3/8" hole at all marked pilot hole locations.

For All Other Accessories


- Select a drill and 5/16" drill bit appropriate for the wall material you will be drilling through.
- Carefully drill a 5/16" hole at all marked pilot hole locations.

Install the Wall Plate

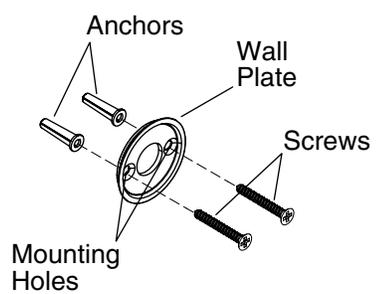

2. Install the Wall Plate

- Carefully tap each wall anchor into the finished surface until flush.
- Secure the wallplate(s) with two screws.

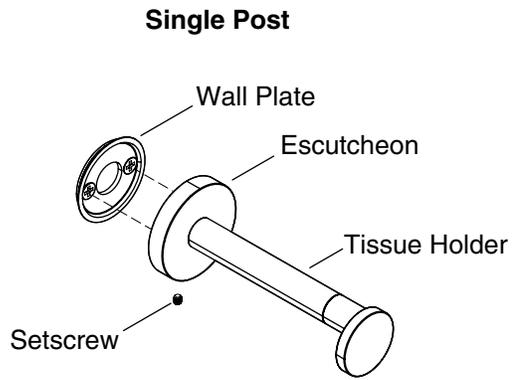


3. Install Single Post Accessories

Tissue Holder, Towel Ring, and Robe Hook

NOTE: All single post accessories install as shown. The tissue holder is shown.


- Partially thread the setscrew into the escutcheon.
- Align the escutcheon over the wall plate.
- Tighten the setscrew. Do not overtighten.

Double Post

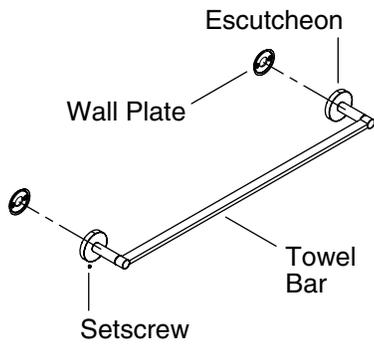

P34401-00

Triple Post

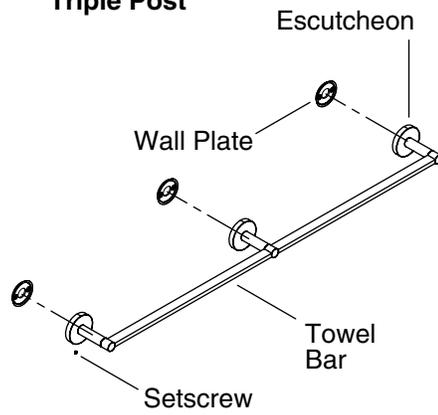

P34403-00

4. Install the Towel Bar

- Partially thread a setscrew into each escutcheon.
- Place the towel bar assembly onto the wall plates.
- Tighten the setscrews. Do not overtighten.

USA/Canada: 1-888-4-KALLISTA

Fax: 1-888-272-3094

kallista.com

KALLISTA

©2011 KALLISTA

1078044-2-A