

Installing the Finish Line



1 Set Drain

Connect the Finish Line Rough-in Fixture to the piping system as you would a typical floor drain or cleanout. Adjust the fixture, by threading the coring sleeve up or down, so the top is flush to the concrete pour level.



2 Pour Concrete

The concrete is poured level with the top of the Rough-in Fixture. The concrete contractor can easily power-trowel the slab and eliminate the need to hand finish around fixtures.




3 Remove Coring Cap

Remove the temporary coring cap by breaking through the protective label, inserting pliers into the slot, and threading the plug out from the coring sleeve.



4 Install Finish Fixture

The finish fixture (head adapter and strainer or cover) can then be installed and adjusted up or down to meet the finished floor covering. For finished concrete floors, permanently secure the finish fixture by applying silicone to the threads.

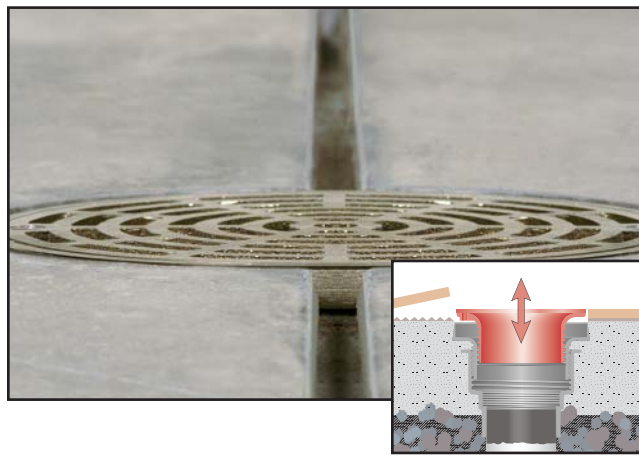

5 Adjust Finish Fixture

Strainers and covers may be set to the proper height by the flooring contractor. Adjustments can be made up to 1¼" higher than the top of the coring sleeve.



A Perfect Finish Every Time!

Achieve a perfect finish to each strainer or cover every time. Threading adjustments allow for the proper height with every installation.