

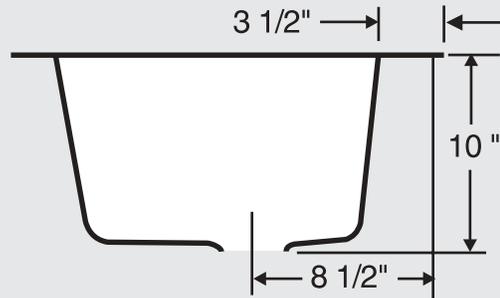


# Installation Procedure for MODEL DIT-S SELF-RIMMING DROP-IN TUB

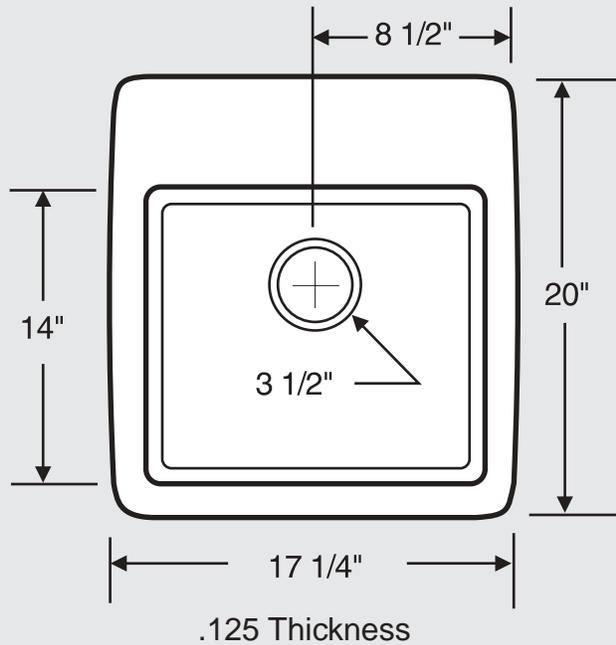

**IMPORTANT**  
It is recommended that a standard 3 1/2" drain assembly (not included) be used to complete the installation of the Swan DIT-S self-rimming drop-in Tub.

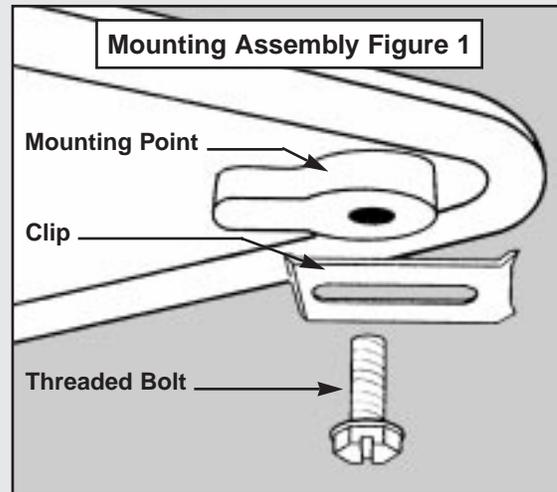

## Read ALL instructions carefully BEFORE starting your installation SELF-RIMMING DROP-IN TUB — CAPACITY 8 GALLONS

1. Measure and cut counter hole for tub insertion 15 7/8" wide x 18 5/8" long. Test fit tub. File any areas which require widening.
2. After test fitting tub, remove from counter hole and install faucet (not included) and drain assembly (not included). A standard 3 1/2" drain assembly is recommended.
3. Caulk along edges of 15 7/8" x 18 5/8" counter hole with 1/8" bead of silicone or latex caulk (not included).
4. Set sink into place and assemble (see Figure 1). Alternate from one threaded bolt to another until all bolts are tight.
5. Some caulking residue may flow from under tub flange. This residue can be wiped clean following instructions on silicone or latex caulking tube.
6. Attach drain waste and faucet plumbing as required.

**NOTE**  
For easy installation of final supply line connections, it is suggested that, if possible, plumbing connection to faucet be made at this point. Plumbing connections to hot or cold supply line can then be made after drop-in tub is secured to counter top.