Fernco Expansion Joint Installation


One piece design for trouble-free vertical pipe installations.





Fernco Expansion Joints will accommodate a maximum of 1-1/2" expansion and 1/2" contraction from a normal position.

- 1. Loosen the stainless steel clamps. Do not remove clamps from Expansion Joint.
- Slide Expansion Joint over the pain spigot ends of the two pipe until it hits the internal stop for positive positioning.
- 3. Tighten clamps to 60 inch-lbs. or torque.
- 4. Support pipe and pressure test* for leaks before concealing joint.

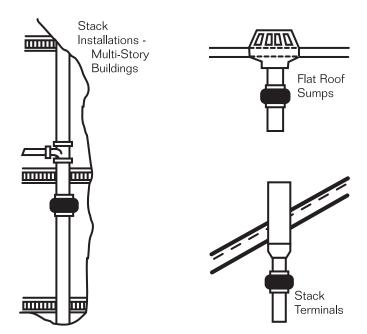



*Maximum test pressure 4.3 PSI (29.6 KPA)