






1524-MC24 Medicine Cabinet Installation

Before Installing Crown to the Cabinet, the Cabinet can mounted as Hinge Right or Hinge Left.

Install Wall Cleat on the wall then mount the Bath Valet.

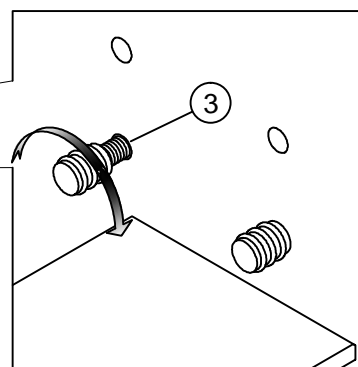

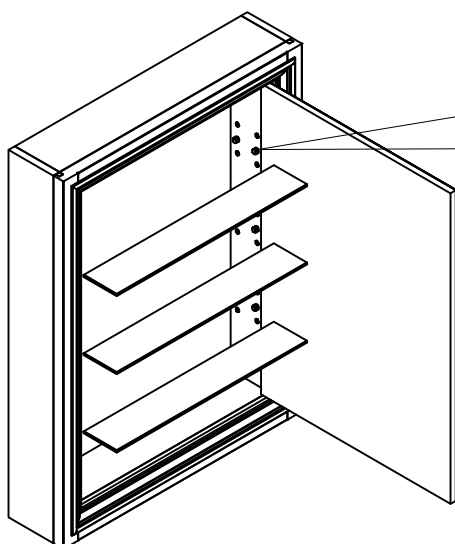

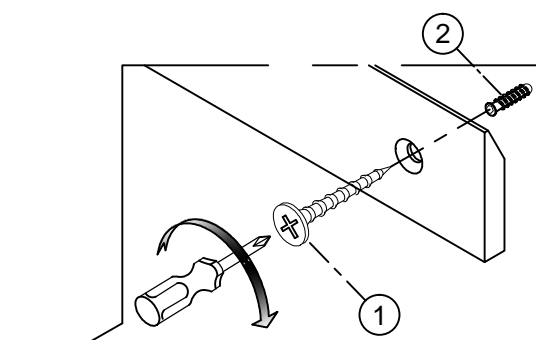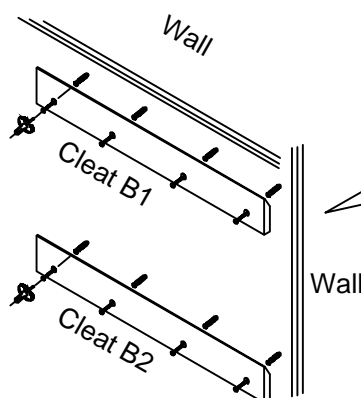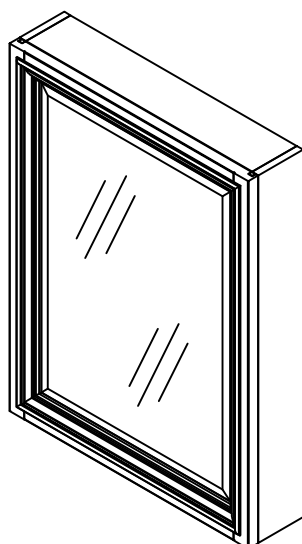



Step 2: Glass shelf installation



Step 1: Install cleat B1 & B2 on the wall then mount the cabinet


It is recommended for the cabinet to be mounted to the studs. If mounting to dry wall use drywall anchors .

Parts Included				Tools And Materials		
1		Ø8x38mm	8pcs			
2		Ø10x28mm	8pcs			
3		Ø9x22mm	12pcs			
				Screwdriver	Tape measure	Pencil



Fairmont Designs highly recommends that you seek a professional installation specialist if you are unsure of installation. Please note: Fairmont Designs is not responsible for any installation error, damages or injuries, actual or consequential resulting from possible printing error in instruction. If door does not operate smoothly, please refer to door / hinge adjustment sheet.

1524-MC24 Medicine Cabinet -Door and Hinge adjustment




Door and Hinge adjustment

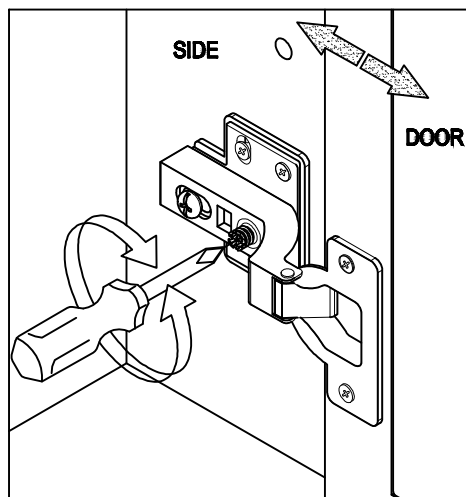

Side - to move the door to the left or the right.
Turn the screw either way on the bottom and top hinge assembly until proper adjustment is achieved.

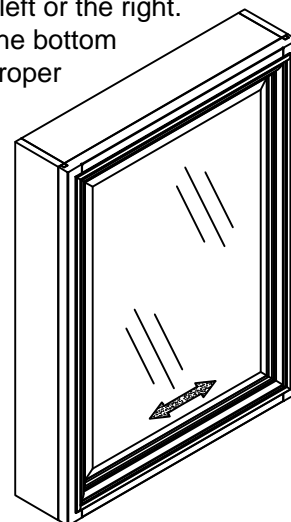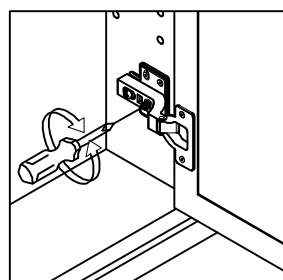

Depth - to move the door in or out-
Loosen the screw on the bottom and top hinge assembly, hold the door in the desired position, then retighten the screws.

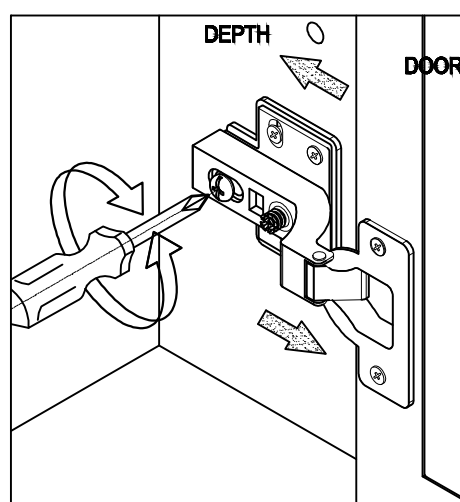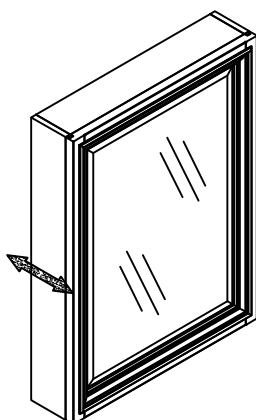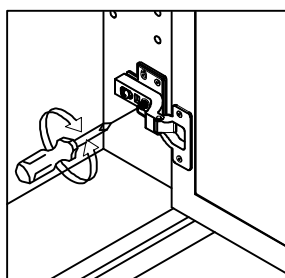

Height - to move the door up and down-
Turn the screw either way on the bottom and top hinge assembly until proper adjustment is achieved.

