


Installation Instructions

4" DRAIN GRID

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

Model No:

NWP 243-401, 243-403, 243-404, 243-405, 243-406

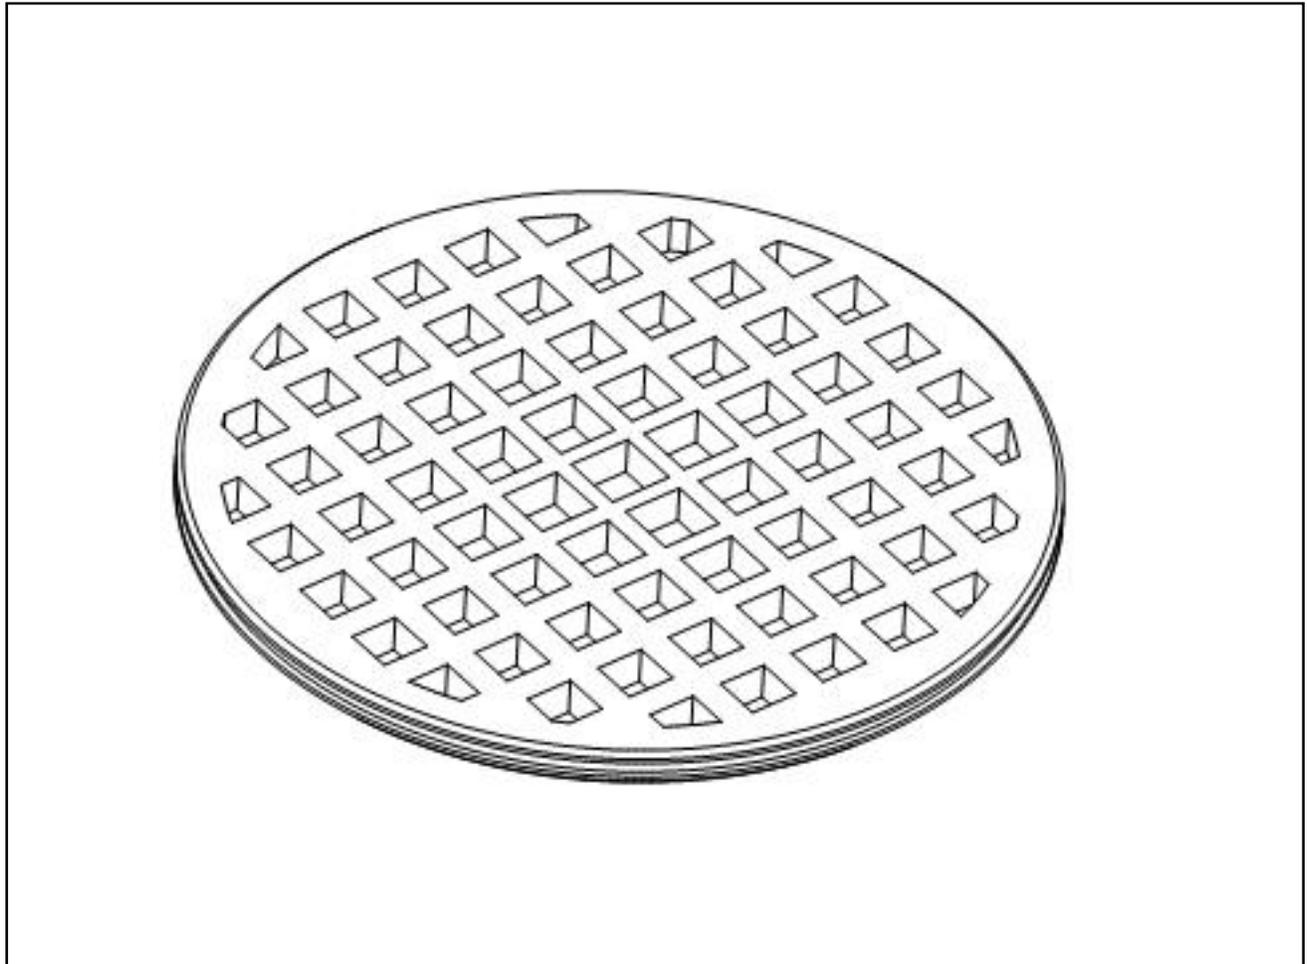

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207

WWW.NEWPORTBRASS.COM

NWP-243-401

10/12/2015

INSTALLATION INSTRUCTIONS

GRID INSTALLATION

1. After completion of finished flooring, remove plastic MUDGUARD [10] by drilling a hole in the center and pull out. (see figure 1)
2. Place decorative DRAIN GRID onto drain THROAT ASSEMBLY [8] (see figure 2).

GRID REMOVAL

1. Use flat screw driver as a lever to lift grid (see figure 3)

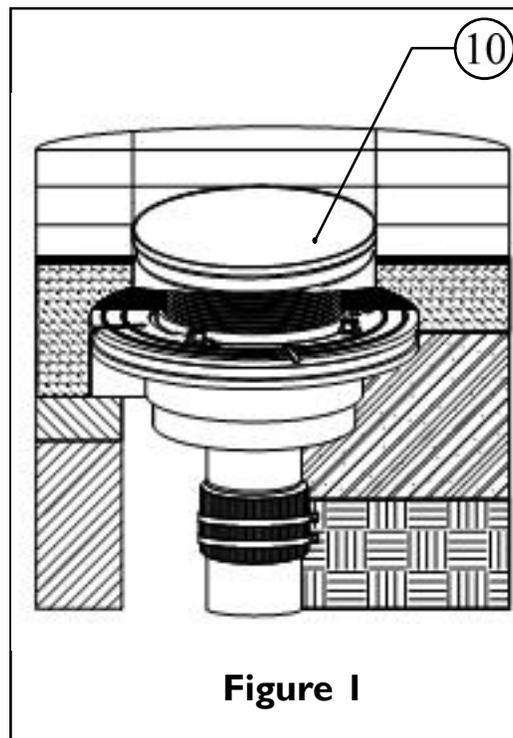


Figure 1

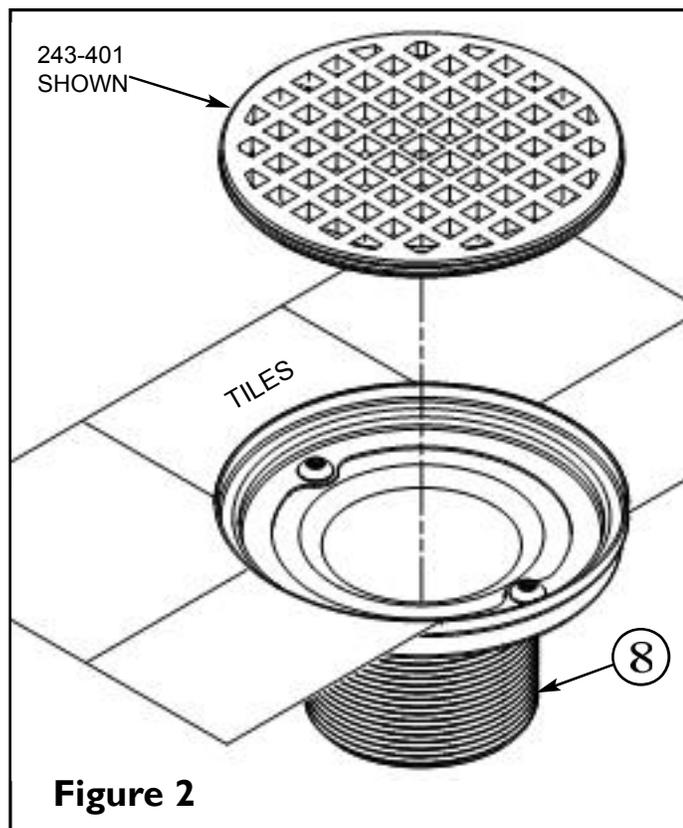


Figure 2

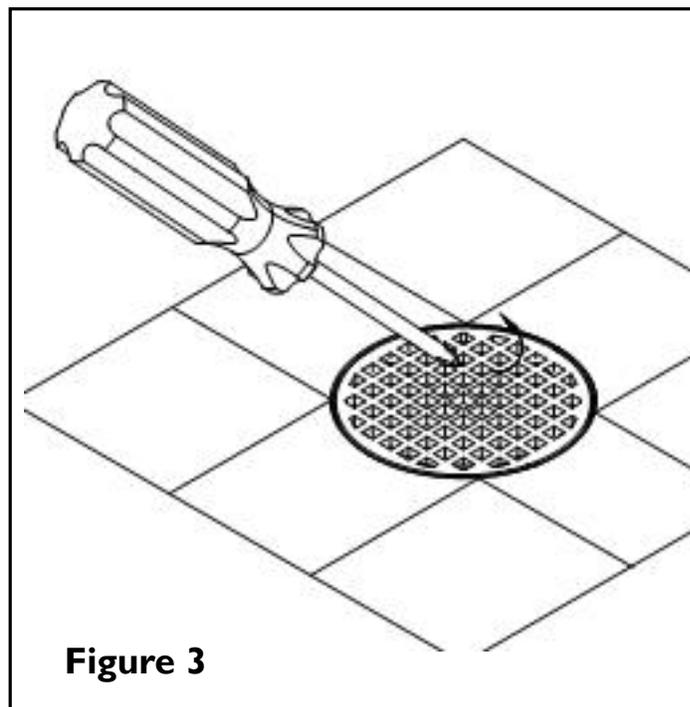


Figure 3